



Display Warmers

Models DW-CN-0370, 0370-R, 0271, 0270-R, 0371

Items 48388, 48389, 48390, 49296, 49297

Instruction Manual



Revised - 03/21/2025



Toll Free: 1-800-465-0234
Fax: 905-607-0234
Email: service@omcan.com
www.omcan.com



Table of Contents

Model DW-CN-0370 / Model DW-CN-0370-R / Model DW-CN-0271
Model DW-CN-0270-R / Model DW-CN-0371

Section	Page
General Information -----	3 - 4
Safety and Warranty -----	4 - 6
Technical Specifications -----	7
Installation -----	7
Operation -----	8
Maintenance -----	8 - 9
Parts Breakdown -----	10 - 19
Electrical Schematics -----	20
Notes -----	21 - 22
Warranty Registration -----	23

General Information

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcan Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, saine d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bon de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés ou cueillis par un tiers transporteur.

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les

General Information

consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre lea y familiarizarse con todas las instrucciones de funcionamiento y seguridad.

Omcan le gustaría darle las gracias por la compra de esta máquina. Es de la mayor importancia para salvar estas instrucciones para futuras consultas. Además, guarda la caja original y el embalaje para el envío del equipo si servicio técnico o devolución de la máquina que se requiere.

Safety and Warranty

SAFETY

- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
- Children being supervised not to play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Safety and Warranty

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't use any kind of pressure water jet for cleaning the device.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken. This device may only be operated in technically proper and safe condition.
- The device should be never left unattended during operation. Keep away children.
- Preserve this manual safely. When passing on/selling the device to a third party, the manuals must be handed over along with the device.
- Every person using the device must act in accordance to the manuals and under consideration of the safety advice.
- The device is to be used indoors only.
- Any technical interventions, as well as assembly and maintenance are to be made by a qualified customer service only.

PREPARATION AND POWER SUPPLY

EXCLUSIVE POWER SOCKET

The power receptacle must have a reliable ground connection.

NO SHARING ON SOCKET

Never let the device share the common socket with other appliances, otherwise the cable becomes hot and fire might be resulted.

PROTECT CABLES

Never break or damage the cables otherwise current leakage and fire might be resulted.

NO WATER FLUSHING

Never give the surface of the device a flush with water or other liquids otherwise current leakage might be resulted.

KEEP AWAY FROM FLAMMABLES AND EXPLOSIVE

Never put any flammable or explosive materials inside the device such as ether, gasoline, alcohol, adhesive and other explosives. Never put dangerous product nearby the device.

CAUTION

Children should be supervised to ensure that they do not play with the appliance.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

RESIDENTIAL USERS: vendor assumes no liability for parts or labor coverage for component failure or other damages resulting from installation in non-commercial or residential applications. The right is reserved to deny shipment for residential usage; if this occurs, you will be notified as soon as possible.

Safety and Warranty

1 YEAR PARTS AND LABOUR WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule an Omcan authorized service technician to repair the equipment locally.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see <https://omcan.com/disclaimer> for complete info.

WARNING:

The packaging components are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!

Technical Specifications

Model	DW-CN-0370	DW-CN-0271	DW-CN-0371	DW-CN-0270-R	DW-CN-0370-R
Item Number	48388	48390	49297	49296	48389
Power	800 W				
Capacity	465 L / 16.42 cu.ft.	445 L / 15.71 cu.ft.	605 L / 21.36 cu.ft.	340 L / 12 cu.ft.	460 L / 16.24 cu.ft.
Exterior Material	Glass / Stainless Steel				
Interior Material	Glass / Stainless Steel / Metal				
Shelf Material	Metal				
Shelf Dimensions	41.5" x 15.2" 1054 x 386mm	29.7" x 15.2" 754 x 386mm	41.5" x 15.2" 1054 x 386mm	29.7" x 15.2" 754 x 386mm	41.5" x 15.2" 1054 x 386mm
Electrical	110V / 60Hz / 1				
Lamp Power	15 W	17 W	15 W	17 W	15 W
Temperature Range	30 - 60°C / 86 - 140°F				
Rated Current	7A				
Internal Dimensions	44.7" x 23.6" x 25.9" 1136 x 600 x 658mm	32.9" x 23.6" x 34" 836 x 600 x 863mm	44.7" x 23.6" x 34" 1136 x 600 x 863mm	32.9" x 23.6" x 25.9" 836 x 600 x 658mm	44.7" x 23.6" x 25.9" 1136 x 600 x 658mm
Net Dimensions	47.2" x 27.1" x 47.2" 1200 x 688 x 1200mm	35.4" x 27.1" x 55.5" 900 x 688 x 1410mm	47.2" x 27.1" x 55.5" 1200 x 688 x 1410mm	35.4" x 27.1" x 47.4" 900 x 688 x 1205mm	47.2" x 27.1" x 47.4" 1200 x 688 x 1205mm
Net Weight	264.6 lbs. / 120 kgs.	240.3 lbs. / 109 kgs.	288.8 lbs. / 131 kgs.	176.4 lbs. / 80 kgs.	209.4 lbs. / 95 kgs.
Packaging Dimensions	50" x 29.7" x 50" 1270 x 755 x 1270mm	38.1" x 29.7" x 58.1" 970 x 755 x 1475mm	50" x 29.7" x 58.1" 1270 x 755 x 1475mm	38.1" x 29.7" x 50" 970 x 755 x 1270mm	50" x 29.7" x 50" 1270 x 755 x 1270mm
Packaging Weight	341.7 lbs. / 155 kgs.	325.2 lbs. / 147.5 kgs.	386.9 lbs. / 175.5 kgs.	253.5 lbs. / 115 kgs.	299.8 lbs. / 136 kgs.

Installation

INSTALLATION

- Place the device on top of an even and safe surface which supports the weight of the device and is not heat sensitive.
- Not at any time should you place the device on an inflammable surface (such as table cloth, carpet, etc).
- You must no position the device near open fireplaces, electric ovens/arc furnaces/electric heaters or other heat sources.
- Position the device in such a way that the plug is easily accessible.

Operation

OPERATION

- Before first use, clean the inner sides and the playing grids with a soft cloth and a mild cleaning agent. Afterwards, dry the device thoroughly.
- Connect the device to a single grounded power socket.

SET TEMPERATURE

1. Press "SET" button, the set temperature is displayed.
Press "UP" or "DOWN" arrows to modify and store the displayed value.
Press "SET" button to exit the adjustment and display inside temperature of the unit. If no more button is pressed within 10 seconds, the display shows the inside temperature of the unit.
 2. Illumination: press the "LIGHT" button, light is on, press again, light is off.
 3. Heating indicator: during heating, the LED is on, when the temperature inside is constant, the LED is off.
- Set the temperature as required for respective foods. You may adjust the desired temperature in the range between 30 - 60°C (86 - 140°F).
 - The temperature inside of the hot display can be read from the front display.
 - Put the foods in appropriate containers before playing them inside the hot display.
 - Some of the device parts become very hot, always use safety gloves when placing or removing foods.
 - The foods are kept warm at the temperature set by you previously.
 - Switch on the inner light when required using the light switch of the device.
 - Disconnect the device from the power socket when the device is not in use.

Maintenance

- Before beginning with repair or cleaning works make sure the device has been disconnected from the power socket and has cooled down.
- Don't use any acid agents and make sure no water ingresses the device.
- To protect yourself from the electric shock, never immerse the device, its cables and the plug in water or other liquids.
- Don't use any kind of pressure water jet for cleaning the device.

CLEANING

- The device should be cleaned regularly.
- Clean the device from the inside and outside with a soft, damp cloth and a mild cleaning agent.
- Clean the placing grids and the housing with a soft, damp cloth and a mild cleaning agent.
- Only use a soft cloth and make sure you never use any kind of abrasive agents or pads which could scratch the surface.
- After the cleaning procedure, you should use a soft and dry cloth to wipe dry.
- Make sure the device has been cleaned properly before storing it in a dry place.

 
Maintenance

MAINTENANCE

- Check the main lead from time to time to ensure it is not damaged in any way. Never use the device if the lead is damaged. If the lead is damaged, it must be replaced by a qualified electrician.
- Only a qualified technician should carry out repairs and maintenance of this device. Do not attempt to repair the device by yourself.
- Appliances must be disconnected from their power supply during cleaning or maintenance and when replacing parts.

Parts Breakdown

Model DW-CN-0370 48388

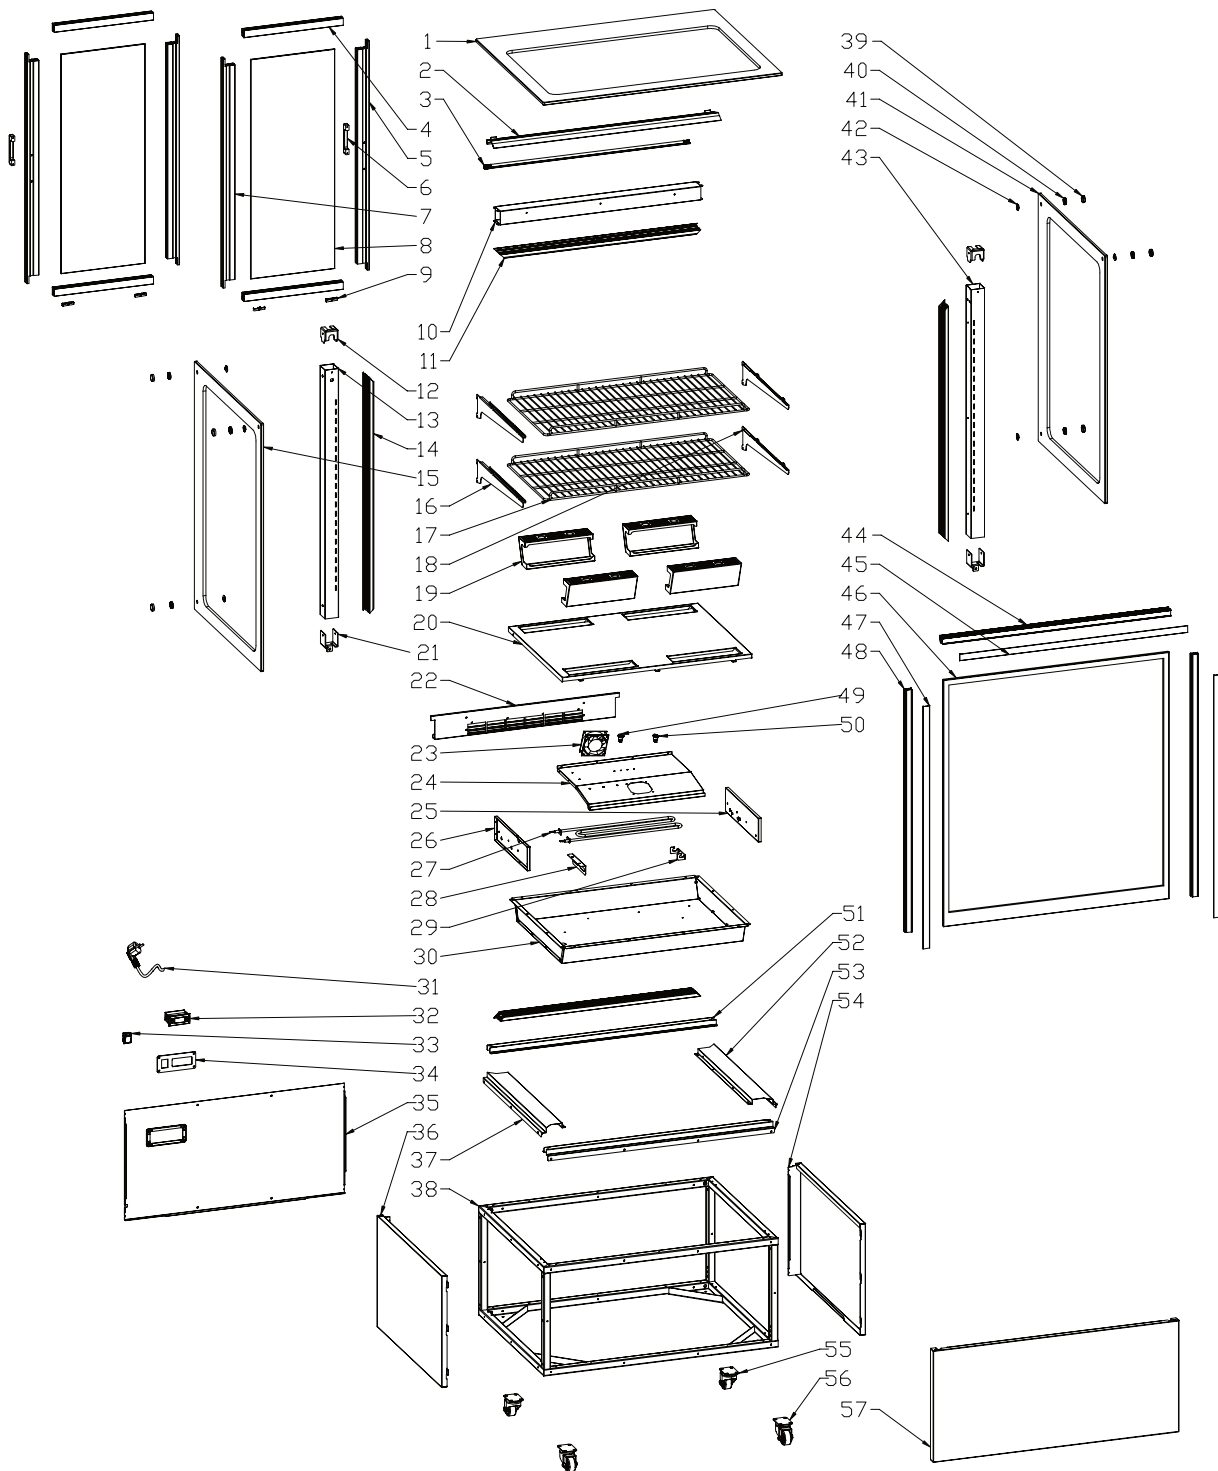


Parts Breakdown

Model DW-CN-0370 48388

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AU533	Upper Glass for 48388	1	AU550	Ventilation Board for 48388	20	AU567	Screw Cover for 48388	39
AU534	Lamp Cover for 48388	2	AU551	Lower Fix Plate for Pillar for 48388	21	AU568	Screw Decorating Gasket for 48388	40
AU535	LED for 48388	3	AU552	Back Panel for Air Vent for 48388	22	AU569	Right Glass for 48388	41
AU536	Upper and Lower Door Frame for 48388	4	AU553	Motor for 48388	23	AU570	Screw Gasket for 48388	42
AU537	Door Frame with Handle for 48388	5	AU554	Air Vent Cover for 48388	24	AU571	Right Pillar for 48388	43
AT838	Handle for 48388	6	AU555	Air Vent Right Panel for 48388	25	AU572	Front and Upper Pillar for 48388	44
AU538	Side Door Frame for 48388	7	AU556	Air Vent Left Panel for 48388	26	AU573	Upper Decorating Panel for 48388	45
AU539	Glass Door for 48388	8	AU557	Heating Element for 48388	27	AU574	Front Glass for 48388	46
AT837	Pulley for 48388	9	AU558	Heating Element Hanger for 48388	28	AU575	Side Decorating Panel for Front for 48388	47
AU540	Back and Upper Pillar for 48388	10	AU559	Heating Element Hanger A for 48388	29	AU576	Front Glass Frame for 48388	48
AU541	Upper and Lower Door Slot for 48388	11	AU560	Air Vent Bottom Case for 48388	30	AU514	Temperature Controller for 48388	49
AU542	Fix Plate for Upper Pillar for 48388	12	AU561	Rubber Power Line for 48388	31	AU515	Temperature Controller for 48388	50
AU543	Left Pillar for 48388	13	AU562	Digital Thermostat for 48388	32	AU577	Back Decorating Panel for 48388	51
AU544	Left and Right Door Slot for 48388	14	AL834	Switch for 48388	33	AU578	Right Decorating Panel for 48388	52
AU545	Left Glass for 48388	15	AL820	Control Panel for 48388	34	AU579	Front Decorating Panel for 48388	53
AU546	left Board of Shelf for 48388	16	AU563	Back Grill for 48388	35	AU580	Right Grill for 48388	54
AU547	Shelf for 48388	17	AU564	Left Grill for 48388	36	AU581	Casters for 48388	55
AU548	Right Board of Shelf for 48388	18	AU565	Left Decorating Panel for 48388	37	AL824	Casters for 48388	56
AU549	Box for 48388	19	AU566	Base Components for 48388	38	AU582	Front Grill for 48388	57

Parts Breakdown

 Model DW-CN-0370-R 48389

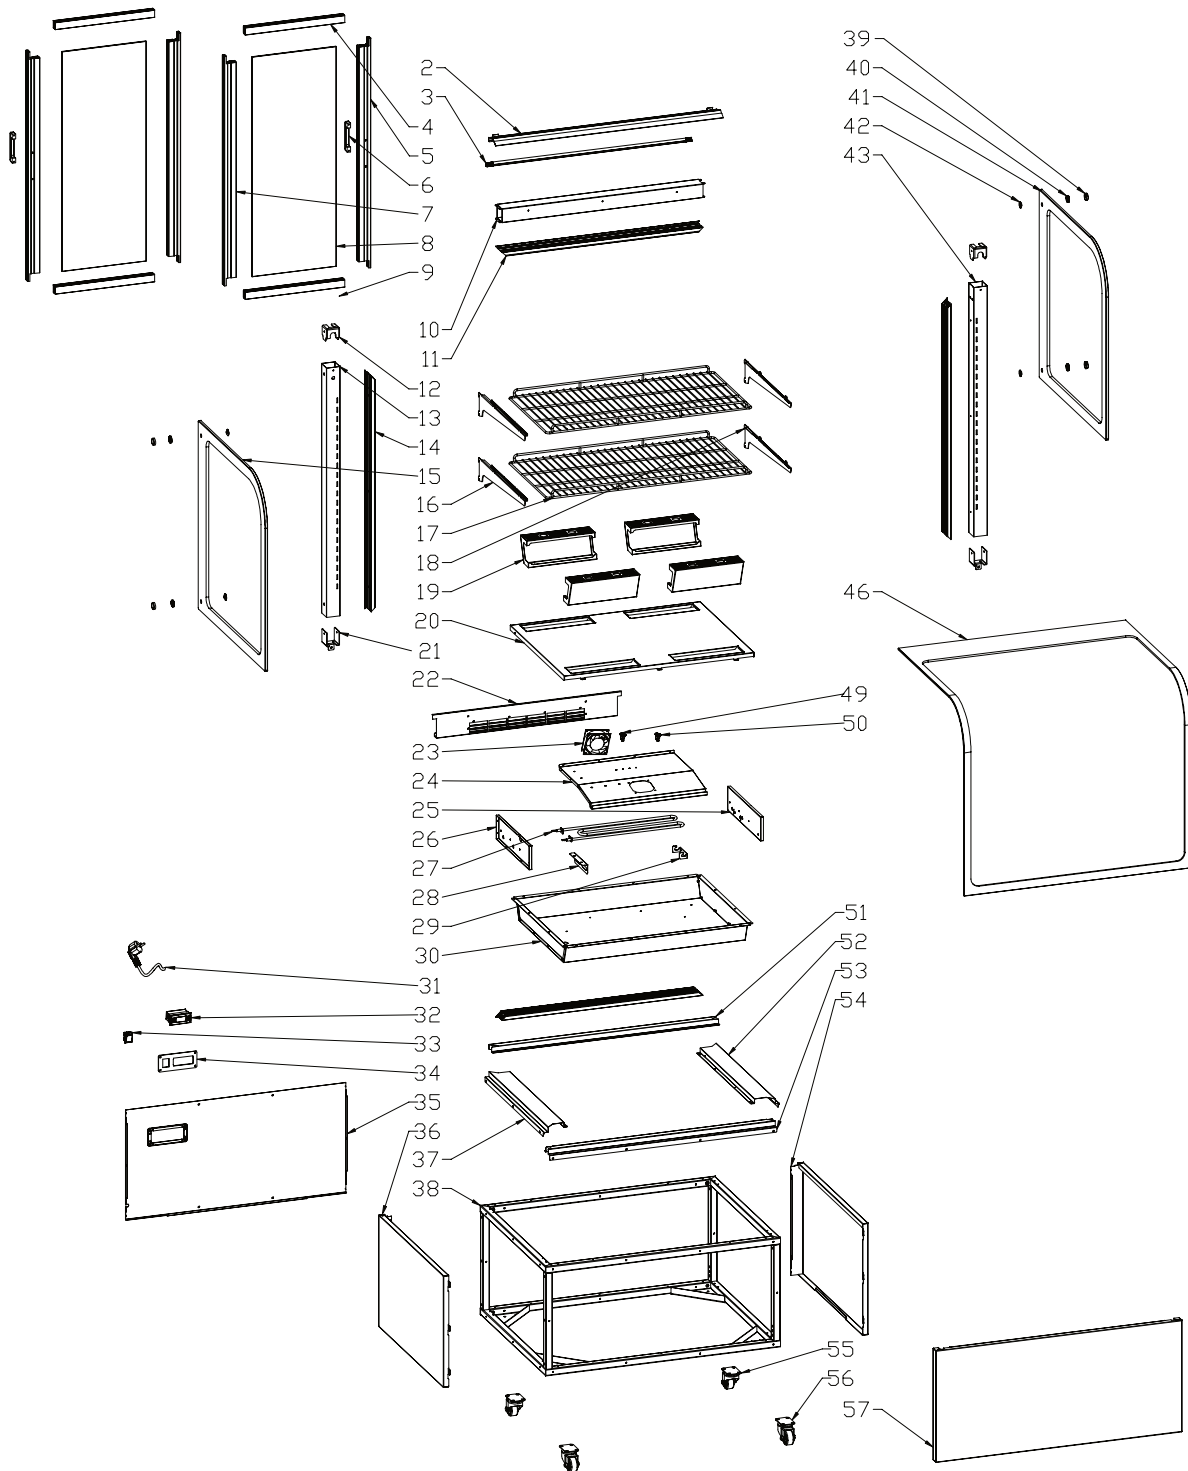


Parts Breakdown

Model DW-CN-0370-R 48389

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AU534	Lamp Cover for 48389	2	AU550	Ventilation Board for 48389	20	AU566	Base Components for 48389	38
AU535	LED for 48389	3	AU551	Lower Fix Plate for Pillar for 48389	21	AU567	Screw Cover for 48389	39
AU536	Upper and Lower Door Frame for 48389	4	AU552	Back Panel for Air Vent for 48389	22	AU568	Screw Decorating Gasket for 48389	40
AU537	Door Frame with Handle for 48389	5	AU553	Motor for 48389	23	AU584	Right Glass for 48389	41
AT838	Handle for 48389	6	AU554	Air Vent Cover for 48389	24	AU570	Screw Gasket for 48389	42
AU538	Side Door Frame for 48389	7	AU555	Air Vent Right Panel for 48389	25	AU571	Right Pillar for 48389	43
AU539	Glass Door for 48389	8	AU556	Air Vent Left Panel for 48389	26	AU585	Front Glass for 48389	46
AT837	Pulley for 48389	9	AU557	Heating Element for 48389	27	AU514	Temperature Controller for 48389	49
AU540	Back and Upper Pillar for 48389	10	AU558	Heating Element Hanger for 48389	28	AU515	Temperature Controller for 48389	50
AU541	Upper and Lower Door Slot for 48389	11	AU559	Heating Element Hanger A for 48389	29	AU577	Back Decorating Panel for 48389	51
AU542	Fix Plate for Upper Pillar for 48389	12	AU560	Air Vent Bottom Case for 48389	30	AU578	Right Decorating Panel for 48389	52
AU543	Left Pillar for 48389	13	AU561	Rubber Power Line for 48389	31	AU586	Front Decorating Panel for 48389	53
AU544	Left and Right Door Slot for 48389	14	AU562	Digital Thermostat for 48389	32	AU580	Right Grill for 48389	54
AU583	Left Glass for 48389	15	AL834	Switch for 48389	33	AU581	Casters for 48389	55
AU546	Left Board of Shelf for 48389	16	AL820	Control Panel for 48389	34	AL824	Casters for 48389	56
AU547	Shelf for 48389	17	AU563	Back Grill for 48389	35	AU582	Front Grill for 48389	57
AU548	Right Board of Shelf for 48389	18	AU564	Left Grill for 48389	36			
AU549	Box for 48389	19	AU565	Left Decorating Panel for 48389	37			

Parts Breakdown

 Model DW-CN-0271 48390

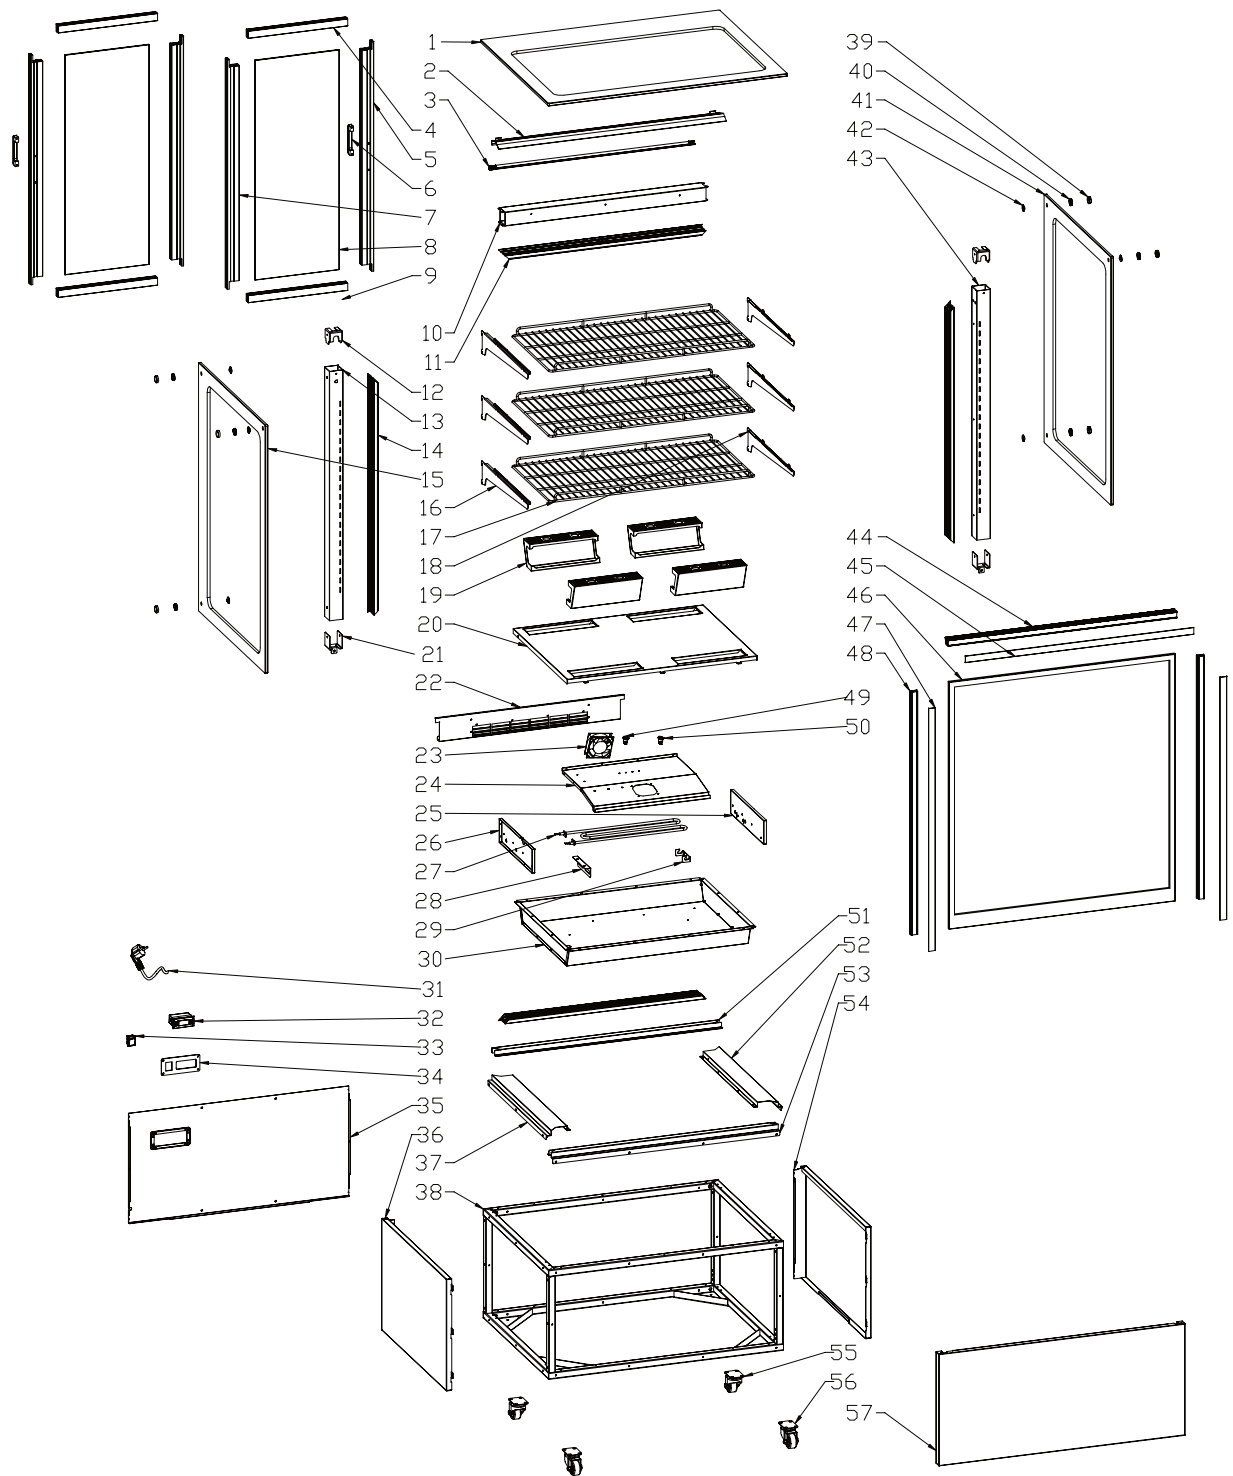


Parts Breakdown

Model DW-CN-0271 48390

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AU587	Upper Glass for 48390	1	AU600	Ventilation Board for 48390	20	AU567	Screw Cover for 48390	39
AU588	Lamp Cover for 48390	2	AU551	Lower Fix Plate for Pillar for 48390	21	AU568	Screw Decorating Gasket for 48390	40
AU589	LED for 48390	3	AU601	Back Panel for Air Vent for 48390	22	AU605	Right Glass for 48390	41
AU590	Upper and Lower Door Frame for 48390	4	AU553	Motor for 48390	23	AU570	Screw Gasket for 48390	42
AU591	Door Frame with Handle for 48390	5	AU554	Air Vent Cover for 48390	24	AU606	Right Pillar for 48390	43
AT838	Handle for 48390	6	AU555	Air Vent Right Panel for 48390	25	AU607	Front and Upper Pillar for 48390	44
AU592	Side Door Frame for 48390	7	AU556	Air Vent Left Panel for 48390	26	AU608	Upper Decorating Panel for Front Glass for 48390	45
AU593	Glass Door for 48390	8	AU557	Heating Element for 48390	27	AU609	Front Glass for 48390	46
AT837	Pulley for 48390	9	AU558	Heating Element Hanger for 48390	28	AU610	Side Decorating Panel for Front Glass for 48390	47
AU594	Back and Upper Pillar for 48390	10	AU559	Heating Element Hanger A for 48390	29	AU611	Front Glass Frame for 48390	48
AU595	Upper and Lower Door Slot for 48390	11	AU602	Air Vent Bottom Case for 48390	30	AU514	Temperature Controller for 48390	49
AU542	Fix Plate for Upper Pillar for 48390	12	AU561	Rubber Power Line for 48390	31	AU515	Temperature Controller for 48390	50
AU596	Left Pillar for 48390	13	AU562	Digital Thermostat for 48390	32	AU612	Back Decorating Panel for 48390	51
AU597	Left and Right Door Slot for 48390	14	AL834	Switch for 48390	33	AU578	Right Decorating Panel for 48390	52
AU598	Left Glass for 48390	15	AL820	Control Panel for 48390	34	AU613	Front Decorating Panel for 48390	53
AU546	Left Board of Shelf for 48390	16	AU603	Back Grill for 48390	35	AU580	Right Grill for 48390	54
AU599	Shelf for 48390	17	AU564	Left Grill for 48390	36	AU614	Casters for 48390	55
AU548	Right Board of Shelf for 48390	18	AU565	Left Decorating Panel for 48390	37	AU615	Casters for 48390	56
AU549	Box for 48390	19	AU604	Base Components for 48390	38	AU616	Front Grill for 48390	57

Parts Breakdown

 Model DW-CN-0270-R 49296

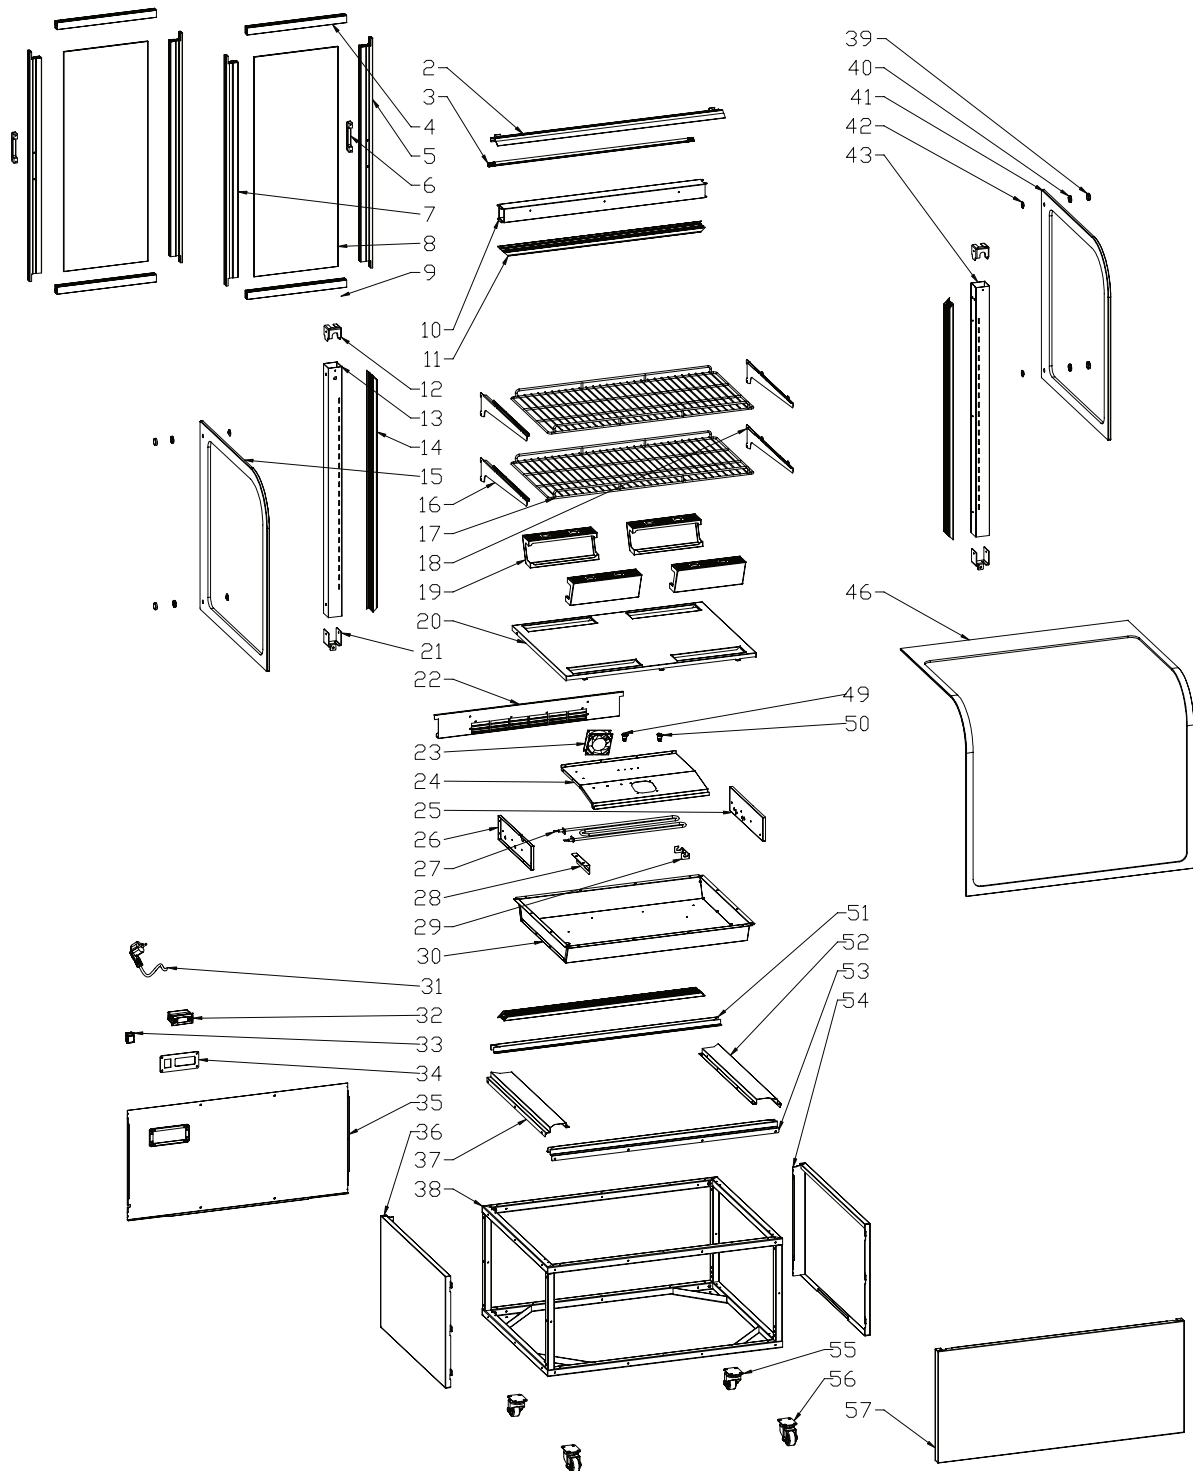


Parts Breakdown

Model DW-CN-0270-R 49296

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AU588	Lamp Cover for 49296	2	AU600	Ventilation Board for 49296	20	AU619	Base Components for 49296	38
AU589	LED for 49296	3	AU551	Lower Fix Plate for Pillar for 49296	21	AU567	Screw Cover for 49296	39
AU590	Upper and Lower Door Frame for 49296	4	AU601	Back Panel for Air Vent for 49296	22	AU568	Screw Decorating Gasket for 49296	40
AU537	Door Frame with Handle for 49296	5	AU553	Motor for 49296	23	AU584	Right Glass for 49296	41
AT838	Handle for 49296	6	AU554	Air Vent Cover for 49296	24	AU570	Screw Gasket for 49296	42
AU538	Side Door Frame for 49296	7	AU555	Air Vent Right Panel for 49296	25	AU571	Right Pillar for 49296	43
AU617	Glass Door for 49296	8	AU556	Air Vent Left Panel for 49296	26	AU620	Front Glass for 49296	46
AT837	Pulley for 49296	9	AU557	Heating Element for 49296	27	AU514	Temperature Controller for 49296	49
AU594	Back and Upper Pillar for 49296	10	AU558	Heating Element Hanger for 49296	28	AU515	Temperature Controller for 49296	50
AU595	Upper and Lower Door Slot for 49296	11	AU559	Heating Element Hanger A for 49296	29	AU612	Back Decorating Panel for 49296	51
AU542	Fix Plate for Upper Pillar for 49296	12	AU602	Air Vent Bottom Case for 49296	30	AU578	Right Decorating Panel for 49296	52
AU543	Left Pillar for 49296	13	AU561	Rubber Power Line for 49296	31	AU621	Front Decorating Panel for 49296	53
AU544	Left and Right Door Slot for 49296	14	AU562	Digital Thermostat for 49296	32	AU580	Right Grill for 49296	54
AU583	Left Glass for 49296	15	AL834	Switch for 49296	33	AU581	Casters for 49296	55
AU546	Left Board of Shelf for 49296	16	AL820	Control Panel for 49296	34	AL824	Casters for 49296	56
AU599	Shelf for 49296	17	AU618	Back Grill for 49296	35	AU622	Front Grill for 49296	57
AU548	Right Board of Shelf for 49296	18	AU564	Left Grill for 49296	36			
AU549	Box for 49296	19	AU565	Left Decorating Panel for 49296	37			

Parts Breakdown

 Model DW-CN-0371 49297

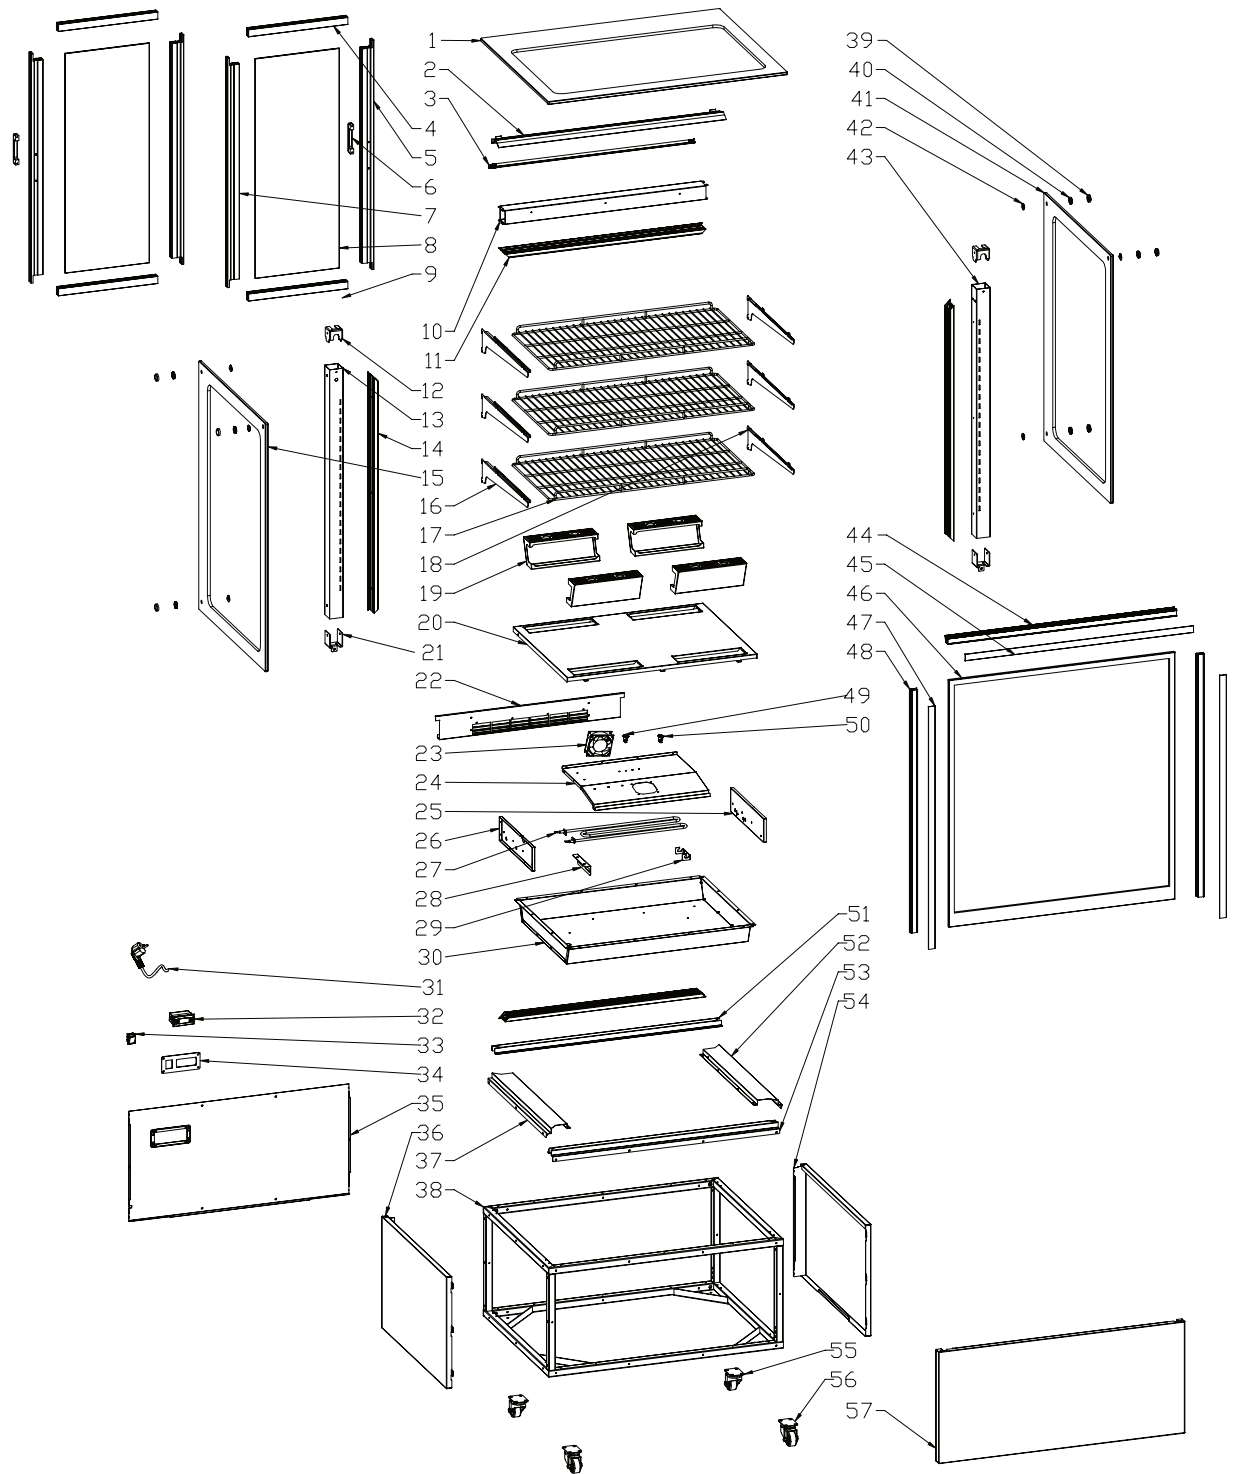

Parts Breakdown

Model DW-CN-0371 49297

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AU533	Upper Glass for 49297	1	AU550	Ventilation Board for 49297	20	AU567	Screw Cover for 49297	39
AU534	Lamp Cover for 49297	2	AU551	Lower Fix Plate for Pillar for 49297	21	AU568	Screw Decorating Gasket for 49297	40
AU535	LED for 49297	3	AU552	Back Panel for Air Vent for 49297	22	AU605	Right Glass for 49297	41
AU536	Upper and Lower Door Frame for 49297	4	AU553	Motor for 49297	23	AU570	Screw Gasket for 49297	42
AU591	Door Frame with Handle for 49297	5	AU554	Air Vent Cover for 49297	24	AU606	Right Pillar for 49297	43
AT838	Handle for 49297	6	AU555	Air Vent Right Panel for 49297	25	AU572	Front and Upper Pillar for 49297	44
AU592	Side Door Frame for 49297	7	AU556	Air Vent Left Panel for 49297	26	AU573	Upper Decorating Panel for 49297	45
AU623	Glass Door for 49297	8	AU557	Heating Element for 49297	27	AU625	Front Glass for 49297	46
AT837	Pulley for 49297	9	AU558	Heating Element Hanger for 49297	28	AU610	Side Decorating Panel for Front Glass for 49297	47
AU540	Back and Upper Pillar for 49297	10	AU559	Heating Element Hanger A for 49297	29	AU611	Front Glass Frame for 49297	48
AU541	Upper and Lower Door Slot for 49297	11	AU560	Air Vent Bottom Case for 49297	30	AU514	Temperature Controller for 49297	49
AU542	Fix Plate for Upper Pillar for 49297	12	AU561	Rubber Power Line for 49297	31	AU515	Temperature Controller for 49297	50
AU596	Left Pillar for 49297	13	AU562	Digital Thermostat for 49297	32	AU577	Back Decorating Panel for 49297	51
AU597	Left and Right Door Slot for 49297	14	AL834	Switch for 49297	33	AU578	Right Decorating Panel for 49297	52
AU598	Left Glass for 49297	15	AL820	Control Panel for 49297	34	AU579	Front Decorating Panel for 49297	53
AU546	Left Board of Shelf for 49297	16	AU563	Back Grill for 49297	35	AU580	Right Grill for 49297	54
AU547	Shelf for 49297	17	AU564	Left Grill for 49297	36	AU614	Casters for 49297	55
AU548	Right Board of Shelf for 49297	18	AU565	Left Decorating Panel for 49297	37	AU615	Casters for 49297	56
AU549	Box for 49297	19	AU624	Base Components for 49297	38	AU626	Front Grill for 49297	57

Electrical Schematics

 
 
Model DW-CN-0370 48388

Model DW-CN-0370-R 48389

Model DW-CN-0271 48390

Model DW-CN-0270-R 49296

Model DW-CN-0371 49297

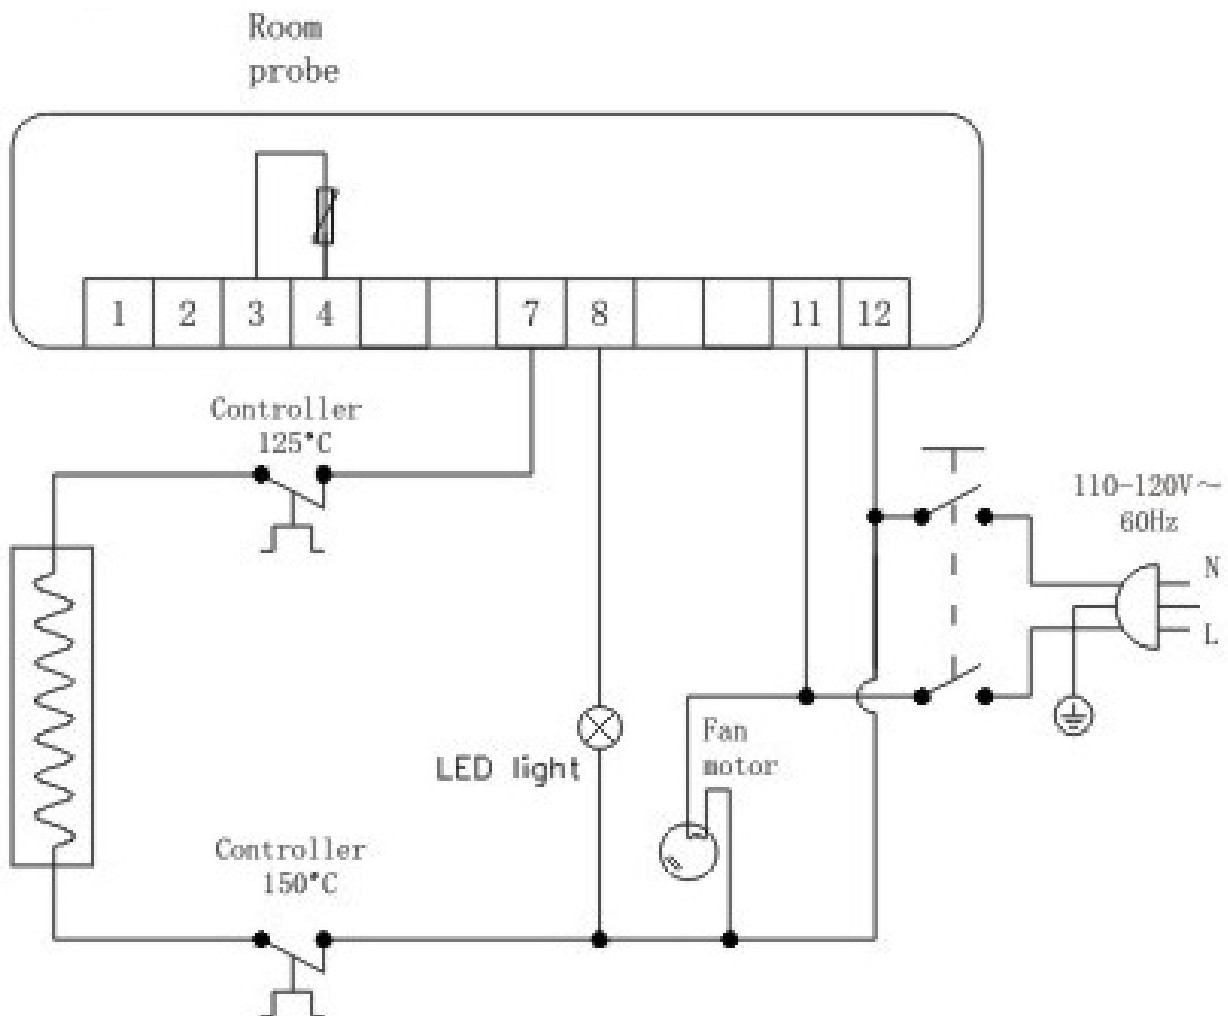

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.



Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

<https://omcan.com/warranty-registration/>

For mailing in Canada

Pour postale au Canada

Por correo en Canadá

OMCAN

PRODUCT WARRANTY REGISTRATION

3115 Pepper Mill Court,
Mississauga, Ontario
Canada, L5L 4X5

For mailing in the US

Pour diffusion aux États-Unis

Por correo en los EE.UU.

OMCAN

PRODUCT WARRANTY REGISTRATION

4450 Witmer Industrial Estates, Unit 4,
Niagara Falls, New York
USA, 14305

or email to: service@omcan.com



Purchaser's Information

Name: _____

Address: _____

City: _____ Province or State: _____ Postal or Zip: _____

Country: _____

Dealer from which Purchased: _____

Dealer City: _____ Dealer Province or State: _____

Invoice: _____

Model Name: _____ Model Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____

Would you like to extend the warranty? ☐ Yes ☐ No

Company Name: _____

Telephone: _____

Email Address: _____

Type of Company:

☐ Restaurant ☐ Bakery ☐ Deli

☐ Butcher ☐ Supermarket ☐ Caterer

☐ Institution (*specify*): _____

☐ Other (*specify*): _____

Serial Number: _____

Date of Installation (MM/DD/YYYY): _____

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 6,500 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 6500 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 6,500 productos con origen a nivel mundial.

