



Food Warmers

Models FW-CN-0002-V, 0004-V, 0004-H

Items 48548, 48172, 48173

Instruction Manual



Revised - 04/04/2025



Toll Free: 1-800-465-0234
Fax: 905-607-0234
Email: service@omcan.com
www.omcan.com



Table of Contents

Model FW-CN-0002-V / Model FW-CN-0004-V / Model FW-CN-0004-H

Section	Page
General Information -----	3 - 4
Safety and Warranty -----	4 - 6
Technical Specifications -----	6
Installation -----	6 - 7
Operation -----	7 - 8
Maintenance -----	8 - 9
Parts Breakdown -----	10 - 15
Electrical Schematics -----	16 - 17
Notes -----	18
Warranty Registration -----	19

General Information

Omcman Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcman and Omcman Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcman shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcman within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcman has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcman would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcman Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcman et Omcman Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, saine d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcman veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bon de livraison avant d'accepter la livraison et contactez Omcman dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcman n'a aucun droit de recours pour les produits endommagés qui ont été expédiés ou cueillis par un tiers transporteur.

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les

General Information

consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre leer y familiarizarse con todas las instrucciones de operación y seguridad.

Omcan quisiera darles las gracias por la compra de esta máquina. Es de la máxima importancia para guardar estas instrucciones para referencias en el futuro. También guarde la caja original y el embalaje para envío del equipo si el mantenimiento o la devolución de la máquina es necesaria.

Safety and Warranty

SAFETY

- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children being supervised not to play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Safety and Warranty

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't use any kind of pressure water jet for cleaning the device.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken. This device may only be operated in technically proper and safe condition.
- The device should be never left unattended during operation. Keep away children.
- Preserve this manual safely. When passing on/selling the device to a third party, the manuals must be handed over along with the device.
- Every person using the device must act in accordance to the manuals and under consideration of the safety advice.
- The device is to be used indoors only.
- Any technical interventions, as well as assembly and maintenance are to be made by a qualified customer service only.

PREPARATION AND POWER SUPPLY

EXCLUSIVE POWER SOCKET

The power receptacle must have a reliable earth connection.

NO SHARE ON SOCKET

Never let the device share the common socket with other appliance, otherwise the cable becomes hot and fire might be resulted.

PROTECT CABLES

Never break or damage the cables otherwise current leakage and fire might be resulted.

NO WATER FLUSHING

Never give the device surface a flush otherwise current leakage might be resulted.

PREVENT FROM FLAMMABLES AND EXPLOSIVE

Never put any flammable or explosive inside the device such as ether, gasoline, alcohol, adhesive and explosive. Never put dangerous product nearby the device.

RESIDENTIAL USERS: vendor assumes no liability for parts or labor coverage for component failure or other damages resulting from installation in non-commercial or residential applications. The right is reserved to deny shipment for residential usage; if this occurs, you will be notified as soon as possible.

1 YEAR PARTS AND LABOUR BENCH WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule a drop off to either an Omcan authorized service depot in the area, or to an Omcan Service warehouse to repair the equipment.

Safety and Warranty

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see <https://omcan.com/disclaimer> for complete info.

WARNING:

The packaging components (cardboard, polyethylene, and others) are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!

Technical Specifications

Model	FW-CN-0002-V	FW-CN-0004-V	FW-CN-0004-H
Item Number	48548	48172	48173
Type	Vertical		Horizontal
Number of Compartments	2	4	
Electrical	220V / 60Hz / 1		
Net Weight	101.4 lbs. / 46 kgs.	173.1 lbs. / 78.5 kgs.	181.9 lbs. / 82.5 kgs.
Packaging Weight	127.9 lbs. / 58 kgs.	198.4 lbs. / 90 kgs.	220.5 lbs. / 100 kgs.
Tray Dimensions (DWH)	24.8" x 6.4" x 2.4" / 629 x 163 x 62mm		
Net Dimensions (WDH)	20.5" x 24.7" x 17.2" 521 x 627 x 436mm	20.5" x 24.7" x 29.1" 521 x 627 x 738mm	37.1" x 24.7" x 17.2" 942 x 627 x 436mm
Packaging Dimensions	24.8" x 28.9" x 23.5" 631 x 733 x 597mm	24.8" x 28.9" x 35.4" 631 x 733 x 899mm	41.4" x 28.9" x 23.5" 1052 x 733 x 597mm

Installation

- Place the device on top of an even and safe surface which supports the weight of the device and is not heat sensitive.
- Not at any time should you place the device on an inflammable surface (such as table cloth, carpet, etc).
- You must no position the device near open fireplaces, electric ovens/arc furnaces/electric heaters or other

Installation

heat sources.

- Position the device in such a way that the plug is easily accessible.

Operation

- Before first use, clean the inner sides and placing grids with a soft cloth and a mild cleaning agent. Afterwards, dry the device thoroughly.
- Connect the device to a single grounded power socket.
- Set the temperature as required for respective foods. You may adjust the desired temperature in the range between 30-100°C (86-212°F).

ON/OFF

When we open the unit, the display screen fully displays for 5s, on the left, from top to bottom, it displays "Sr", "0016", "Sr", "0016" respectively and there comes music with voice (WELCOME). In TIME display, it displays "w105", it returns to standby mode automatically after 5s and there is "----" in TIME display. When the unit is ON, the fan motor works all the time and only when the unit is OFF, the fan motor stops working.

ALARM TIME

When the unit is ON, press "TIME", it displays "ti: " in TIME display; then press one button from 1 - 8, it displays the default alarm time value for corresponding window. Under this condition, press "SET" and we can change the alarm time. When it is flickering in TIME display, press "Up" or "Down", the alarm time value will increase 1 minute or decrease 1 minute. Press "END" or no operations for 5s, it returns back to previous menu.

PRE-ALARM

When the unit is ON, press "PreALM", it displays "Pr: --" in TIME display; then press one button from 1 - 8, it displays the default pre-alarm time value for corresponding window. Under this condition, press "SET" and then we can press "Up" or "Down" to increase 1 minute or decrease 1 minute on pre-alarm time value.

TEMPERATURE CHECKING AND SETTING

When the unit is ON, it displays real time temperature values for all four layers. Press "TEMP", the first layer display screen displays the first layer default temperature; press "CHANNEL", the next layer default temperature displays. Press "SET", we can change this layers temperature, press "Up" or "Down" to increase 1°C or decrease 1°C on default temperature.

ENERGY-SAVING TEMPERATURE CHECKING OR RE-SETTING

When the unit is ON, press "ECO", the temperature unit °C or °F on the first layer is flickering, the energy-saving indicator lamp is on after it reaches energy saving temperature. Press "CHANNEL", the next layer displays. Press "SET", we can change each layer's energy-saving temperature, press "Up" or "Down" to increase 1°C or decrease 1°C on energy saving temperature.

°C AND °F INTERCHANGEABLE

The temperature unit °C or °F can be changed by pressing "°C/°F" under all conditions.

Operation

VOLUME CHECKING AND ADJUSTING

When the unit is ON, press "VOL-" or "VOL+", "V1: XX" is flickering in TIME display, press "VOL-" or "VOL+", the volume can be 1 less or 1 more.

TIME COUNTING MODE CHECKING AND ADJUSTING

When the unit is in normal standby mode, press one button from 1 - 8, it is counting up mode if it displays "UP-" in TIME display and it is counting down mode if it displays "DOWN". When the unit is in standby mode, press "Count" and one button from 1-8 together, the time counting model of that window will be changed to counting up model and it displays "UP--" in TIME display. Otherwise, press "Cnt.DN" and one button from 1-8 together, the time counting mode will be changed to counting down mode and it displays "DOWN" in TIME display.

OPERATION INSTRUCTIONS

There are 8 time windows with "START/STOP" on front side and back side respectively. When the window is in standby mode, press "START/STOP", it starts counting and the respective indicator lamp flickers (counting up mode - GREEN, counting down mode - RED). If the displayed time is more than 60 minutes, it displays "hour : minute"; if the displayed time is in second, then it displays only seconds.

When it reaches pre-alarm time, the indicator lamp turns YELLOW and it is flickering with the pre-alarm voice. When it reaches alarm time or pre-alarm time, the alarm can be cancelled by pressing "END" or turn off the switch. But it does not mean that the working mode is cancelled. Only by pressing "START/STOP", it will return to standby mode and it displays the time of last working mode. When it reaches alarm time but not press "END" or "START/STOP", the alarm voice will keep on.

CODE FOR ABNORMAL CONDITIONS

If there is open circuit or short circuit on any of the I, II, III, IV layer, the codes E1, E2, E3, E4 will be displayed on corresponding layer. The heater will stop until the problem is solved.

- Some of the device parts become very hot, always use safety gloves when placing or removing foods.
- The foods are kept warm at the temperature set by you previously.
- Disconnect the device from the power socket when not in use.

Maintenance

CLEANING AND MAINTENANCE

- Before beginning with repairs or cleaning, make sure the device has been disconnected from the power socket and has cooled down.
- Don't use any acidic agents and make sure no water enters the machine.
- To protect yourself from electric shocks, never immerse the device, its cables and plug in water or other liquids.
- Do not use any kind of pressure water jet for cleaning the device.

Maintenance

CLEANING


- The device should be cleaned regularly.
- Clean the device from the inside and outside with a soft, damp cloth and a mild cleaning agent.
- Clean the placing grids and the housing with a soft, damp cloth and a mild cleaning agent.
- Only use a soft cloth and make sure you never use any kind of abrasive agents or pads which could scratch the surface.
- After the cleaning procedure, you should use a soft and dry cloth to wipe dry and polish the surface.
- Make sure the device has been cleaned properly before storing it in a dry place.

MAINTENANCE

- Check the mains lead from time to time to ensure it is not damaged in any way. Never use the device if the lead is damaged. If the lead is damaged, it must be replaced by a qualified electrician.
- Only a qualified technician should carry out repairs and maintenance of the device. Do not attempt to repair the device by yourself.
- Appliances must be disconnected from their power supply during cleaning or maintenance and when replacing parts.

Parts Breakdown

Model FW-CN-0002-V 48548

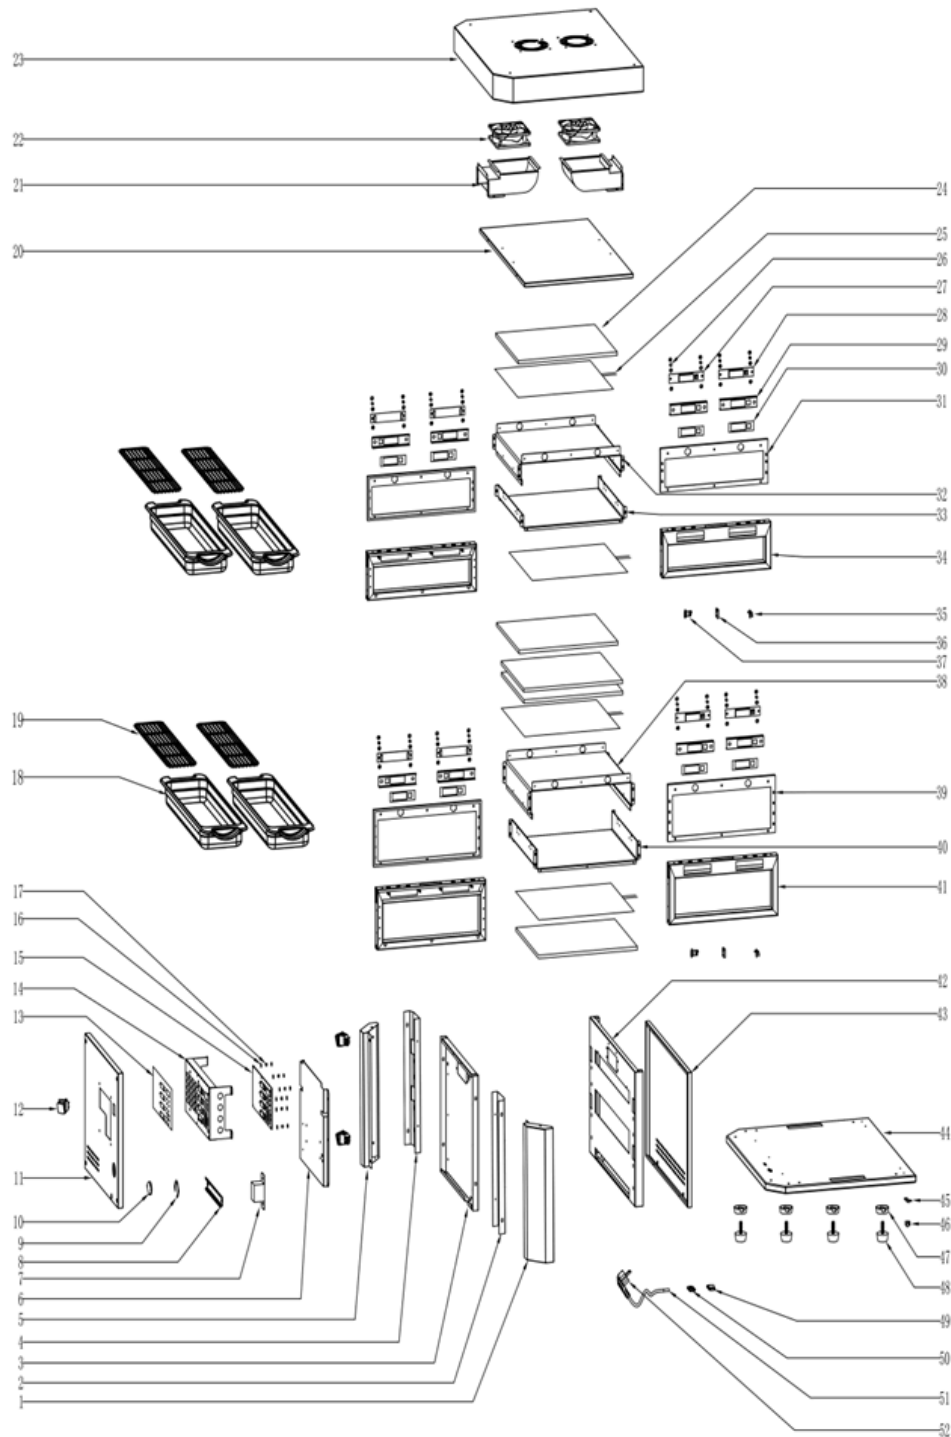


Parts Breakdown

Model FW-CN-0002-V 48548

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AU421	Right Support on Right Side for 48548	1	AU433	Shelf for 48548	19	70863	Thermostat T1M/33 for 48548	37
AU422	Right Pillar on Right Side for 48548	2	AU434	Wind Shield for 48548	20	AU444	Channels-A (Bottom) for 48548	38
AU423	Right Pillar Connector for 48548	3	AU435	Air Duct Assembly for 48548	21	AU445	Heat Insulation Pad (Bottom) for 48548	39
AU424	Left Pillar on Right Side for 48548	4	AS312	Fan Motor for 48548	22	AU446	Channels-B (Bottom) for 48548	40
AU425	Left Support on Right Side for 48548	5	AU436	Top Cover Plate for 48548	23	AU447	Channels Fixed Plate (Bottom) for 48548	41
AU426	Computer Version of Fixed Plate (Outside) for 48548	6	AU437	Insulation for 48548	24	AU448	Left Pillar Connector for 48548	42
AS324	Transformer for 48548	7	AU438	Aluminum Foil Heater for 48548	25	AU449	Left Plate for 48548	43
AS330	Sliding Rail for 48548	8	AS343	Insulating Column for 48548	26	AU450	Upper Connection for 48548	44
AS318	Display Fixed Plate Assembly Right (Top) for 48548	9	AS341	Display Board (W2) for 48548	27	AD870	Fixed Plate for 48548	45
AU427	Loudspeaker for 48548	10	AS332	Display Board (W1) for 48548	28	AD869	Equipotential Grounding Block for 48548	46
AU428	Right Plate for 48548	11	AS344	Sticker Fixing Plate for 48548	29	AS303	Foot Pad for 48548	47
AR485	Switch (Higher Amp) for 48548	12	AU439	Tags (Window Display) for 48548	30	AS301	Rubber Feet for 48548	48
AU429	Tags (Main Control Board) for 48548	13	AU440	Heat Insulation Pad (Top) for 48548	31	61245	Wire Clamp Cover for 48548	49
AS326	Computer Version of Fixed Plate for 48548	14	AU441	Channels-A (Top) for 48548	32	61246	Wire Clip Holder for 48548	50
AU430	Main Control Board for 48548	15	AU442	Channels-B (Top) for 48548	33	AK995	Power Line for 48548	51
AS342	Insulating Washer for 48548	16	AU443	Channels fixed plate (Top) for 48548	34	67691	Power Cord for 48548	52
AU431	Insulating Column(5) for 48548	17	AS338	Temperature Sensor for 48548	35			
AU432	Pan for 48548	18	AS339	Probe Fixter for 48548	36			

Parts Breakdown

Model FW-CN-0004-V 48172

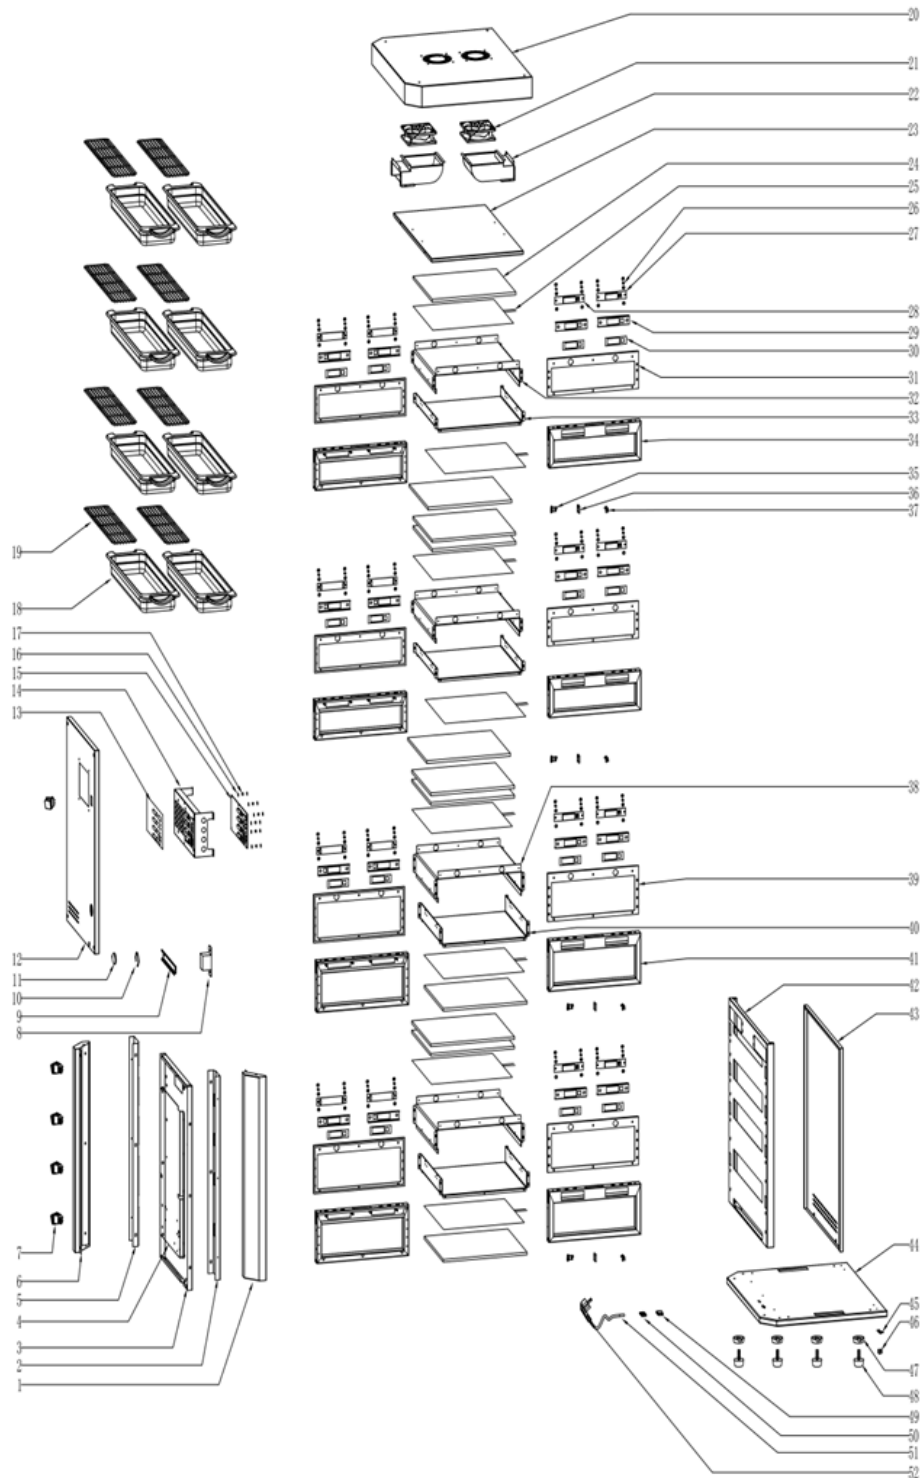


Parts Breakdown

Model FW-CN-0004-V 48172

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AU451	Right Support on Right Side for 48172	1	AU433	Shelf for 48172	19	AS338	Temperature Sensor for 48172	37
AU452	Right Pillar on Right Side for 48172	2	AU436	Top Cover Plate for 48172	20	AU444	Channels-A (Bottom) for 48172	38
AU453	Right Pillar Connector for 48172	3	AS312	Fan Motor for 48172	21	AU445	Heat Insulation Pad (Bottom) for 48172	39
AU454	Computer Version of Fixed Plate (Inside) for 48172	4	AU435	Air Duct Assembly for 48172	22	AU446	Channels-B (Bottom) for 48172	40
AU455	Left Pillar on Right Side for 48172	5	AU434	Wind Shield for 48172	23	AU447	Channels Fixed Plate (Bottom) for 48172	41
AU456	Left Support on Right Side for 48172	6	AU437	Insulation for 48172	24	AU458	Left Pillar Connector for 48172	42
AR485	Switch (Higher Amp) for 48172	7	AU438	Aluminum Foil Heater for 48172	25	AU459	Left Plate for 48172	43
AS324	Transformer for 48172	8	AS343	Insulating Column for 48172	26	AU450	Upper Connection for 48172	44
AS330	Sliding Rail for 48172	9	AS332	Display Board (W1) for 48172	27	AD870	Fixed Plate for 48172	45
AS318	Display Fixed Plate Assembly Right (Top) for 48172	10	AS341	Display Board (W2) for 48172	28	AD869	Equipotential Grounding Block for 48172	46
AU427	Loudspeaker for 48172	11	AS344	Sticker Fixing Plate for 48172	29	AS303	Foot Pad for 48172	47
AU457	Right Plate for 48172	12	AU439	Tags (Window Display) for 48172	30	AS301	Rubber Feet for 48172	48
AU429	Tags (Main Control Board) for 48172	13	AU440	Heat Insulation Pad (Top) for 48172	31	61245	Wire Clamp Cover for 48172	49
AS326	Computer Version of Fixed Plate for 48172	14	AU441	Channels-A (Top) for 48172	32	61246	Wire Clip Holder for 48172	50
AS327	Main Control Board for 48172	15	AU442	Channels-B (Top) for 48172	33	AK995	Power Line for 48172	51
AS342	Insulating Washer for 48172	16	AU443	Channels Fixed Plate (Top) for 48172	34	67691	Power Cord for 48172	52
AU431	Insulating Column(5) for 48172	17	70863	Thermostat T1M/33 for 48172	35			
AU432	Pan for 48172	18	AS339	Probe Fixter for 48172	36			

Parts Breakdown

Model FW-CN-0004-H 48173

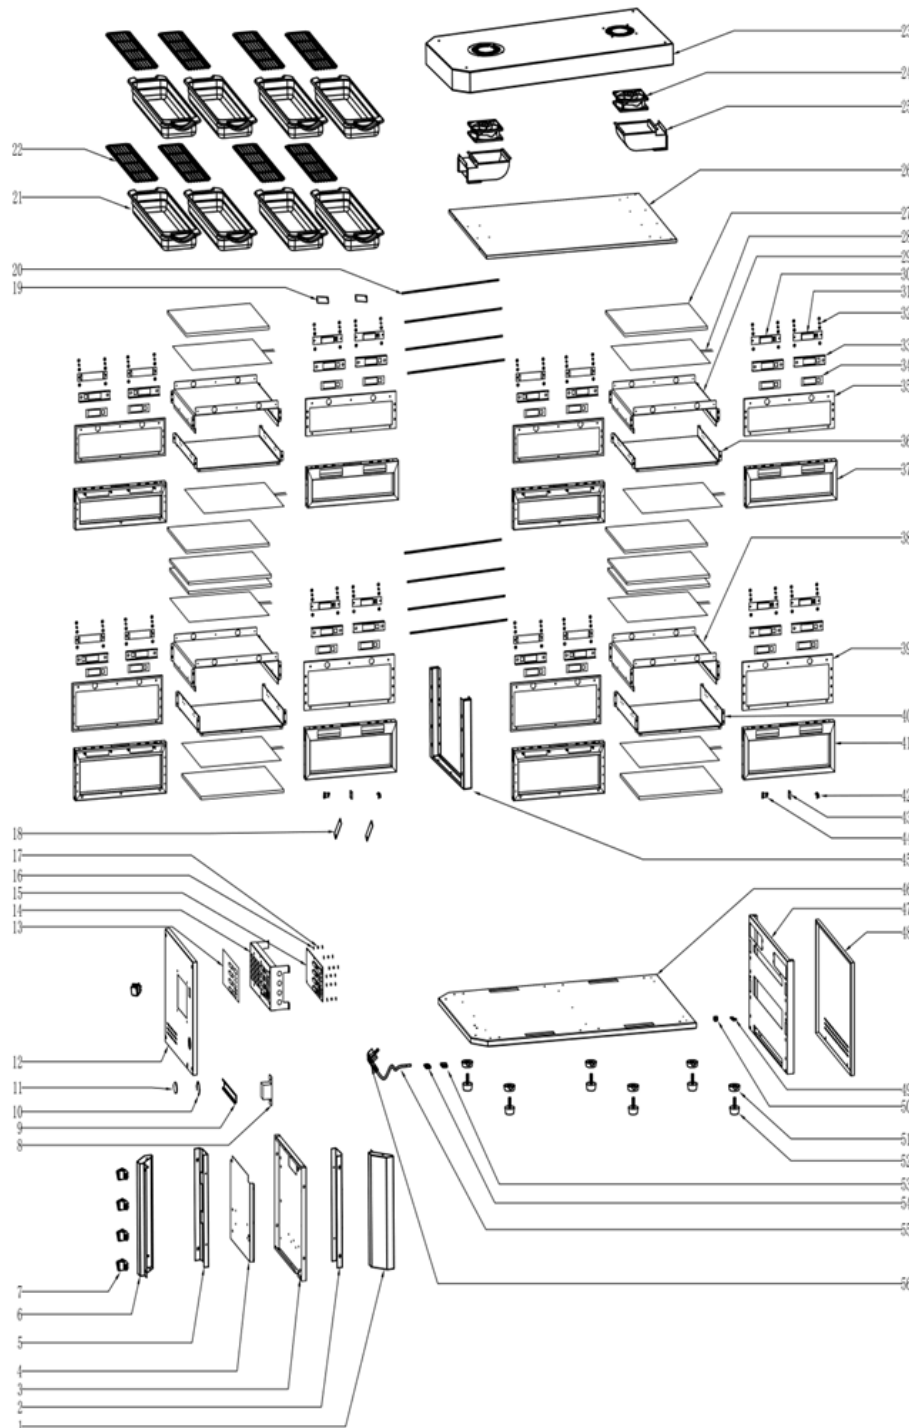



Parts Breakdown

Model FW-CN-0004-H 48173

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AU421	Right Support on Right Side for 48173	1	AS348	Pole for 48173	20	AU445	Heat Insulation Pad (Bottom) for 48173	39
AU422	Right Pillar on Right Side for 48173	2	AU432	Pan for 48173	21	AU446	Channels-B (Bottom) for 48173	40
AU423	Right Pillar Connector for 48173	3	AU433	Shelf for 48173	22	AU447	Channels Fixed Plate (Bottom) for 48173	41
AU426	Computer Version of Fixed Plate (Outside) for 48173	4	AU463	Top Cover Plate for 48173	23	AS338	Temperature Sensor for 48173	42
AU424	Left Pillar on Right Side for 48173	5	AS312	Fan Motor for 48173	24	AS339	Probe Fixter for 48173	43
AU460	Left Support on Right Side for 48173	6	AU435	Air Duct Assembly for 48173	25	70863	Thermostat T1M/33 for 48173	44
AR485	Switch (Higher Amp) for 48173	7	AU464	Upper Connection for 48173	26, 46	AU465	Pillar (Middle) for 48173	45
AS324	Transformer for 48173	8	AU437	Insulation for 48173	27	AU448	Left Pillar Connector for 48173	47
AS330	Sliding Rail for 48173	9	AU438	Aluminum Foil Heater for 48173	28	AU449	Left Plate for 48173	48
AS318	Display Fixed Plate Assembly Right (Top) for 48173	10	AU441	Channels-A (Top) for 48173	29	AD870	Fixed Plate for 48173	49
AU427	Loudspeaker for 48173	11	AS341	Display Board (W2) for 48173	30	AD869	Equipotential Grounding Block for 48173	50
AU428	Right Plate for 48173	12	AS332	Display Board (W1) for 48173	31	AS303	Foot Pad for 48173	51
AU429	Tags (Main Control Board) for 48173	13	AS343	Insulating Column for 48173	32	AS301	Rubber Feet for 48173	52
AS326	Computer Version of Fixed Plate for 48173	14	AS344	Sticker Fixing Plate for 48173	33	61245	Wire Clamp Cover for 48173	53
AU430	Main Control Board for 48173	15	AU439	Tags (Window Display) for 48173	34	61246	Wire Clip Holder for 48173	54
AS342	Insulating Washer for 48173	16	AU440	Heat Insulation Pad (Top) for 48173	35	AK995	Power Line for 48173	55
AU431	Insulating Column(5) for 48173	17	AU442	Channels-B (Top) for 48173	36	67691	Power Cord for 48173	56
AU461	Plate (Bottom) for 48173	18	AU443	Channels Fixed Plate (Top) for 48173	37			
AU462	Plate (Top) for 48173	19	AU444	Channels-A (Bottom) for 48173	38			

Electrical Schematics



Model FW-CN-0002-V 48548

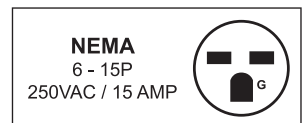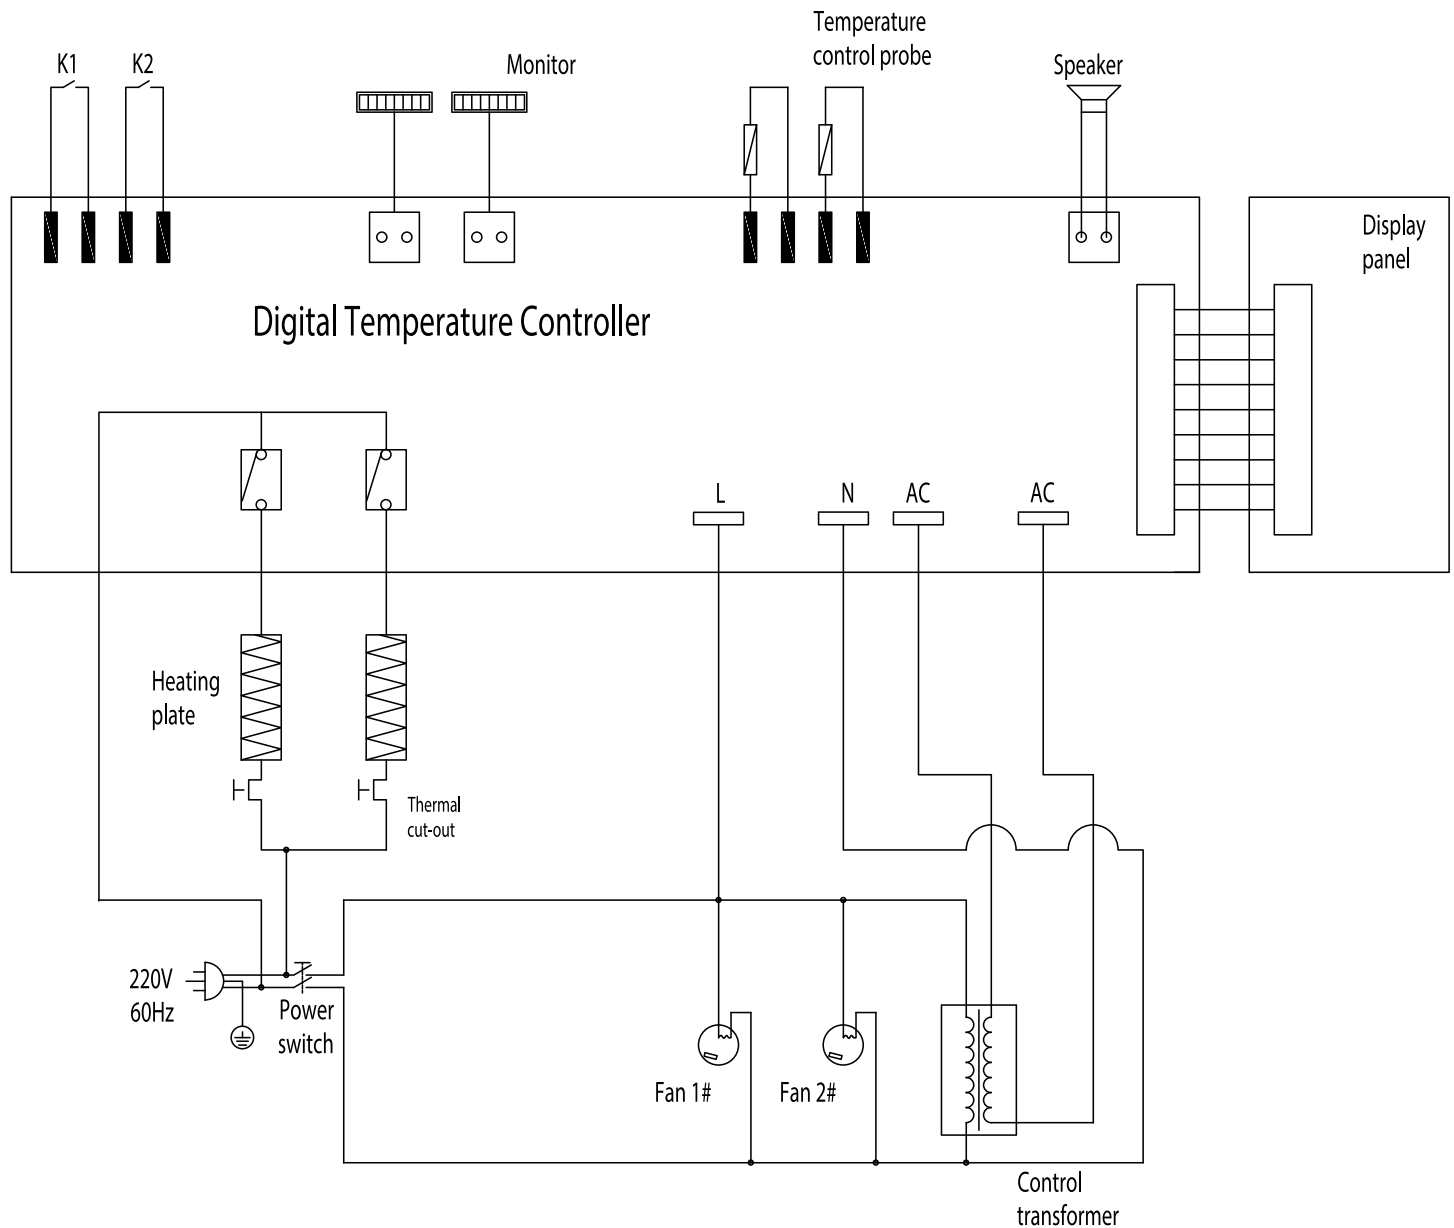

Electrical Schematics

Model FW-CN-0004-V 48172

Model FW-CN-0004-H 48173

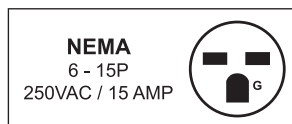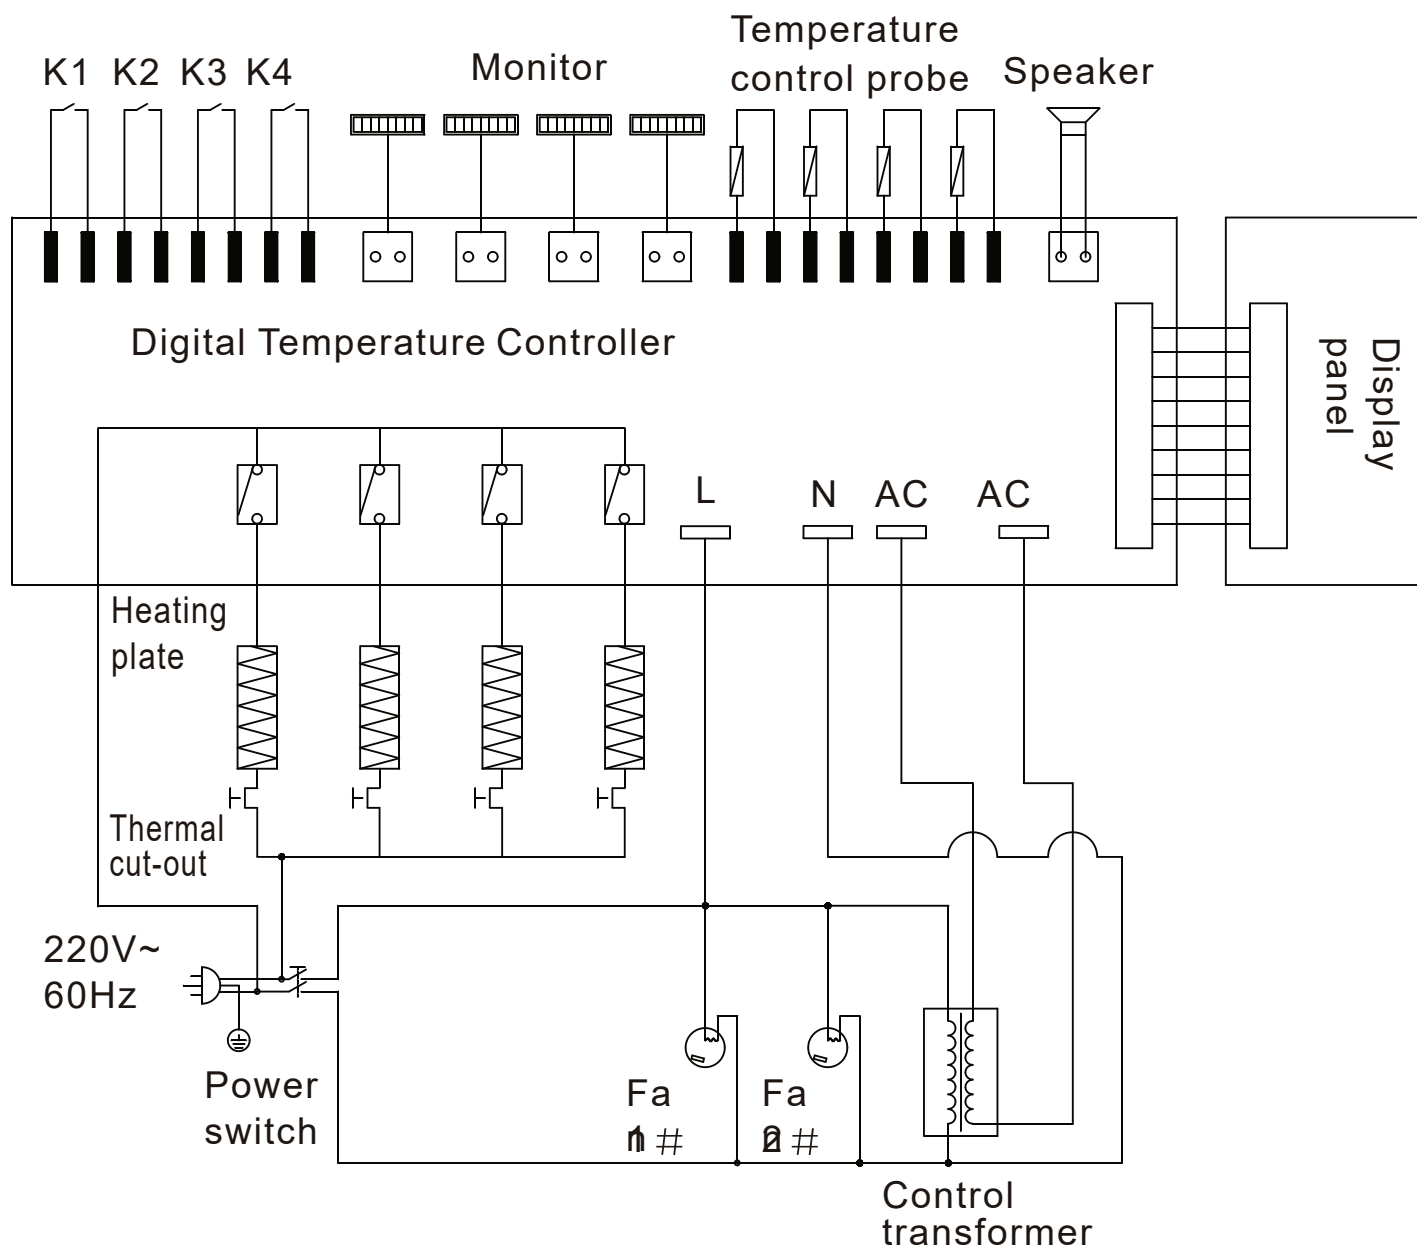

Notes

[illegible]



Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

<https://omcan.com/warranty-registration/>

For mailing in Canada

Pour postale au Canada

Por correo en Canadá

OMCAN

PRODUCT WARRANTY REGISTRATION

3115 Pepper Mill Court,
Mississauga, Ontario
Canada, L5L 4X5

For mailing in the US

Pour diffusion aux États-Unis

Por correo en los EE.UU.

OMCAN

PRODUCT WARRANTY REGISTRATION

4450 Witmer Industrial Estates, Unit 4,
Niagara Falls, New York
USA, 14305

or email to: service@omcan.com



Purchaser's Information

Name: _____

Address: _____

City: _____ Province or State: _____ Postal or Zip: _____

Country: _____

Dealer from which Purchased: _____

Dealer City: _____ Dealer Province or State: _____

Invoice: _____

Model Name: _____ Model Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____

Would you like to extend the warranty? ☐ Yes ☐ No

Company Name: _____

Telephone: _____

Email Address: _____

Type of Company: _____

☐ Restaurant ☐ Bakery ☐ Deli

☐ Butcher ☐ Supermarket ☐ Caterer

☐ Institution (*specify*): _____

☐ Other (*specify*): _____

Serial Number: _____

Date of Installation (MM/DD/YYYY): _____

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 6,500 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 6500 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 6,500 productos con origen a nivel mundial.

