


Parts Breakdown

Model BS-CN-2020 46786

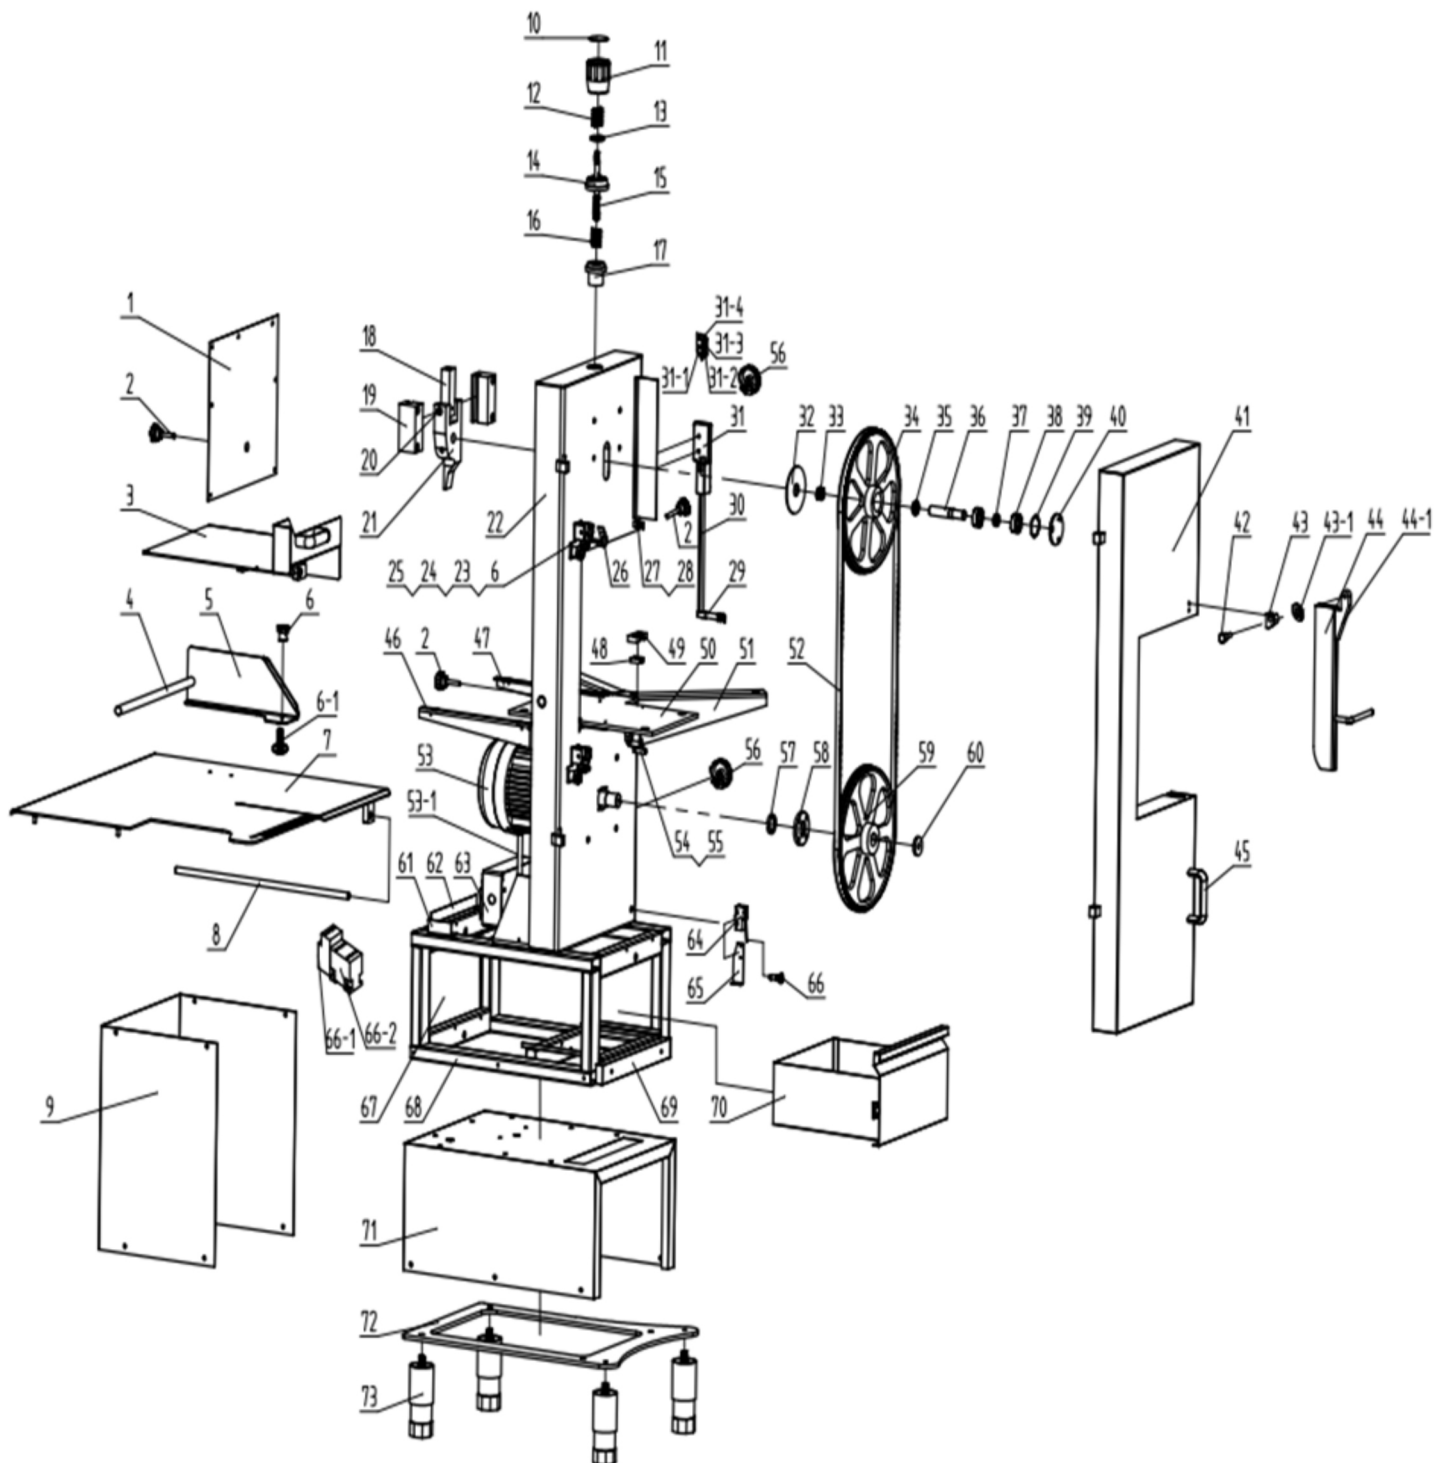

Parts Breakdown

Model BS-CN-2020 46786

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AF437	Cover of Back for 46786	1	AF413	Cleaner 1 for 46786	26	AU642	Angle Iron Right for 46786	46
AF436	Handle for 46786	2	AF403	Shaft of Pulley for 46786	27	AU643	Angle Iron for 46786	47
AF416	Sliding Working Table for 46786	3	AU637	Guide Plate for 46786	28	AF444	Guide Part for 46786	48, 49
AU629	Locking Axis for 46786	4	AU638	Guiding Shaft Circle for 46786	29	AU644	Table-Board Support for 46786	50
AF446	Length Board for 46786	5	AF443	Moving Guide Shaft for 46786	30	AU645	Support Plate for 46786	51
AU630	Knob for 46786	6	AF442	Protection of Moving for 46786	31	AF411	Saw for 46786	52
AF447	Tightening Screw for 46786	6-1	AF445	Rubber Gasket for Switch for 46786	31-1	AF433	Motor for 46786	53
AU631	Table-Board for 46786	7	AF397	Stop Button for 46786	31-2	AU646	Pole for Motor for 46786	53-1
AF461	Moving Shaft for 46786	8	AF398	Start Button for 46786	31-3	AU647	Meat Scraper Seat for 46786	54
AF432	Back Cover for 46786	9	AF396	Box of Switch for 46786	31-4	AF414	Cleaner 2 for 46786	55
AF384	Cover for 46786	10	AF401	Retaining Plate for 46786	32	AF399	Locker for 46786	56
AF388	Adjusting Handle for 46786	11	AU639	Pressure Spring for 46786	33	AU648	Skeleton Oil Seal for 46786	57
AF387	Spring for 46786	12	AF402	Pulley 1 for 46786	34	AU649	Waterproof Flange for 46786	58
AF391	Lid Cover for 46786	13	AU640	Oil Seal for 46786	35	AF420	Pulley 2 for 46786	59
AF389	Sheath for 46786	14	AF407	Shaft for 46786	36	AF419	Collar for Top Shaft for 46786	60
AU632	Mandrel for 46786	15	AF406	Spacer for 46786	37	AU650	Baseboard for 46786	61
AF394	Spring for 46786	16	AF405	Bearing for 46786	38	AU651	Angle Steel for 46786	62
AF395	Bushing for 46786	17	AF409	O Ring for 46786	39	AU652	Electrical Box for 46786	63
AU633	Hanging Block for 46786	18	AF410	Gland for 46786	40	AU653	Micro Switch for 46786	64
AF441	Sliding Plate of Groove for 46786	19	AF465	Cover for Door for 46786	41	AU654	Micro Switch Bracket for 46786	65
AU634	Sliding Shaft for 46786	20	AF431	Shaft for 46786	42	AU655	Control Button for 46786	66
AF439	Sliding Part for 46786	21	AF430	Protection for Saw for 46786	43	AF435	Contacting and Capacitor for 46786	66-1, 66-2
AF425	Body for 46786	22	AU641	Gasket for 46786	43-1	AF463	Seat with Drawer for 46786	67, 68, 69, 71
AF412	Stand for 46786	23	AF428	Protection for Saw for 46786	44	AF464	Drawer for 46786	70
AU635	Cleaning Shell for 46786	24	AF429	Shaft for 46786	44-1	AF421	Bottom for 46786	72
AU636	Clean Sheet for 46786	25	AF418	Bakelite for 46786	45	AF422	Adjusting Feet for 46786	73