


Parts Breakdown

Model BS-CN-2400 46787

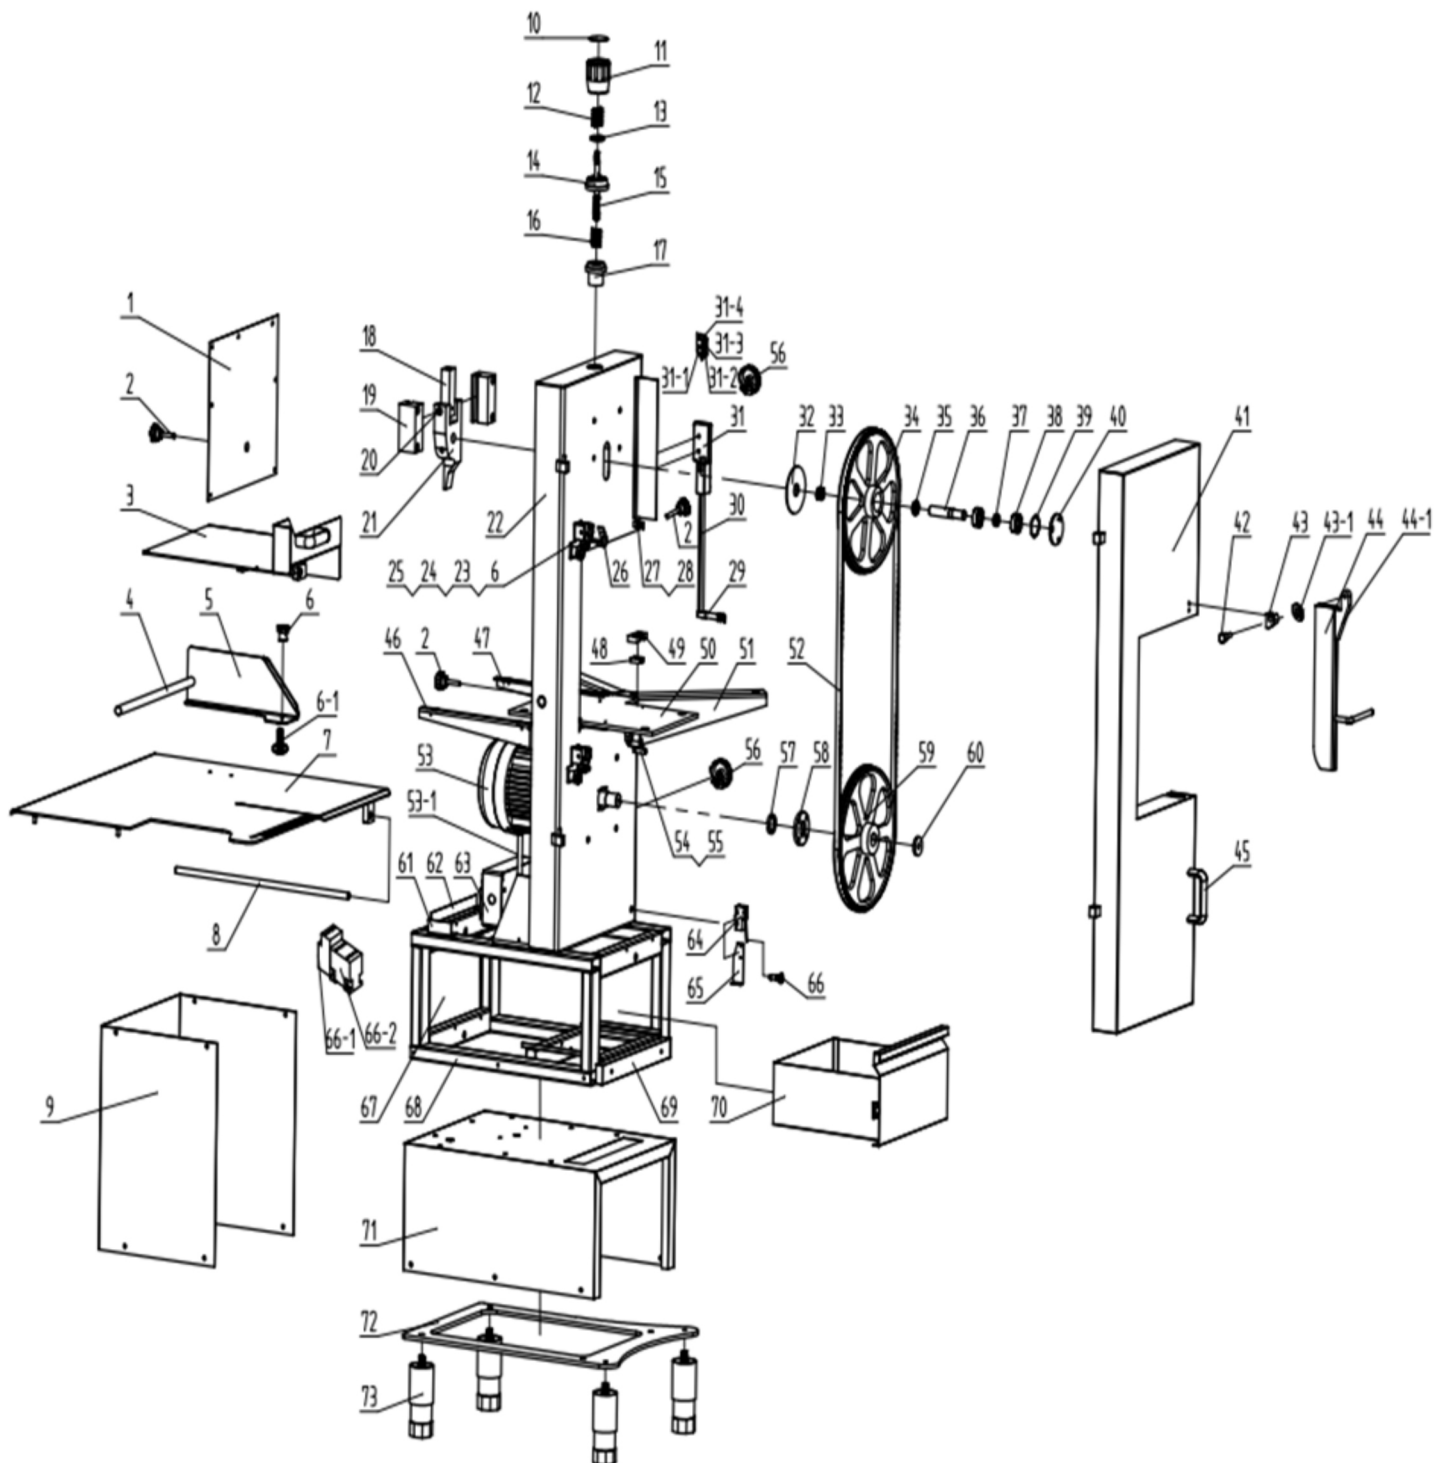

Parts Breakdown

Model BS-CN-2400 46787

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AF477	Cover of Back for 46787	1	AF413	Cleaner 1 for 46787	26	AU658	Angle Iron Right for 46787	46
AF436	Handle for 46787	2	AF403	Shaft of Pulley for 46787	27	AU659	Angle Iron for 46787	47
AF468	Sliding Working Table for 46787	3	AU637	Guide Plate for 46787	28	AF444	Guide Part for 46787	48, 49
AU656	Locking Axis for 46787	4	AU638	Guiding Shaft Circle for 46787	29	AU660	Table-Board Support for 46787	50
AF479	Length Board for 46787	5	AF443	Moving Guide Shaft for 46787	30	AU661	Support Plate for 46787	51
AU630	Knob for 46787	6	AF442	Protection of Moving for 46787	31	AF467	Saw for 46787	52
AF447	Tightening Screw for 46787	6-1	AF445	Rubber Gasket for Switch for 46787	31-1	AF476	Motor for 46787	53
AU657	Table-Board for 46787	7	AF397	Stop Button for 46787	31-2	AU646	Pole for Motor for 46787	53-1
AF461	Moving Shaft for 46787	8	AF398	Start Button for 46787	31-3	AU647	Meat Scraper Seat for 46787	54
AF475	Back Cover for 46787	9	AF396	Box of Switch for 46787	31-4	AF414	Cleaner 2 for 46787	55
AF384	Cover for 46787	10	AF401	Retaining Plate for 46787	32	AF399	Locker for 46787	56
AF388	Adjusting Handle for 46787	11	AU639	Pressure Spring for 46787	33	AU648	Skeleton Oil Seal for 46787	57
AF387	Spring for 46787	12	AF402	Pulley 1 for 46787	34	AU662	Waterproof Flange for 46787	58
AF391	Lid Cover for 46787	13	AU640	Oil Seal for 46787	35	AF470	Pulley 2 for 46787	59
AF389	Sheath for 46787	14	AF466	Shaft for 46787	36	AF419	Collar for Top Shaft for 46787	60
AU632	Mandrel for 46787	15	AF406	Spacer for 46787	37	AU663	Baseboard for 46787	61
AF394	Spring for 46787	16	AF405	Bearing for 46787	38	AU651	Angle Steel for 46787	62
AF395	Bushing for 46787	17	AF409	O ring for 46787	39	AU664	Electrical Box for 46787	63
AU633	Hanging Block for 46787	18	AF410	Gland for 46787	40	AU653	Micro Switch for 46787	64
AF441	Sliding Plate of Groove for 46787	19	AF484	Cover for Door for 46787	41	AU654	Micro Switch Bracket for 46787	65
AU634	Sliding Shaft for 46787	20	AF431	Shaft for 46787	42	AU655	Control Button for 46787	66
AF478	Sliding Part for 46787	21	AF430	Protection for Saw for 46787	43	AF435	Contacting and Capacitor for 46787	66-1, 66-2
AF472	Body for 46787	22	AU641	Gasket for 46787	43-1	AF482	Seat with Drawer for 46787	67, 68, 69, 71
AF412	Stand for 46787	23	AF428	Protection for Saw for 46787	44	AF483	Drawer for 46787	70
AU635	Cleaning Shell for 46787	24	AF429	Shaft for 46787	44-1	AF421	Bottom for 46787	72
AU636	Clean Sheet for 46787	25	AF418	Bakelite for 46787	45	AF422	Adjusting Feet for 46787	73