


# Parts Breakdown

Model DW-CN-0096 40003

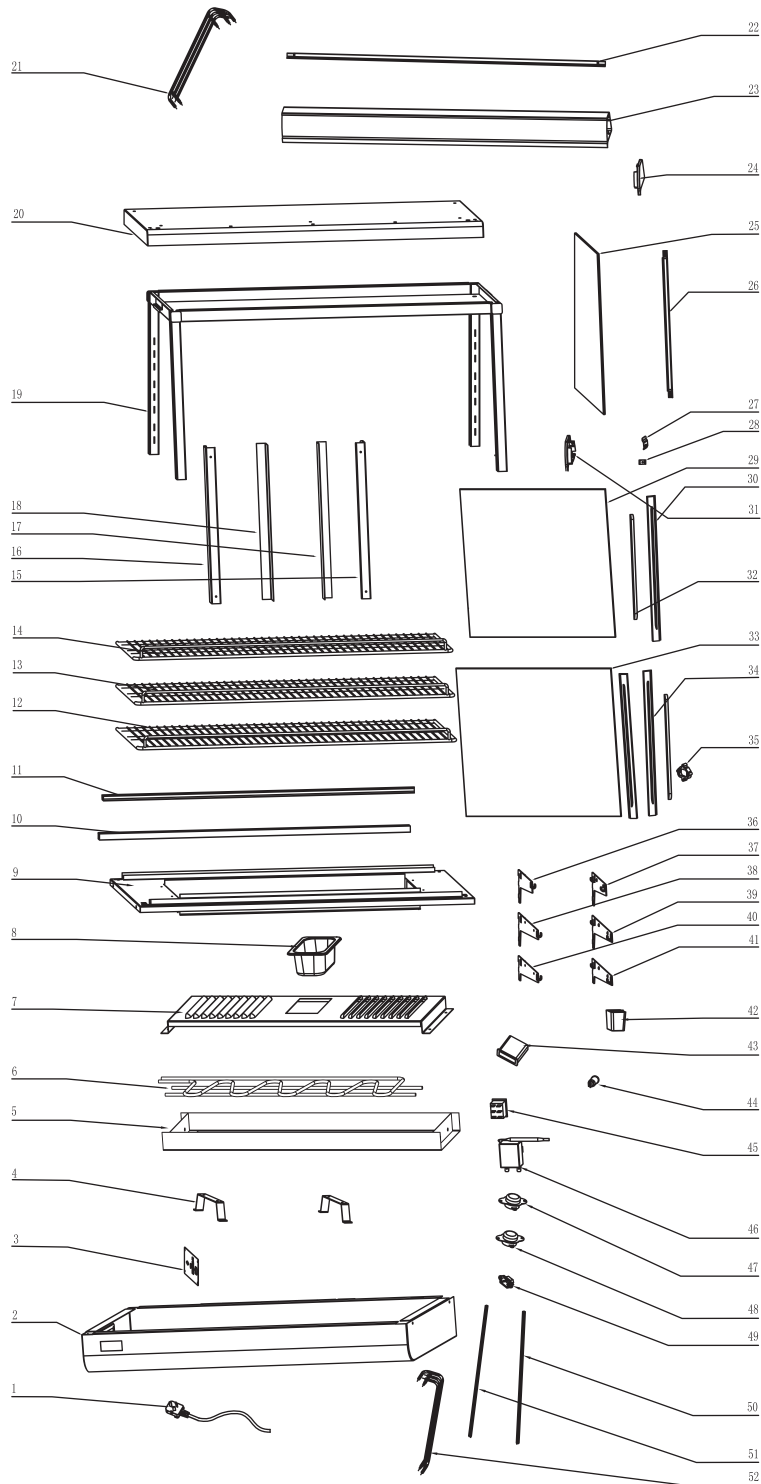

# Parts Breakdown

## Model DW-CN-0096 40003

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
30621	Power Cord for 40003	1	70662	Cabinet Frame for 40003	19	71653	Right Small Bracket for 40003	37
70645	Base for 40003	2	70663	Top Cover for 40003	20	30747	Left Shelf Bracket for 40003	38
70646	Control Panel for 40003	3	70664	Wire Fence Left for 40003	21	30750	Right Shelf Bracket for 40003	39
70647	Bracket for Heater for 40003	4	70665	LED Lights for 40003	22	79322	Left Shelf Bracket for 40003	40
70648	Tray for Heater for 40003	5	70666	Advertisement Light Box for 40003	23	79336	Right Shelf Bracket for 40003	41
70824	Heating Element for 40003	6	67312	Side Cover Right for 40003	24	71647	Base Feet for 40003	42
67334	Upper Hinge Front for 40003	7	67320	Side Glass for 40003	25	70686	Temperature Display for 40003	43
71658	1/9 GN Pan for 40003	8	70669	LED Lights for 40003	26	60509	Indicating Light for 40003	44
70652	Bottom Panel for 40003	9	67331	Glass Clamp for 40003	27	70688	Switch for 40003	45
70653	Front Sliding Slot for 40003	10	67310	Nut for 40003	28	71640	Temperature Thermostat for 40003	46
70654	Back Sliding Slot for 40003	11	70672	Front Door Glass for 40003	29	71662	Control 125°C for 40003	47
70655	Bottom Shelf for 40003	12	70673	Front Door Knob for 40003	30	71661	Control 150°C for 40003	48
70656	Middle Shelf for 40003	13	67308	Side Cover Left for 40003	31	70692	Socket Connector for 40003	49
70657	Upper Shelf for 40003	14	70675	Sheath of Door Knob for 40003	32	70693	Waterproof Strip for 40003	50
67327	Lamp Holder Left for 40003	15	70676	Back Door Glass for 40003	33	70694	Waterproof Strip for 40003	51
67328	Lamp Holder Right for 40003	16	70677	Back Door Knob for 40003	34	70695	Wire Fence Right for 40003	52
67329	Transparent Lamp Cover Right for 40003	17	70678	Socket for 40003	35			
67330	Transparent Lamp Cover Left for 40003	18	71652	Left Small Bracket for 40003	36			