


Parts Breakdown

Model FR-CN-0198 45295

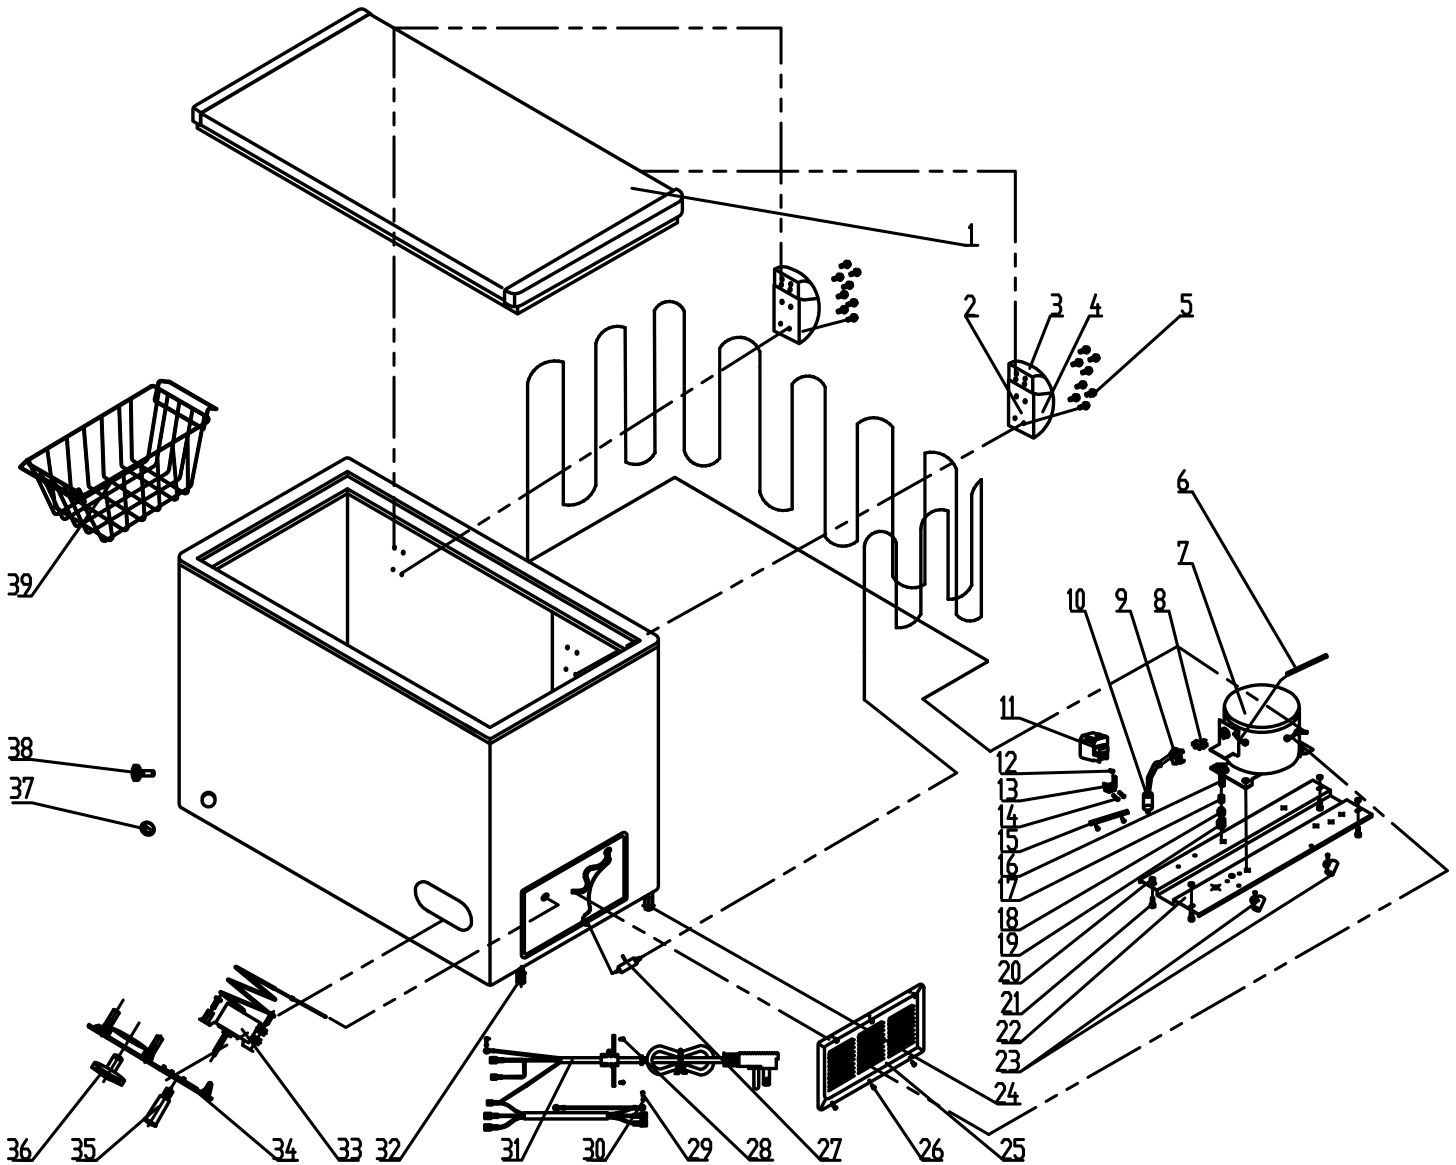

Parts Breakdown

Model FR-CN-0198 45295

| Item No. | Description | Position | Item No. | Description | Position | Item No. | Description | Position |
|----------|------------------------------|----------|----------|-------------------------------|----------|----------|--------------------------------|----------|
| 60000 | Door for 45295 | 1 | 60013 | Fastening Screw for 45295 | 14 | 60026 | Filter for 45295 | 27 |
| 60001 | Gemel for 45295 | 2 | 60014 | Capacitor Bracket for 45295 | 15 | 60027 | Screw for 45295 | 28 |
| 60002 | Upper Cover for 45295 | 3 | 60015 | Compressor Support for 45295 | 16 | 60028 | Screw for 45295 | 29 |
| 60003 | Bottom Cover for 45295 | 4 | 60016 | Suction Tube Sleeve for 45295 | 17 | 60029 | Spring Washer for 45295 | 30 |
| 60004 | Screw for 45295 | 5 | 60017 | Rubber Spacer for 45295 | 18 | 60030 | Power Cord for 45295 | 31 |
| 60005 | Compressor Pipe for 45295 | 6 | 60018 | Screw for 45295 | 19 | 60031 | Front Foot for 45295 | 32 |
| 60006 | Compressor for 45295 | 7 | 60019 | Screw for 45295 | 20 | 60032 | Thermostat for 45295 | 33 |
| 60007 | Overload Protector for 45295 | 8 | 60020 | Self Tapping Screw for 45295 | 21 | 60033 | Control Panel for 45295 | 34 |
| 60008 | PTC Starting Relay for 45295 | 9 | 60021 | Compressor Support for 45295 | 22 | 60034 | Indicator Lamp for 45295 | 35 |
| 60009 | Running Capacitor for 45295 | 10 | 60022 | Wire Clip for 45295 | 23 | 60035 | Knob of Temp-Control for 45295 | 36 |
| 60010 | Cover for 45295 | 11 | 60023 | Castor for 45295 | 24 | 60036 | Drain Plug for 45295 | 37 |
| 60011 | Fastening Screw for 45295 | 12 | 60024 | Compressor Cover for 45295 | 25 | 60037 | Drain Hole Stopper for 45295 | 38 |
| 60012 | Cover for 45295 | 13 | 60025 | Self Tapping Screw for 45295 | 26 | 60075 | Basket for 45295 | 39 |