


# Parts Breakdown

Model GR-IT-1500-H 45403


Base Unit

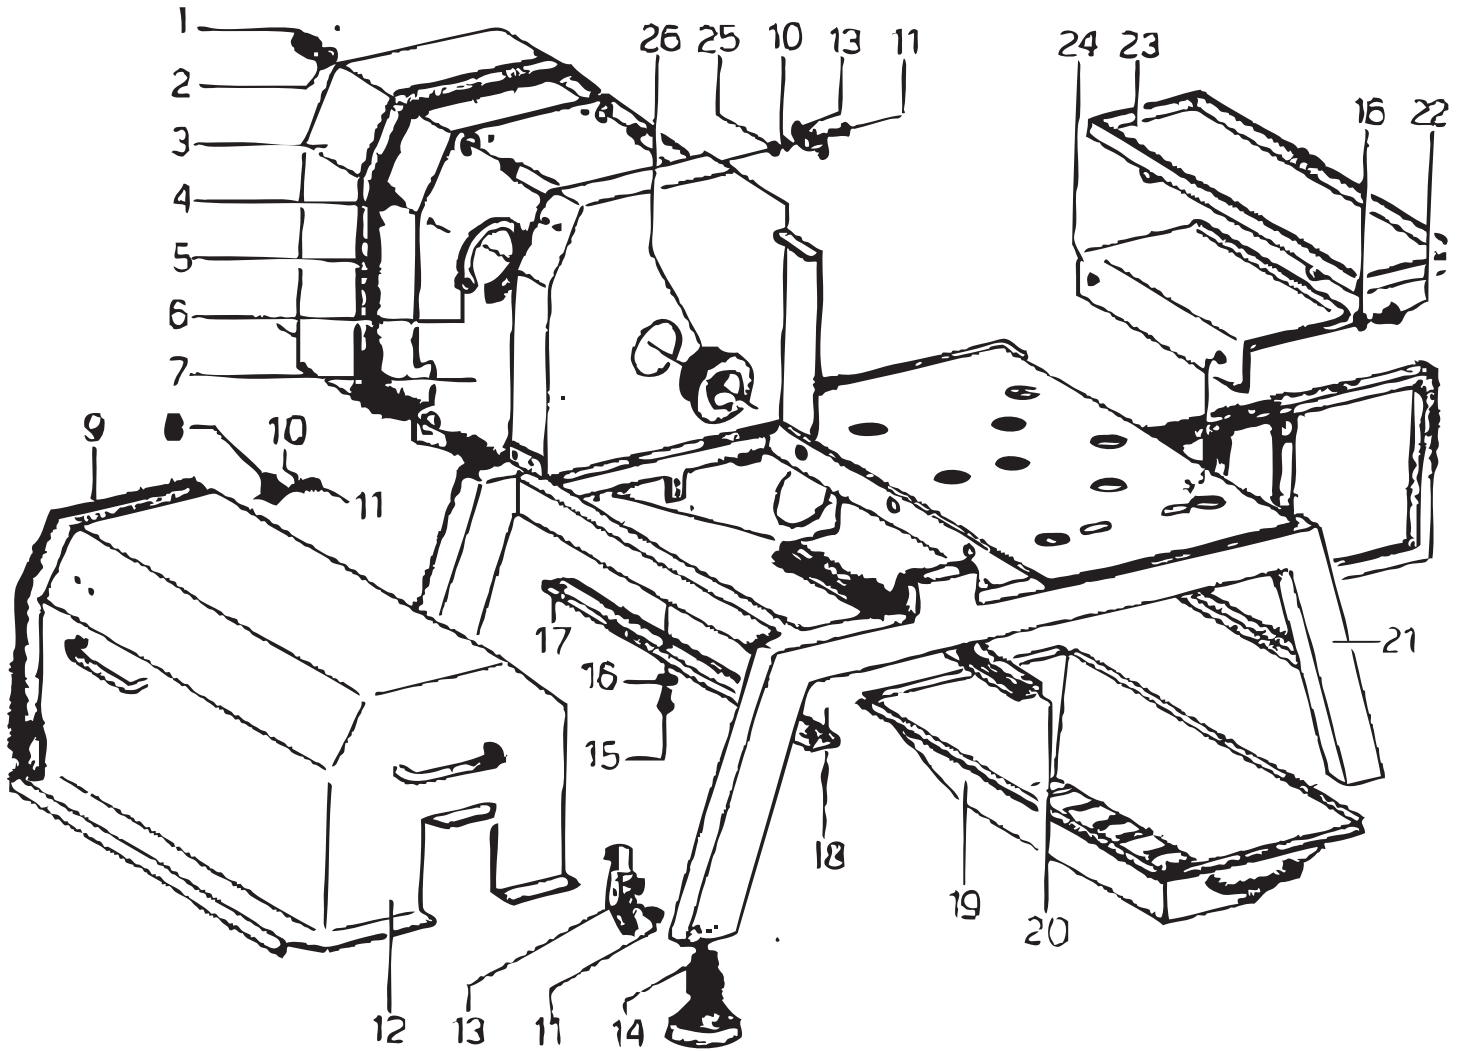

# Parts Breakdown

Model GR-IT-1500-H 45403


Drum Unit

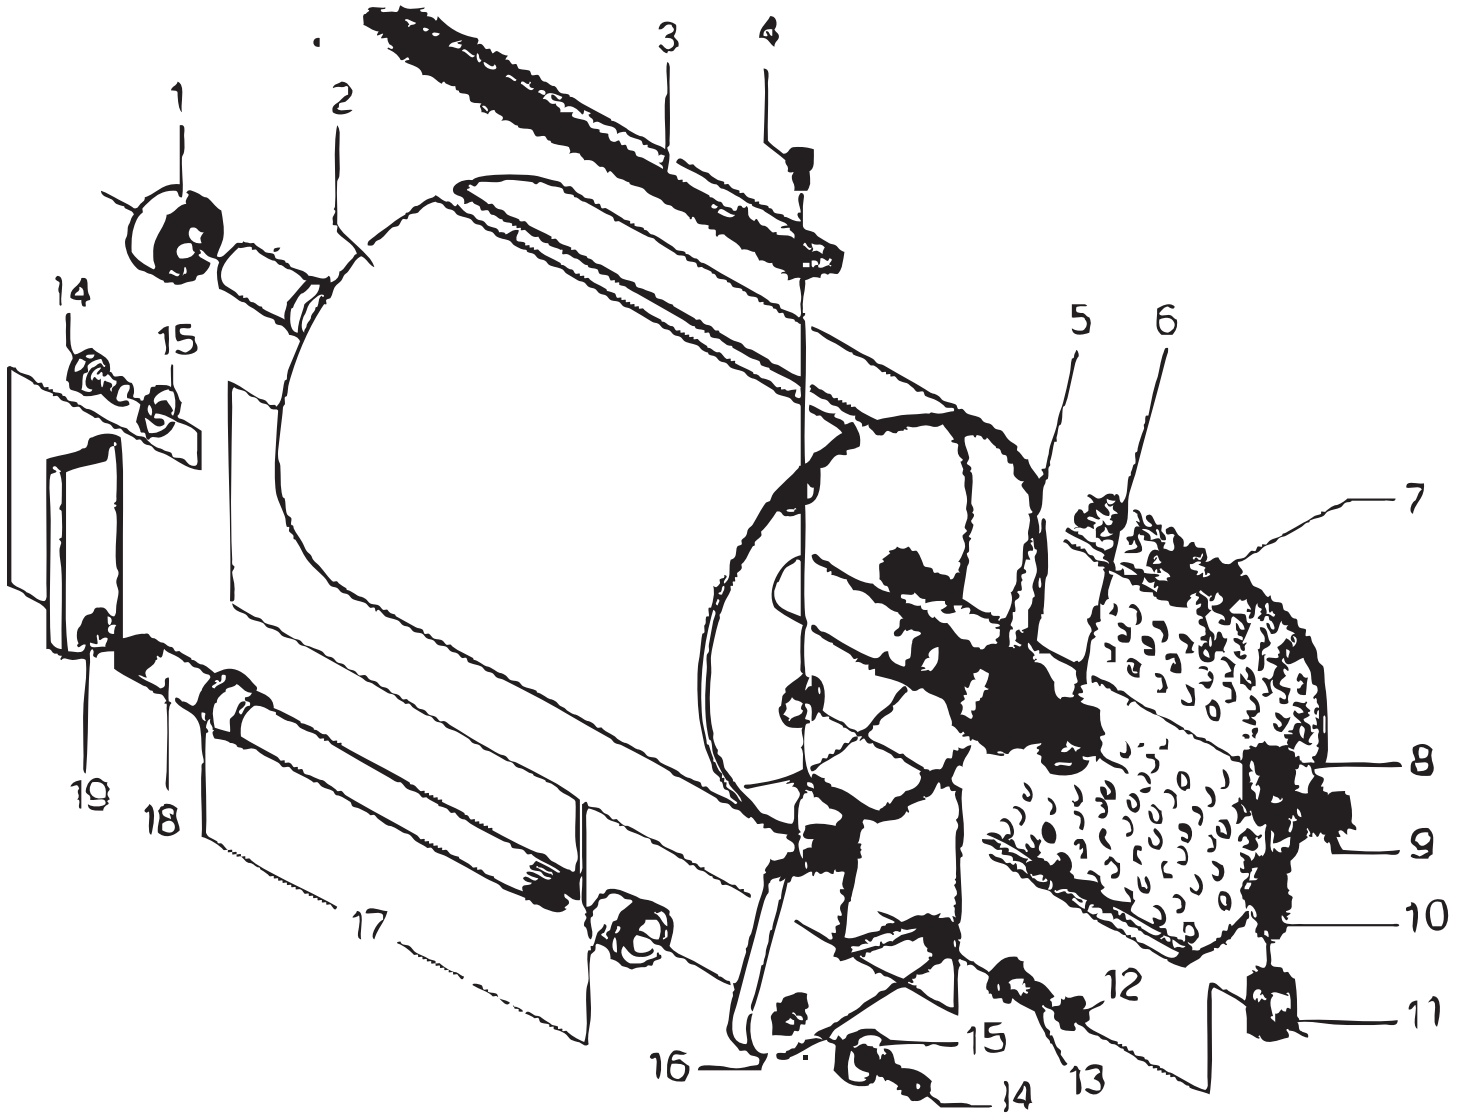

# Parts Breakdown

Model GR-IT-1500-H 45403


Drum Driving Unit

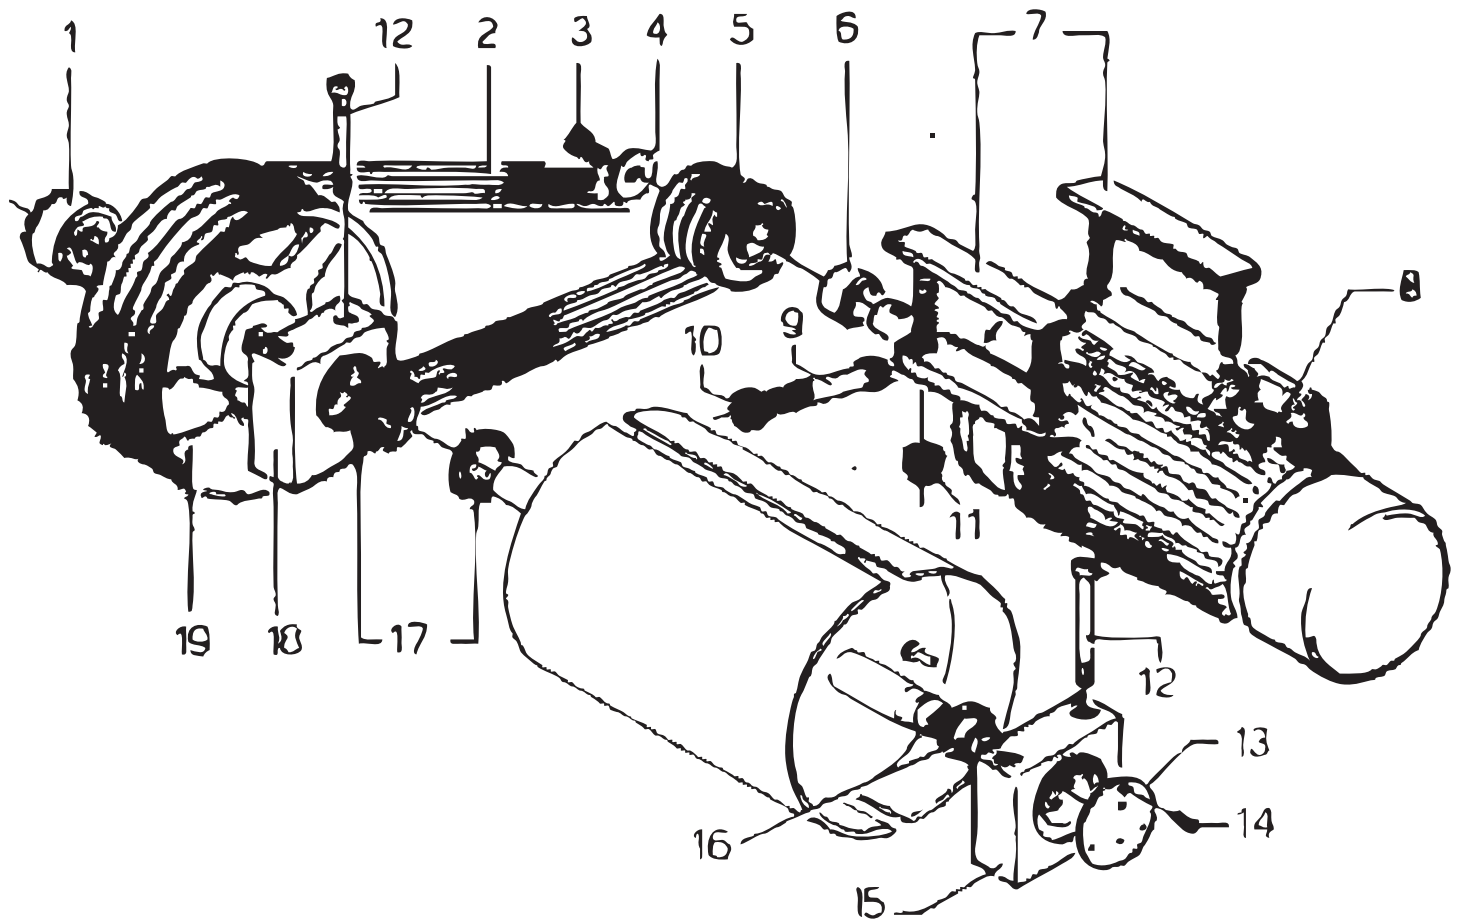

# Parts Breakdown

Model GR-IT-1500-H 45403

Loading Hopper Unit

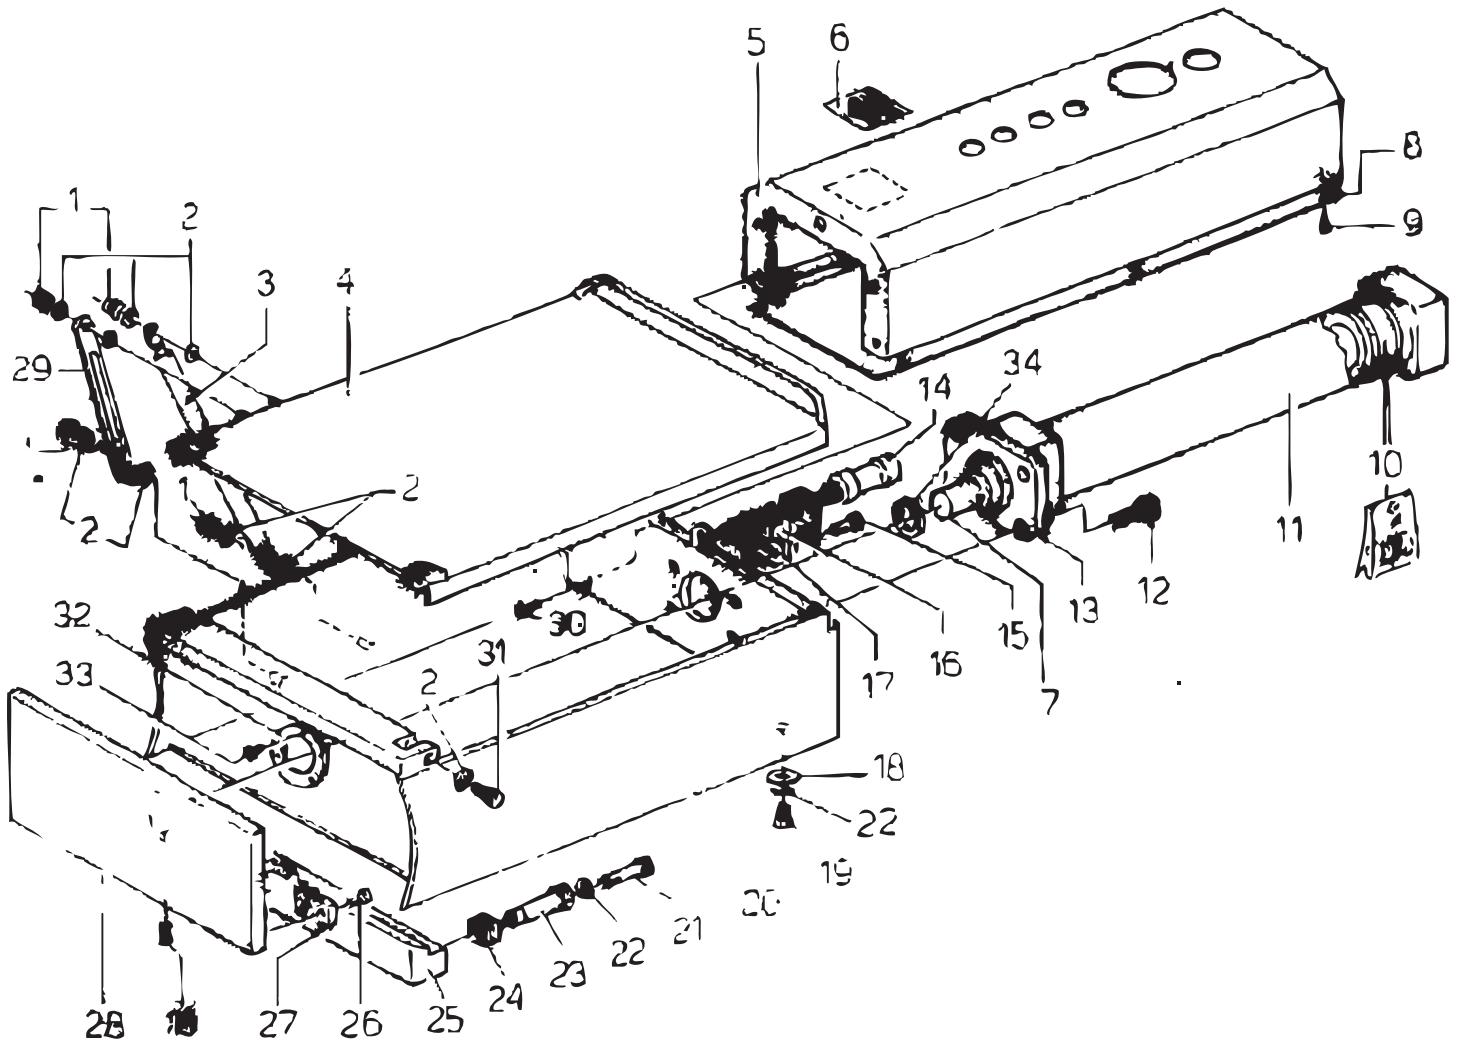



# Parts Breakdown

**Model GR-IT-1500-H 45403**

**Base Unit**

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AJ706	Blind Nut M10 for 45403	1	AJ717	Removeable Casing for 45403	12	AJ728	Rail for 45403	20
AJ707	Flat Washer D.10.5 for 45403	2	AJ718	Removable Casing for 45403	12	AJ729	Rail for 45403	20
AJ708	Belt Casing for 45403	3	AJ719	Protex Fastener for 45403	13	AJ730	Bedplate for 45403	21
AJ709	Cheese-Headed Socket Head Screw M5x16 for 45403	4	AJ720	Stainless Steel Anti-Slip Articulated Foot for 45403	14	AJ731	Bedplate for 45403	21
AJ710	Gasket for 45403	5	AJ721	Hex. Head Screw M8x20 for 45403	15	AJ732	Hex. Head Screw M6x10 for 45403	22
AJ711	Retaining Ring for Shaft D.80 for 45403	6	AJ722	Elastic Washer A 6.4 for 45403	16	AJ733	Collecting Tank for 45403	23
AJ712	Cover for 45403	7	AJ723	Rail for 45403	17	AJ734	Collecting Tank for 45403	23
AJ713	Protex Stop for 45403	8	AJ724	Rail for 45403	17	AJ735	Tank Support for 45403	24
AJ714	Gasket for 45403	9	AJ725	Hex. Sock. Headless Screw M8x162 for 45403	18	AJ736	Self-Locking Nut M4 for 45403	25
AJ715	Flat Washer D.4.3 for 45403	10	AJ726	Discharging Hopper for 45403	19	AJ737	Wall Ring for 45403	26
AJ716	Cross Head Screw M4x10 for 45403	11	AJ727	Discharging Hopper for 45403	19			

**Drum Unit**

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AJ738	Bearing 100x45x36 for 45403	1	AJ746	Toothed Belt for 45403	7	AJ754	Hex. Head Screw M8x20 for 45403	14
AJ739	Drum for 45403	2	AJ747	Toothed Belt for 45403	7	AJ755	Washer for 45403	15
AJ740	Drum for 45403	2	AJ748	LH Fork M18x1.5 for 45403	8	AJ756	Front Lever for 45403	16
AJ741	Strip for 45403	3	AJ749	Retaining Ring for Shaft D.15 for 45403	9	AJ757	Bushing for 45403	17
AJ742	Strip for 45403	3	AJ750	Tie Rod for 45403	10	AJ758	Shaft for 45403	18
AJ743	Cheese-Headed Socket Head Screw M8x20 for 45403	4	AJ751	RH Fork M18x1.5 for 45403	11	AJ759	Shaft for 45403	18
AJ744	Bearing 85x45x23 for 45403	5	AJ752	Retaining Ring for Shaft D.12 for 45403	12	AJ760	Rear Lever for 45403	19
AJ745	Retaining Ring for Shaft D.45 for 45403	6	AJ753	Pin for 45403	13			

# Parts Breakdown

## Model GR-IT-1500-H 45403

## Drum Driving Unit

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AJ761	Ring Block Locking Set for 45403	1	AJ768	Motor Fastening Strip for 45403	7	AJ775	Flat Head Countersunk Socket Cap Screw M5x10 for 45403	14
AJ762	V-Belts for 45403	2	AJ769	Motor Sew HP20 for 45403	8	AJ776	Bearing Support for 45403	15
AJ763	Hex. Head Screw M16x40 for 45403	3	AJ770	Hex. Head Screw M14x70 for 45403	9	AJ777	Bushing for 45403	16
AJ764	Washer for 45403	4	AJ771	Nut EW M14 for 45403	10	AJ778	Retaining Ring for Hole for 45403	17
AJ765	4-Groove Pulley B D.112 for 45403	5	AJ772	Self-Locking Nut EM M14 for 45403	11	AJ779	Bearing Support for 45403	18
AJ766	Spacer for 45403	6	AJ773	Cheese-Headed Socket Head Screw M14x130 for 45403	12	AJ780	4-Groove Pulley B D.450 for 45403	19
AJ767	Motor Fastening Strip for 45403	7	AJ774	Lid for 45403	13			

## Loading Hopper Unit

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AJ781	Self-Locking Nut M8 for 45403	1	AJ793	Flange for Stem for 45403	13	AJ805	Blade for 45403	25
AJ782	Flat Washer D.8.4 for 45403	2	AJ794	ISO 6432 Metalwork Cylinder D.25-C-50 for 45403	14	AJ806	Blade for 45403	25
AJ783	Gas Spring Inox 400N C.100 for 45403	3	AJ743	Cheese-Headed Socket Head Screw M8x20 for 45403	15	AJ807	Screw M6x40 for 45403	26
AJ784	Lid for 45403	4	AJ795	Cylinder Fastening for 45403	16	AJ808	Slide for 45403	27
AJ785	Lid for 45403	4	AJ796	Pin for 45403	17	AJ809	Pressure Plate for 45403	28
AJ786	Cylinder Cover for 45403	5	AJ797	Washer for 45403	18	AJ810	Pressure Plate for 45403	28
AJ787	Pictogram for 45403	6	AJ798	Hex. Head Screw M10x20 for 45403	19	AJ811	Hopper Lid Stop for 45403	29
AJ788	Cylinder Stem D.32 for 45403	7	AJ799	Hopper for 45403	20	AJ812	Hex. Head Screw M8x30 for 45403	30
AJ789	Cover for 45403	8	AJ800	Hopper for 45403	20	AJ813	Hex. Head Screw M8x50 for 45403	31
AJ716	Cross Head Screw M4x10 for 45403	9	AJ801	Hex. Head Screw M10x100 for 45403	21	AJ814	Gasket Seal for 45403	32
AJ790	Cylinder Seal Kit D.100-32 for 45403	10	AJ802	Elastic Washer A 10.5 for 45403	22	AJ815	Flat Head Countersunk Socket Cap Screw M4x10 for 45403	33
AJ791	Cylinder for 45403	11	AJ803	Eccentric Pin for 45403	23	AJ816	Scraper Seal for 45403	34
AJ792	Cheese-Headed Socket Head Screw M12x50 for 45403	12	AJ804	Slide for 45403	24			