



Sushi Showcases

Models RS-CN-0042-2, 0052-2, 0062-2, 0132-2

Items 48667, 48668, 48669, 48670

Instruction Manual



STOP

**DO NOT RETURN
THIS PRODUCT TO THE STORE**

For questions or assistance with this
product call OMCAN Toll Free:
1 800 465 0234
Customer Service
or
visit the Support section of
www.omcan.com

Revised - 06/26/2025



Toll Free: 1-800-465-0234
Fax: 905-607-0234
Email: service@omcan.com
www.omcan.com



Table of Contents

Model RS-CN-0042-2 / Model RS-CN-0052-2
Model RS-CN-0062-2 / Model RS-CN-0132-2

Section	Page
Disclaimer -----	3
General Information -----	4 - 5
Safety and Warranty -----	5 - 8
Technical Specifications -----	8
Operation -----	8 - 9
Maintenance -----	9
Troubleshooting -----	10
Parts Breakdown -----	11 - 18
Electrical Schematics -----	19
Notes -----	20 - 22
Warranty Registration -----	23

Disclaimer

OMCAN IS NOT RESPONSIBLE FOR ANY DAMAGES DUE TO WATER LEAKS. WARRANTY FOR WATER LEAKS IS VOID IF THE AMBIENT ROOM TEMPERATURE EXCEEDS 75°F AND 55% RELATIVE HUMIDITY, AND THE APPLIANCE DRAIN IS NOT CONNECTED DIRECTLY TO A FLOOR DRAIN.

OMCAN N'EST PAS RESPONSABLE DES DOMMAGES DUS AUX FUITES D'EAU. LA GARANTIE POUR LES FUITES D'EAU EST ANNULÉE SI LA TEMPÉRATURE AMBIANTE DE LA PIÈCE DÉPASSE 75°F ET 55% D'HUMIDITÉ RELATIVE, ET SI LE DRAIN DE L'APPAREIL N'EST PAS RACCORDÉ DIRECTEMENT À UN DRAIN DE PLANCHER.

OMCAN NO SE HACE RESPONSABLE DE LOS DAÑOS CAUSADOS POR FUGAS DE AGUA. LA GARANTÍA POR FUGAS DE AGUA QUEDA ANULADA SI LA TEMPERATURA AMBIENTE SUPERA LOS 75°F Y EL 55% DE HUMEDAD RELATIVA, Y EL DESAGÜE DEL APARATO NO ESTÁ CONECTADO DIRECTAMENTE A UN DESAGÜE DE PISO.

General Information

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcan Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, saine d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bon de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés ou cueillis par un tiers transporteur.

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les

General Information

consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre lea y familiarizarse con todas las instrucciones de funcionamiento y seguridad.

Omcan le gustaría darle las gracias por la compra de esta máquina. Es de la mayor importancia para salvar estas instrucciones para futuras consultas. Además, guarda la caja original y el embalaje para el envío del equipo si servicio técnico o devolución de la máquina que se requiere.

Safety and Warranty

SAFETY WARNINGS

- When opening the door, try to reduce the length of time that it is open in order to keep the inner temperature cold.
- Do not overfill the unit with food as it will affect the cooling ability.
- Always ensure that food is completely cooled to room temperature before placing in the unit.
- The unit is to be maintained by an approved service technician.
- Do not touch the compressor as it is hot.

Safety and Warranty

- If the power cord is damaged, it must be replaced by a qualified technician.
- Children must be supervised to ensure that they do not play with the unit.
- This unit is not intended to be used by persons with reduced physical, mental or sensory capabilities, or lack of experience or knowledge unless they have been given instruction and supervision by a person responsible for their safety.
- Do not store explosive substances in this unit.
- During normal operation, the ambient noise of this unit does not exceed 70dB.
- The maximum load capacity of the shelf must not exceed 18 kg.
- To avoid damage or any additional problems, do not place with or store any corrosive items.

Warning: keep ventilation opening clear of obstructions at all times.

Warning: do not use mechanical devices or any other means of accelerated defrosting unless specified by the manufacturer.

Warning: do not damage or modify the refrigeration circuit.

Warning: do not use electrical appliances inside the food storage areas unless they are recommended by the manufacturer.

HANDLING AND INSTALLATION

HANDLE WITH CARE

Unplug from the wall socket first. Never tilt the unit over 45 degrees during handling.

DRY PLACE

Always place the unit in a dry location.

SUFFICIENT SPACE

The distance from the sides and back of the unit to the wall or other substances must be a minimum of 10cm. The efficiency of the unit may decrease if there is not enough air flow. Ensure there is sufficient air ventilation and wait for 2 hours before plugging the unit in after handling.

KEEP FROM HEAT SOURCES

Never place the unit in direct sunlight. Do not place the unit near any source of heat, doing so will reduce the refrigeration efficiency.

HEAVY OBJECTS

Never place heavy objects on top of the unit.

ALTERATIONS

Never make any holes or alterations to the unit. Do not install non-original parts or accessories.

STABLE LOCATION

Ensure the unit is located on a flat and stable surface before operation.

Safety and Warranty

ELECTRICAL CONNECTIONS

EXCLUSIVE POWER SUPPLY

The power supply must be 110-120V, 60Hz single phase with exclusive single phase three pin receptacle. Never use a multiple plug extension for this unit.

PROTECT THE CABLES

Never break, damage, cut or modify the power cables as this can lead to fire and electrocution.

DO NOT GET WET

Never flush the unit with water or other liquids. Only use a clean and damp cloth to wipe it down.

FLAMMABLES AND EXPLOSIVES

Keep all flammables and explosive substances away from the unit as the heat generated by the compressor could cause an ignition. Never spray or clean the unit with a flammable spray.

POWER OUTAGE

If the power goes out or the unit is shut down, please wait at least 4 minutes before plugging in the unit to start again.

USE FOR MEDICINE

This unit is not suitable for the storage of medical products.

RESIDENTIAL USERS: vendor assumes no liability for parts or labor coverage for component failure or other damages resulting from installation in non-commercial or residential applications. The right is reserved to deny shipment for residential usage; if this occurs, you will be notified as soon as possible.

1 YEAR PARTS AND LABOUR / 5 YEARS PARTS ONLY ON COMPRESSOR WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule an Omcan authorized service technician to repair the equipment locally.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see <https://omcan.com/disclaimer> for complete info.

WARNING:

The packaging components are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

Safety and Warranty

DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!

Technical Specifications

Model	RS-CN-0042-2	RS-CN-0052-2	RS-CN-0062-2	RS-CN-0132-2
Item Number	48667	48668	48669	48670
Capacity	42 L / 1.48 cu.ft.	52 L / 1.83 cu.ft.	62 L / 2.18 cu.ft.	132 L / 4.66 cu.ft.
Temperature Range	0 - 12°C / 32 - 53.6°F			
Rated Input Power	150W			
Refrigerant	R290 (35g)			
Class	4			
Color	White / Black / Silver			
Net Weight	81.6 lbs. / 37 kgs.	88.2 lbs. / 40 kgs.	95.9 lbs. / 43.5 kgs.	108 lbs. / 49 kgs.
Packaging Weight	88.2 lbs. / 40 kgs.	94.8 lbs. / 43 kgs.	102.5 lbs. / 46.5 kgs.	114.6 lbs. / 52 kgs.
Net Dimensions	46.2" x 16.8" x 11.7" 1174 x 426 x 296mm	53.1" x 16.8" x 11.7" 1350 x 426 x 296mm	60.1" x 16.8" x 11.7" 1526 x 426 x 296mm	70.7" x 16.8" x 11.7" 1797 x 426 x 296mm
Packaging Dimensions	49.9" x 20.1" x 13.8" 1267 x 510 x 350mm	56.8" x 20.1" x 13.8" 1443 x 510 x 350mm	63.7" x 20.1" x 13.8" 1619 x 510 x 350mm	74.4" x 20.1" x 13.8" 1890 x 510 x 350mm


Operation

BEFORE USE

Plug the unit into an exclusive 110-120V socket. Once the unit has been running, place your hand on the air extractor to confirm that it is sufficiently cold. Once it reaches a suitable temperature, you may put food inside.

DIGITAL TEMPERATURE CONTROLLER

Refrigerant LED Defrost LED

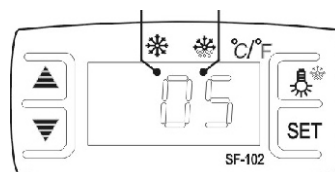

FEATURES OF FUNCTION

- It is a mini-sized and intergrated intelligent controller and applicable to the compressor of one HP.
- The main functions are: temperature display, temperature control, manual/automatic defrost, light control,

Operation

value storing, self testing, parameter locking.

FRONT PANEL OPERATION

1. Set temperature: press the SET button, the set temperature is displayed. Press the UP or DOWN buttons to modify and store the displayed value. Press the SET button to exit the adjustment and display the cold room temperature.
2. If no more buttons are pressed within 10 seconds, the cold room temperature will be displayed.
3. Light: press the LIGHT button, the light turns on. Press it again, and the light turns off.
4. Manual start/stop defrost: press the LIGHT button and hold for 6 seconds to start or stop the defrost.
5. The indicator light blinks when the compressor is not working, and the indicator light is on when the compressor is working.
6. Defrost LED: during defrosting, the LED is on. When it stops defrosting, the LED is off. During the delay display of defrost, the LED flashes.
7. Digital controller reset: when the display shows "disorder", press the DOWN button for 2 seconds until the buzzer rings. Quickly press the UP button for 6 seconds until the buzzer rings again, the display will flash for 3 seconds and it restores to the factory settings.

Maintenance

Notice: always unplug the unit before performing any form of maintenance.

1. Clean the fridge regularly using a clean, damp cloth. Do not use cleaning detergents such as soap, acetone or gasoline.
2. Clean the outside by dipping a soft cloth in a mild detergent (washing up liquid) to clean the outside. Then wipe with a dry, soft cloth.
3. Clean the inside by removing the tray and cleaning with water. Use a soft, damp cloth to wipe the interior.
4. Turning off for prolonged periods of time: take out all food and unplug the unit from the socket. Clean the inside and outside thoroughly and open the door to allow it to dry completely. Be careful as the glass can be easily broken.
5. Replacement of the light: if the LED is damaged or burnt out, it must be replaced by the manufacturer or an approved service agent.
6. Frost can accumulate on the unit. If the frost thickness is more than 5mm, it could seriously affect the cooling of the unit and the running time of the compressor will be prolonged accordingly. Manual defrosting at regular intervals is recommended.

DEFROSTING METHOD


- Unplug the refrigerator or turn off the power switch. Also open the door of the unit is applicable.
- Take out all the food from the unit.
- Depending on the ambient room temperature, defrosting time is between 2-12 hours. Do not turn on the unit until the frost melts completely.
- When defrosting, do not use sharp tools to remove the frost. Doing so will damage the unit.

Troubleshooting

Problem	Cause	Solution
No refrigeration.	Is the plug in the socket correctly?	Check the plug.
	Is the fuse broken?	Check the fuse and replace if needed.
	Is there no power from the socket?	Plug another unit into the socket to check if it is working.
Unsatisfactory refrigeration.	Is the unit in direct sunlight or near a heat source?	Move the unit away from the heat source or sunlight.
	Is the unit is a poorly ventilated area?	Move to a location with improved ventilation.
	Does the door close correctly? Is the door left open?	Check the door.
	Is the unit too full?	Remove some food.
	Is the temperature controller correct?	Check the controller.
Unit is making an irregular noise.	Is the unit on a flat and stable surface?	Move to a flat and stable surface.
	Is anything touching the unit?	Move the unit so it is not touching anything.
	Is there a loose part in the unit?	Check the interior for any loose parts.
Contact the manufacture if simple troubleshooting does not solve the problems.		

Parts Breakdown

Model RS-CN-0042-2 48667

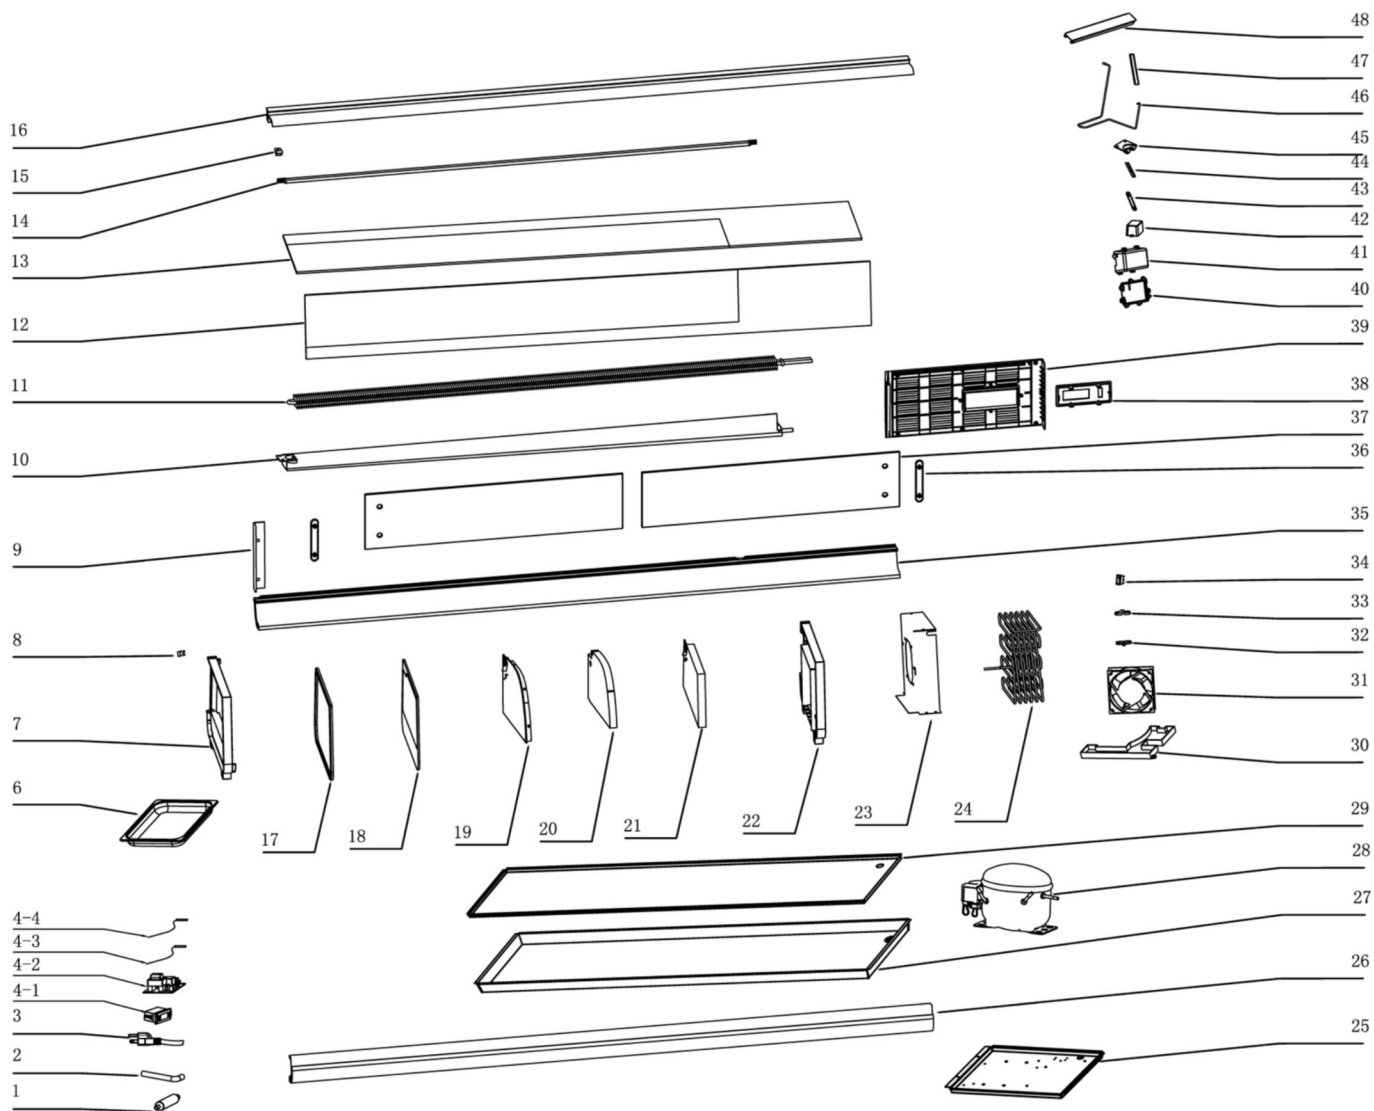


Parts Breakdown

Model RS-CN-0042-2 48667

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
60144	Dry Filter for 48667	1	AV000	Upper Pillar for 48667	16	61245	Wire Clamp Cover for 48667	33
60105	Water Discharge Pipe for 48667	2	67366	Glass Silica Ring for 48667	17	30597	Switch for 48667	34
AA062	Power Cord for 48667	3	AV001	Side Glass for 48667	18	AV009	Rear Pillar for 48667	35
AA082	Temperature Display for 48667	4.1	AV002	Cover of Middle Separator for 48667	19	AV010	Handle for 48667	36
AP262	Main Circuit Board for 48667	4.2	67363	Foam of Middle Separator for 48667	20	70422	Door Glass for 48667	37
AR656	Defrosting Probe for 48667	4.3	AV003	Middle Separator for 48667	21	AV011	Switch Panel for 48667	38
AU992	Temperature Probe for 48667	4.4	AV004	Left Plastic Panel for 48667	22	AV012	Rear Plastic Panel for 48667	39
60098	1/3 GN Pan for 48667	6	AV005	Condenser Guard for 48667	23	AP285	Controller Box Cover for 48667	40
AU993	Right Panel for 48667	7	AV006	Condenser for 48667	24	AP286	Controller Box for 48667	41
AU994	Glass Hook for 48667	8	AV007	Bottom Panel of Compressor for 48667	25	68356	LED Driver for 48667	42
AU995	Platen of Glass for 48667	9	AV008	Front Pillar for 48667	26	AV013	High Pressure Evaporation Tube Pressure Plate for 48667	43
67371	Top Water Tray for 48667	10	60104	Foam Material for 48667	27	60134	Square Gasket for 48667	44
AU996	Top Evaporator for 48667	11	AH719	Compressor for 48667	28	AV014	Upper Evaporator End Fixing Plate for 48667	45
AU997	Front Glass for 48667	12	60106	Bottom Panel for 48667	29	AV015	High Pressure Evaporation Tube for 48667	46
AU998	Top Glass for 48667	13	60139	Water Receiver for 48667	30	AV016	F-Type Sealing Strip for 48667	47
AR657	LED Light for 48667	14	AP542	Evaporator Fan Motor for 48667	31			
AU999	LED Light Buckle for 48667	15	61246	Wire Clip Holder for 48667	32			

Parts Breakdown

Model RS-CN-0052-2 48668

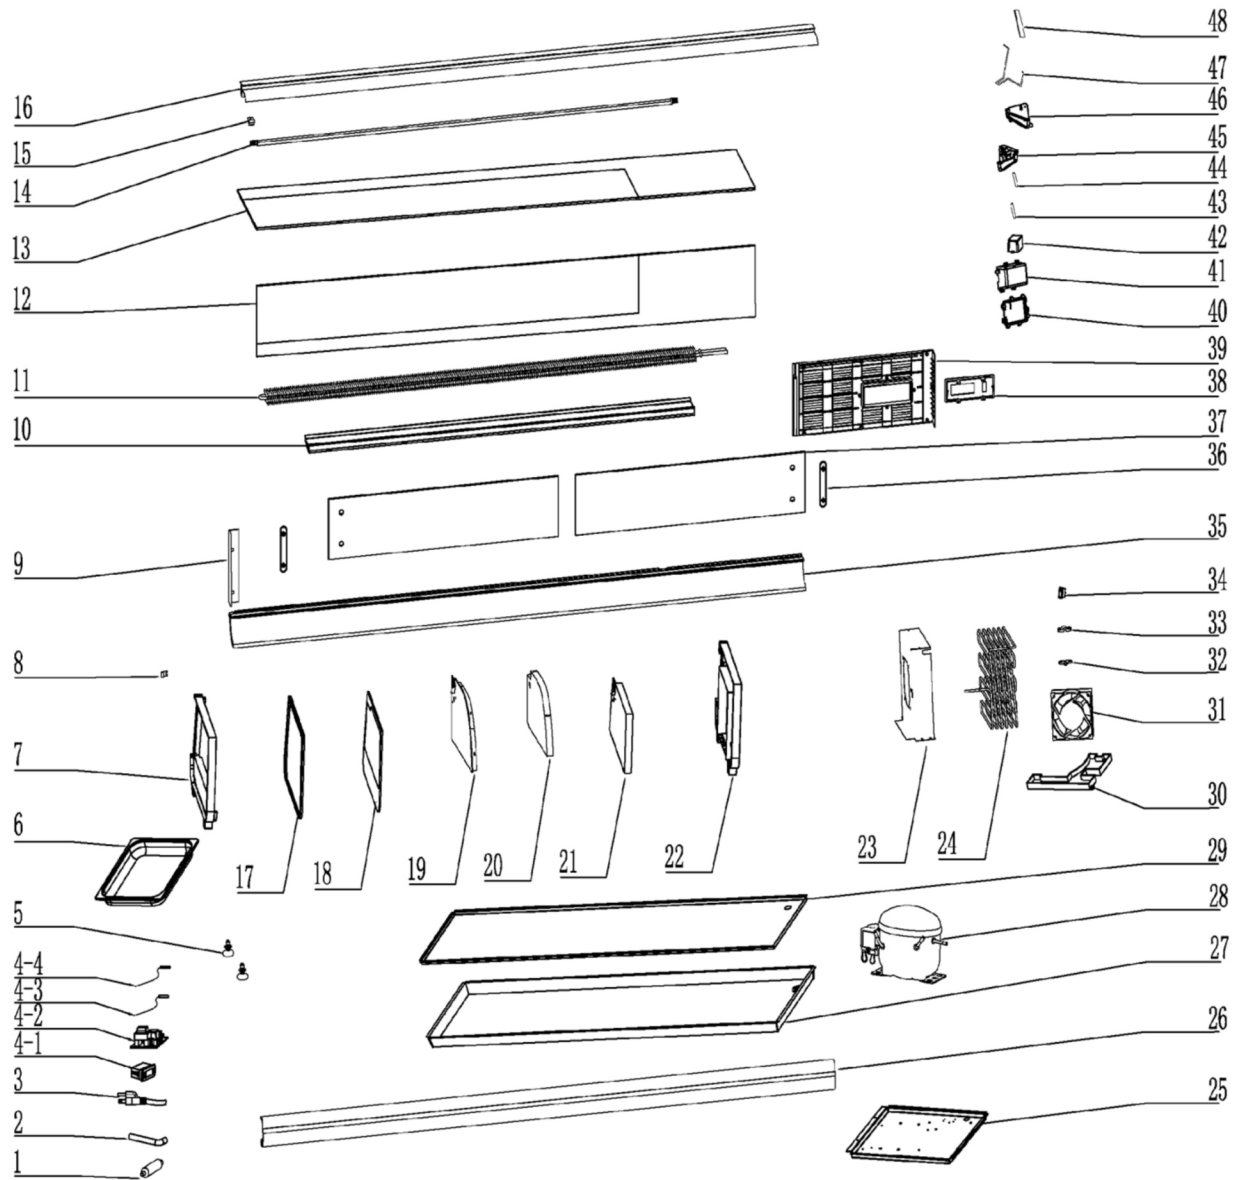


Parts Breakdown

Model RS-CN-0052-2 48668

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
60144	Dry Filter for 48668	1	AV021	Upper Pillar for 48668	16	61245	Wire Clamp Cover for 48668	33
60105	Water Discharge Pipe for 48668	2	67366	Glass Silica Ring for 48668	17	30597	Switch for 48668	34
AA062	Power Cord for 48668	3	AV001	Side Glass for 48668	18	AV023	Rear Pillar for 48668	35
AA082	Temperature Display for 48668	4.1	AV002	Cover of Middle Separator for 48668	19	AV010	Handle for 48668	36
AP262	Main Circuit Board for 48668	4.2	67363	Foam of Middle Separator for 48668	20	67375	Door Glass for 48668	37
AR656	Defrosting Probe for 48668	4.3	AV003	Middle Separator for 48668	21	AV011	Switch Panel for 48668	38
AU992	Temperature Probe for 48668	4.4	AU993	Right Panel for 48668	22	AV012	Rear Plastic Panel for 48668	39
60098	1/3 GN Pan for 48668	6	AV005	Condenser Guard for 48668	23	AP285	Controller Box Cover for 48668	40
AV004	Left Plastic Panel for 48668	7	AV006	Condenser for 48668	24	AP286	Controller Box for 48668	41
AU994	Glass Hook for 48668	8	AV007	Bottom Panel of Compressor for 48668	25	68356	LED Driver for 48668	42
AU995	Platen of Glass for 48668	9	AV022	Front Pillar for 48668	26	AV013	High Pressure Evaporation Tube Pressure Plate for 48668	43
AV017	Pillar of Upper Water Tray for 48668	10	60153	Foam Material for 48668	27	60134	Square Gasket for 48668	44
AV018	Top Evaporator for 48668	11	AH719	Compressor for 48668	28	AV024	Left Fixing Plate of Upper Water Tray for 48668	45
AV019	Front Glass for 48668	12	60154	Bottom Panel for 48668	29	AV025	Right Fixing Plate of Upper Water Tray for 48668	46
AV020	Top Glass for 48668	13	60139	Water Receiver for 48668	30	AV015	High Pressure Evaporation Tube for 48668	47
AR666	LED Light for 48668	14	AP542	Evaporator Fan Motor for 48668	31	AV016	F-Type Sealing Strip for 48668	48
AU999	LED Light Buckle for 48668	15	61246	Wire Clip Holder for 48668	32			

Parts Breakdown

Model RS-CN-0062-2 48669

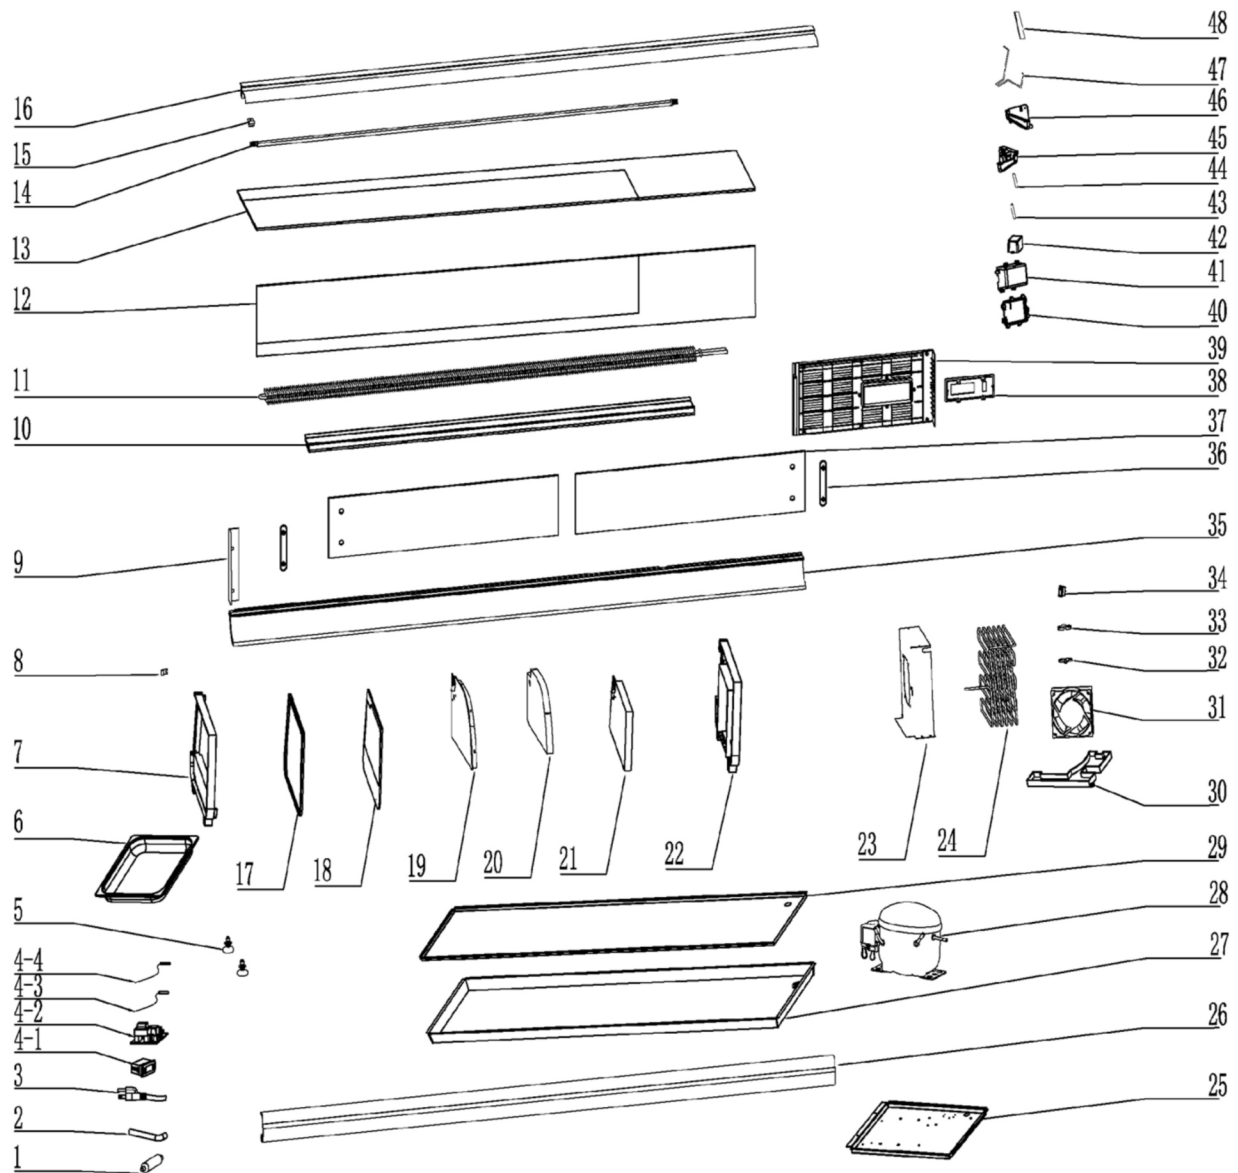


Parts Breakdown

Model RS-CN-0062-2 48669

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
60144	Dry Filter for 48669	1	AV030	Upper Pillar for 48669	16	61245	Wire Clamp Cover for 48669	33
60105	Water Discharge Pipe for 48669	2	67366	Glass Silica Ring for 48669	17	30597	Switch for 48669	34
AA062	Power Cord for 48669	3	AV001	Side Glass for 48669	18	AV032	Rear Pillar for 48669	35
AA082	Temperature Display for 48669	4.1	AV002	Cover of Middle Separator for 48669	19	AV010	Handle for 48669	36
AP262	Main Circuit Board for 48669	4.2	67363	Foam of Middle Separator for 48669	20	65422	Door Glass for 48669	37
AR656	Defrosting Probe for 48669	4.3	AV003	Middle Separator for 48669	21	AV011	Switch Panel for 48669	38
AU992	Temperature Probe for 48669	4.4	AU993	Right Panel for 48669	22	AV012	Rear Plastic Panel for 48669	39
60098	1/3 GN Pan for 48669	6	AV005	Condenser Guard for 48669	23	AP285	Controller Box Cover for 48669	40
AV004	Left Plastic Panel for 48669	7	AV006	Condenser for 48669	24	AP286	Controller Box for 48669	41
AU994	Glass Hook for 48669	8	AV007	Bottom Panel of Compressor for 48669	25	68356	LED Driver for 48669	42
AU995	Platen of Glass for 48669	9	AV031	Front Pillar for 48669	26	AV013	High Pressure Evaporation Tube Pressure Plate for 48669	43
AV026	Pillar of Upper Water Tray for 48669	10	60166	Foam Material for 48669	27	60134	Square Gasket for 48669	44
AV027	Top Evaporator for 48669	11	AH719	Compressor for 48669	28	AV024	Left Fixing Plate of Upper Water Tray for 48669	45
AV028	Front Glass for 48669	12	60167	Bottom Panel for 48669	29	AV025	Right Fixing Plate of Upper Water Tray for 48669	46
AV029	Top Glass for 48669	13	60139	Water Receiver for 48669	30	AV015	High Pressure Evaporation Tube for 48669	47
AR669	LED Light for 48669	14	AP542	Evaporator Fan Motor for 48669	31	AV016	F-Type Sealing Strip for 48669	48
AU999	LED Light Buckle for 48669	15	61246	Wire Clip Holder for 48669	32			

Parts Breakdown

Model RS-CN-0132-2 48670

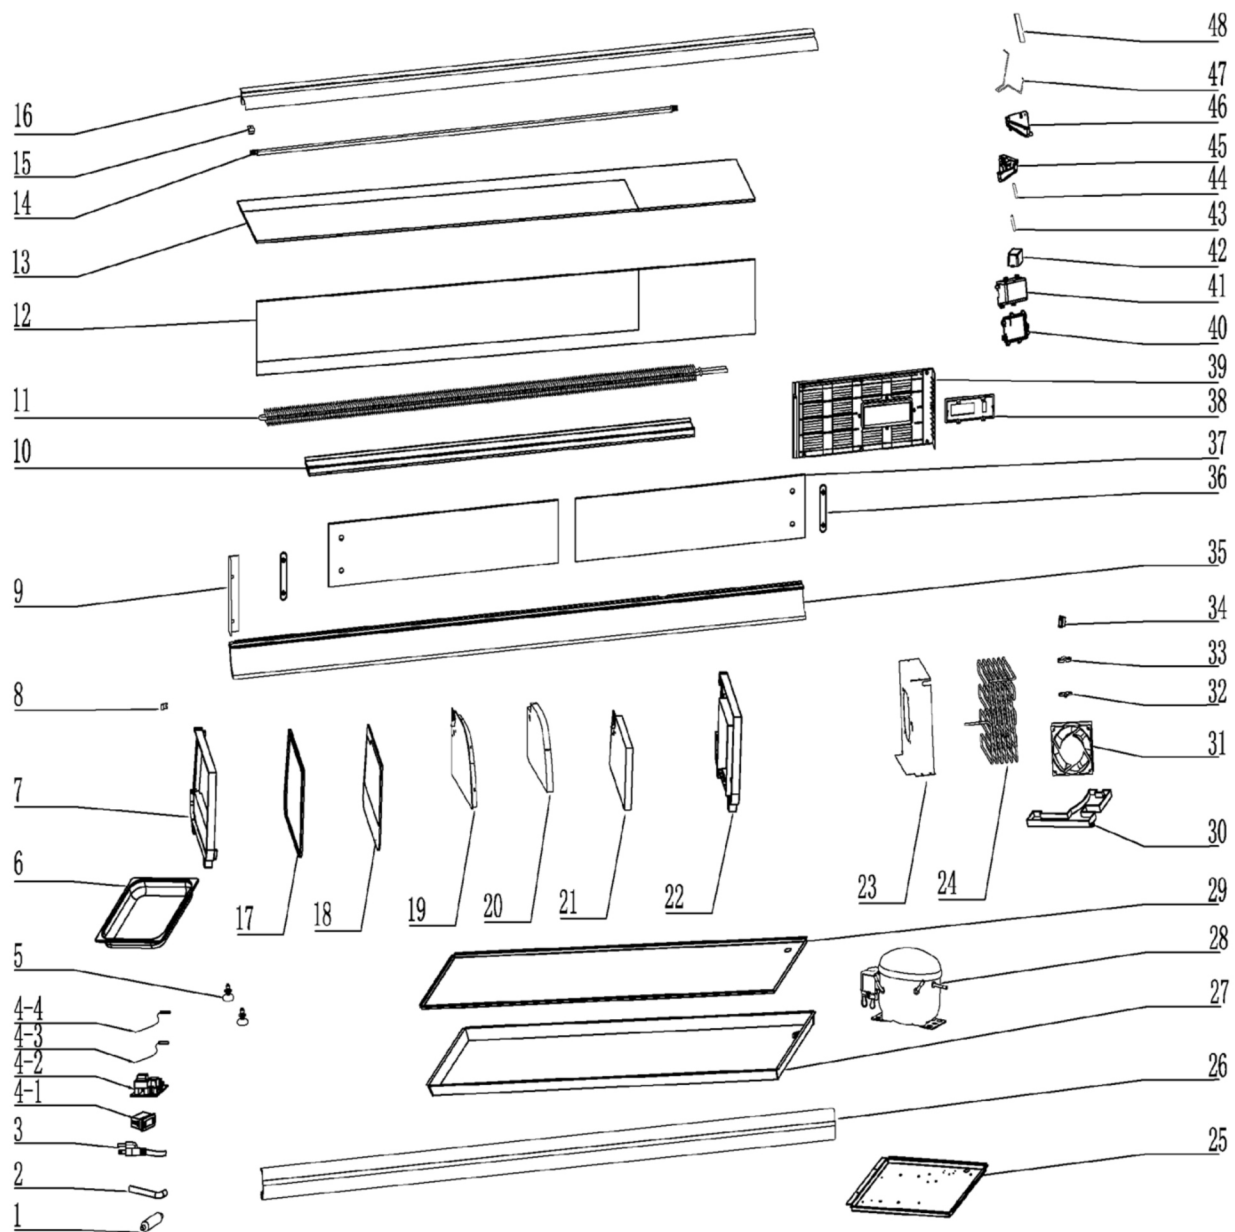

Parts Breakdown

Model RS-CN-0132-2 48670

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
60144	Dry Filter for 48670	1	AU999	LED Light Buckle for 48670	15	61246	Wire Clip Holder for 48670	32
60105	Water Discharge Pipe for 48670	2	AV037	Upper Pillar for 48670	16	61245	Wire Clamp Cover for 48670	33
AA062	Power Cord for 48670	3	67366	Glass Silica Ring for 48670	17	30597	Switch for 48670	34
AA082	Temperature Display for 48670	4.1	AV001	Side Glass for 48670	18	AV039	Rear Pillar for 48670	35
AP262	Main Circuit Board for 48670	4.2	AV002	Cover of Middle Separator for 48670	19	AV010	Handle for 48670	36
AR656	Defrosting Probe for 48670	4.3	67363	Foam of Middle Separator for 48670	20	AV040	Door Glass for 48670	37
AU992	Temperature Probe for 48670	4.4	AV003	Middle Separator for 48670	21	AV011	Switch Panel for 48670	38
AP755	Adjustable Feet for 48670	5	AU993	Right Panel for 48670	22	AV012	Rear Plastic Panel for 48670	39
60178	1/2 GN Pan for 48670	6	AV005	Condenser Guard for 48670	23	AP285	Controller Box Cover for 48670	40
AV004	Left Plastic Panel for 48670	7	AV006	Condenser for 48670	24	AP286	Controller Box for 48670	41
AU994	Glass Hook for 48670	8	AV007	Bottom Panel of Compressor for 48670	25	AD552	LED Transformer for 48670	42
AU995	Platen of Glass for 48670	9	AV038	Front Pillar for 48670	26	AV013	High Pressure Evaporation Tube Pressure Plate for 48670	43
AV033	Pillar of Upper Water Tray for 48670	10	60179	Foam Material for 48670	27	60134	Square Gasket for 48670	44
AV034	Top Evaporator for 48670	11	AH719	Compressor for 48670	28	AV024	Left Fixing Plate of Upper Water Tray for 48670	45
AV035	Front Glass for 48670	12	60180	Bottom Panel for 48670	29	AV025	Right Fixing Plate of Upper Water Tray for 48670	46
AV036	Top Glass for 48670	13	60139	Water Receiver for 48670	30	AV015	High Pressure Evaporation Tube for 48670	47
AR673	LED Light for 48670	14	AP542	Evaporator Fan Motor for 48670	31	AV016	F-Type Sealing Strip for 48670	48



Electrical Schematics

Model RS-CN-0042-2 48667

Model RS-CN-0052-2 48668

Model RS-CN-0062-2 48669

Model RS-CN-0132-2 48670

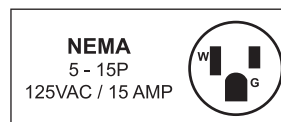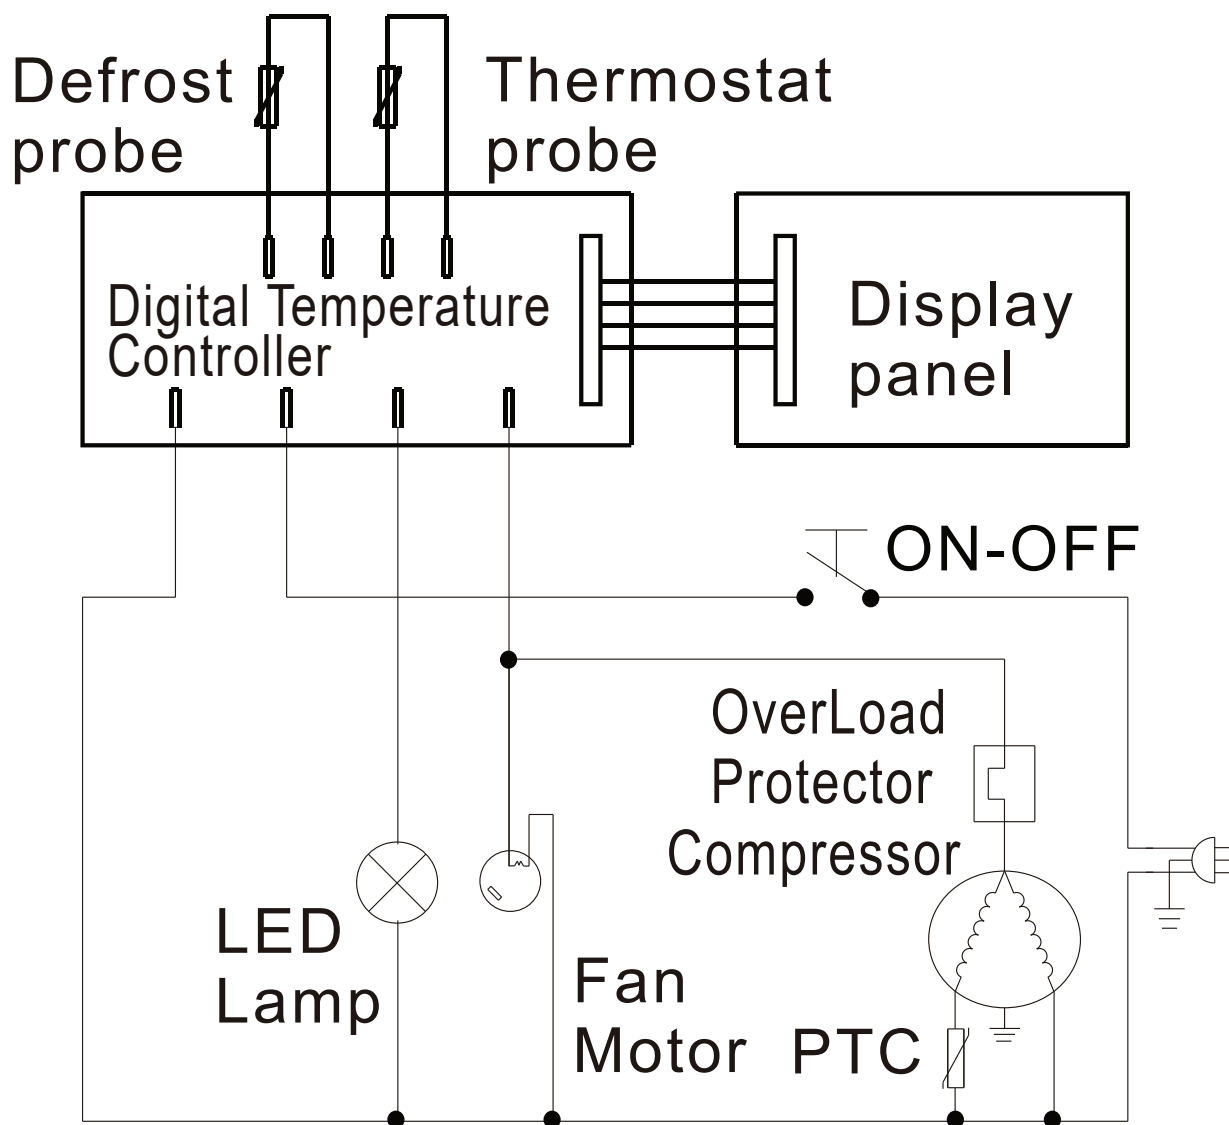

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.

Notes

[illegible]

Notes

[illegible]



Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

<https://omcan.com/warranty-registration/>

For mailing in Canada

Pour postale au Canada

Por correo en Canadá

OMCAN

PRODUCT WARRANTY REGISTRATION

3115 Pepper Mill Court,
Mississauga, Ontario
Canada, L5L 4X5

For mailing in the US

Pour diffusion aux États-Unis

Por correo en los EE.UU.

OMCAN

PRODUCT WARRANTY REGISTRATION

4450 Witmer Industrial Estates, Unit 4,
Niagara Falls, New York
USA, 14305

or email to: service@omcan.com



Purchaser's Information

Name: _____

Address: _____

City: _____ Province or State: _____ Postal or Zip: _____

Country: _____

Dealer from which Purchased: _____

Dealer City: _____ Dealer Province or State: _____

Invoice: _____

Model Name: _____ Model Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____

Would you like to extend the warranty? ☐ Yes ☐ No

Company Name: _____

Telephone: _____

Email Address: _____

Type of Company:

- | | | |
|--|--------------------------------------|----------------------------------|
| ☐ Restaurant | ☐ Bakery | ☐ Deli |
| ☐ Butcher | ☐ Supermarket | ☐ Caterer |
| ☐ Institution (<i>specify</i>): _____ | | |
| ☐ Other (<i>specify</i>): _____ | | |

Serial Number: _____

Date of Installation (MM/DD/YYYY): _____

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 6,500 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 6500 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 6,500 productos con origen a nivel mundial.

