



Refrigerated Showcases


Models RS-CN-0230, 0380

Items 40438, 40004

Instruction Manual



Revised - 06/20/2025

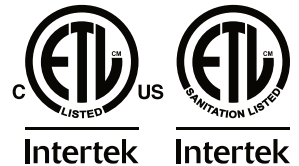

Toll Free: 1-800-465-0234
Fax: 905-607-0234
Email: service@omcan.com
www.omcan.com



Table of Contents

Model RS-CN-0230 / Model RS-CN-0380

Section	Page
Disclaimer	3
General Information	4 - 5
Safety and Warranty	5 - 6
Technical Specifications	7
Installation	7 - 8
Operation	8 - 9
Maintenance	9 - 10
Troubleshooting	10 - 11
Parts Breakdown	12 - 15
Electrical Schematics	16
Notes	17 - 18
Warranty Registration	19

Disclaimer

OMCAN IS NOT RESPONSIBLE FOR DIMINISHED COOLING OR ANY DAMAGES DUE TO WATER LEAKS. WARRANTY FOR WATER LEAKS IS VOID IF THE AMBIENT ROOM TEMPERATURE EXCEEDS 75°F AND 55% RELATIVE HUMIDITY, AND THE APPLIANCE DRAIN IS NOT CONNECTED DIRECTLY TO A FLOOR DRAIN.

OMCAN N'EST PAS RESPONSABLE DE LA DIMINUTION DU REFROIDISSEMENT OU DE TOUT DOMMAGE DÛ À DES FUITES D'EAU. LA GARANTIE CONTRE LES FUITES D'EAU EST ANNULÉE SI LA TEMPÉRATURE AMBIANTE DE LA PIÈCE DÉPASSE 75 °F ET 55 % D'HUMIDITÉ RELATIVE ET QUE LE DRAIN DE L'APPAREIL N'EST PAS CONNECTÉ DIRECTEMENT À UN SIPHON DE SOL.

OMCAN NO ES RESPONSABLE DE LA DISMINUCIÓN DEL ENFRIAMIENTO NI DE NINGÚN DAÑO DEBIDO A FUGAS DE AGUA. LA GARANTÍA POR FUGAS DE AGUA QUEDA ANULADA SI LA TEMPERATURA AMBIENTE EXCEDE LOS 75 °F Y EL 55 % DE HUMEDAD RELATIVA, Y EL DRENAJE DEL ELECTRODOMÉSTICO NO ESTÁ CONECTADO DIRECTAMENTE A UN DRENAJE DEL PISO.

General Information

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcan Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, saine d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bon de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés ou cueillis par un tiers transporteur.

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les



General Information

consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre lea y familiarizarse con todas las instrucciones de funcionamiento y seguridad.

Omcan le gustaría darle las gracias por la compra de esta máquina. Es de la mayor importancia para salvar estas instrucciones para futuras consultas. Además, guarda la caja original y el embalaje para el envío del equipo si servicio técnico o devolución de la máquina que se requiere.

Safety and Warranty

CAUTIONS:

- Never block the air suction outlet to keep air circulation and refrigeration capability.
- Do not overfill the unit or it may hinder its operation.
- Adjust the rack height for proper food storage.

USE AND CAUTION:

- Cool hot food before placing it in the refrigerator.
- Only trained technicians should repair damaged power cables with special tools.

Safety and Warranty

- Never touch the compressor to avoid injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with or around the appliance.
- The operation manual is not suitable for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.

SUITABLE FOR HIGH TRAFFIC AREAS WHERE NOISE LEVELS ARE NOT A CONCERN.

OMCAN IS NOT RESPONSIBLE FOR DIMINISHED COOLING OR ANY DAMAGES DUE TO WATER LEAKS. WARRANTY FOR WATER LEAKS IS VOID IF THE AMBIENT ROOM TEMPERATURE EXCEEDS 75°F AND 55% RELATIVE HUMIDITY, AND THE APPLIANCE DRAIN IS NOT CONNECTED DIRECTLY TO THE FLOOR DRAIN.

RESIDENTIAL USERS: vendor assumes no liability for parts or labor coverage for component failure or other damages resulting from installation in non-commercial or residential applications. The right is reserved to deny shipment for residential usage; if this occurs, you will be notified as soon as possible.

1 YEAR PARTS AND LABOUR WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule an Omcan authorized service technician to repair the equipment locally.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see <https://omcan.com/disclaimer> for complete info.

WARNING:

The packaging components are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!

Technical Specifications

Model	RS-CN-0230	RS-CN-0380
Item Number	40438	40004
Rated Input Power	1230 W	970 W
Electrical Heating Element	450 W	
Capacity	230 L / 8.12 cu.ft.	380 L / 13.42 cu.ft.
Electrical	110-120V / 60Hz / 1	
Lamp Power	1.44 W x 2 (LED)	2.8 W x 2 (LED)
Temperature Range	2 - 10°C / 35.6 - 50°F	
Max Ambient Temp Rating	24°C / 75°F	
Refrigerant & Injection	R290 and 143g	
Type of Climate	6	
Current	10.1A	9.7A
Shelf Size (DxW)	10" x 19.5" / 254 x 495mm	10" x 35.3" / 254 x 895mm
	12" x 19.5" / 305 x 495mm	12" x 35.3" / 305 x 895mm
	14" x 19.5" / 356 x 495mm	14" x 35.3" / 356 x 895mm
Inner Dimensions (WDH)	21.4" x 22.5" x 33"	37" x 22.5" x 33"
	542 x 572 x 838mm	940 x 572 x 838mm
Foaming Agent	XPS	
Net Weight	202.8 lbs. / 92 kgs.	244.7 lbs. / 111 kgs.
Packaging Weight	224.9 lbs. / 102 kgs.	269 lbs. / 122 kgs.
Dimensions (WDH)	23.6" x 34.5" x 60.1"	39.4" x 34.5" x 60.1"
	599 x 876 x 1527mm	1000 x 876 x 1527mm
Packaging Dimensions	26" x 38" x 63"	42" x 38" x 63"
	660 x 965 x 1600mm	1067 x 965 x 1600mm

Installation

HANDLING AND INSTALLATION

HANDLE WITH CARE

Unplug from the wall socket first. Never tilt it over 45 degrees during handling.

DRY LOCATION

Always place the refrigerator in a dry location. Unit is to be used indoors only.

Installation

SUFFICIENT SPACE The distance from both sides and back of refrigerator to wall or other objects must not be less than 10cm/4". The refrigeration capability might be decreased if the surrounding space is too small to circulate air.	GOOD VENTILATION Always place the refrigerator in a location with good ventilation. For the first time use, wait for 2 hours after handling and then plug it into the wall socket and start it.
FAR FROM HEAT SOURCE Never place the refrigerator directly under sunlight. Never locate it near any heat sources or heaters to prevent it from reducing refrigeration capability.	NO HEAVY LOADS Never place any heavy objects on top of the refrigerator.
DO NOT MAKE HOLES Never make holes on the refrigerator. Never install other objects on the refrigerator.	STABLE SURFACE Unpack and place the refrigerator on a flat and stable surface.

PREPARATION AND POWER SUPPLY

EXCLUSIVE POWER SOCKET The power supply should be 110-120V, 60Hz single phase AC with an exclusive single phase three pin receptacle (127V, 10A) and fuse (6A). The power receptacle must have a reliable ground connection.	DO NOT SHARE THE SOCKET Never let the refrigerator share the common socket with other appliances, otherwise the cable becomes hot and fire might be resulted.
PROTECT CABLES Never break or damage the cables otherwise electrocution and fire might be resulted.	DO NOT FLUSH WITH WATER Never flush the refrigerator surface with water otherwise electrocution might be resulted.
KEEP AWAY FROM FLAMMABLES AND EXPLOSIVES Never put any flammable or explosive substances inside the refrigerator such as ether, gasoline, alcohol, adhesive and explosives. Never place dangerous substances near the refrigerator.	DO NOT SPRAY WITH FLAMMABLES To spray flammables such as paint or coating nearby the refrigerator is not advised, fire might be resulted.
AFTER POWER BREAK After power break or unplugging the refrigerator, always wait at least 5 minutes and then you may plug in the refrigerator and start it again.	DO NOT STORE MEDICINE No medicine can be kept inside the refrigerator.

Operation

USE AND CAUTION

Before Use


Plug the refrigerator in a 110-120V exclusive socket. Once the refrigerator is running, put a hand on the air suction to confirm it is sufficiently cold. Then you may put food inside the cold box.

Operation

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

DIGITAL TEMPERATURE CONTROLLER

Refrigerant LED Defrost LED

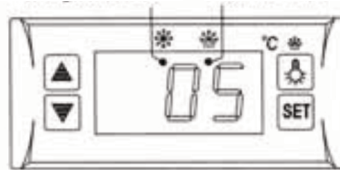

Features of function

- It is a mini-sized and integrated intelligent controller and applicable to the compressor of one HP.
- The main functions are: temperature display, temperature control, manual/automatic defrost by burning off, light control, value storing, self testing, parameter locking.

FRONT PANEL OPERATION

1. Set temperature:
Press the set button, the set temperature is displayed.
Press the up or down buttons to modify and store the displayed value.
Press the set button to exit the adjustment and display the cold-room temperature.
2. If no more buttons are pressed within 10 seconds, the cold-room temperature will be displayed.
3. Light:
Press the light button, the light turns on. Press it again, the light turns off.
Manual start/stop defrost: press the light button and hold for 6 seconds to defrost or stop defrost.
4. Refrigerant LED:
During refrigeration, the LED is on. When the cold-room temperature is constant, the LED is off. During the delay start, the LED flashes.
5. Defrost LED:
During defrosting, the LED is on. When it stops defrosting, the LED is off. During the delay display of defrost, the LED flashes.

Maintenance


1. Cabinet cleaning:
The product should be cleaned once a week with the power supply disconnected. In cleaning please use water or non-corrosive cleansers. Do not wash it directly with a water faucet.
2. Cleaning for filter:

Maintenance

- If the error message “EE4” appears on the display, please clean the filter immediately. After cleaning, if the error message “EE4” appears again, please contact Omcan.

Instructions for cleaning:

- Before cleaning, please make sure the device has been disconnected from the power socket. Pull out the handle of the front bottom base panel.
- Open the front bottom base panel, take out the filter and clean it.

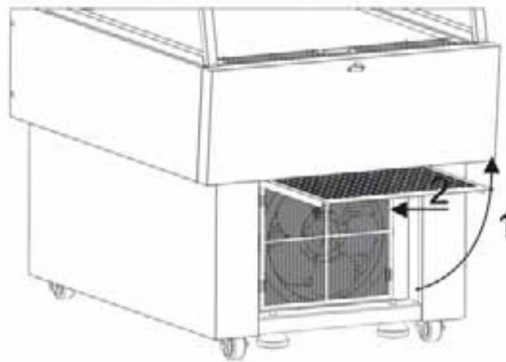

3. Leaking check. Observe all connectors and welding joints for oil stain, which indicates a must for patching measures or call Omcan.
4. Frequently observe the operation of the product. In case of any abnormal noise, smell or smog, cut the power supply immediately and call Omcan for help. Do not restart the product before the problem is fixed.
5. Omcan will not be responsible for any accident or damage incurred by failure to follow these instructions.

SERVICE

- To maintain good refrigeration performance, a refrigeration service person should be called periodically (at least twice a year) to clean the discharge honeycomb and remove any accumulated dirt from the condenser coil and condensate evaporator pan on self-contained models. POOR CIRCULATION OF AIR THROUGH THE CONDENSER COIL WILL RESULT IN POOR REFRIGERATION PERFORMANCE.
- Dirt accumulation inside the condensate evaporator pan will reduce the pan’s capacity and affect the efficiency of the heater causing a burned out heater and an overflow of defrost water onto the store floor.

Troubleshooting

TROUBLES	CAUSES	SOLUTIONS
Strange noise under the bottom shelf.	Fan blade broken.	Power off and fix the blade.

Troubleshooting

TROUBLES	CAUSES	SOLUTIONS
Not cooling in spite of normal operation.	The unit is off.	Turn the unit on.
	Defrost is on.	Stop defrosting.
	The refrigerant is leaking.	Patch the leak and refill refrigerant.
	Unit failure.	Call Omcan.
Weak air from air curtain, and higher cabinet temperature.	Evaporator blocked by frost.	Increase melting frequency.
	Inside fan damaged.	Replace the fan.
	Temperature controller set too low.	Adjust the set point for the temperature controller.
	Vent blocked by product.	Remove the product.
Normal air curtain, but higher cabinet temperature.	Insufficient refrigerant.	Refill the refrigerant.
	Temperature controller is set too high.	Adjust the set point for the temperature controller.
	The wind curtain disturbed by strong air flow.	Removing the disturbing factors.
	Ambient temperature or humidity beyond standards.	Improve the conditions.
Melting water overflown.	Heating pipe for melting water damaged.	Replace the heating pipe.
	Water-level controller failure.	Replace the water-level controller.
	Ambient temperature or humidity beyond standards.	Improve the conditions.
Normal air curtain, but periodical fluctuation of cabinet temperature.	Condenser contaminated.	Clean the condenser.
	Poor venting of the unit.	Improve the venting conditions.
	Heat protection of compressor failure.	Replace the heat protection.
	Capillary is blocked by ice.	Replace the drying filter.
	Temperature controller failure.	Replace the temperature controller.
Water leaks on floor.	Ambient room temperature exceeds 75°F and 55% relative humidity.	Connect appliance drain to floor drain.


NOTE

The following situation is normal:

The murmur of water is heard when the refrigerator is working. It is a normal phenomenon as the coolant is circulating in the system. In wet season, condensation might be found on the outside of the refrigerator. It is not a trouble, which is caused by high humidity. Simply use cloth to wipe it.

Parts Breakdown

Model RS-CN-0230 40438

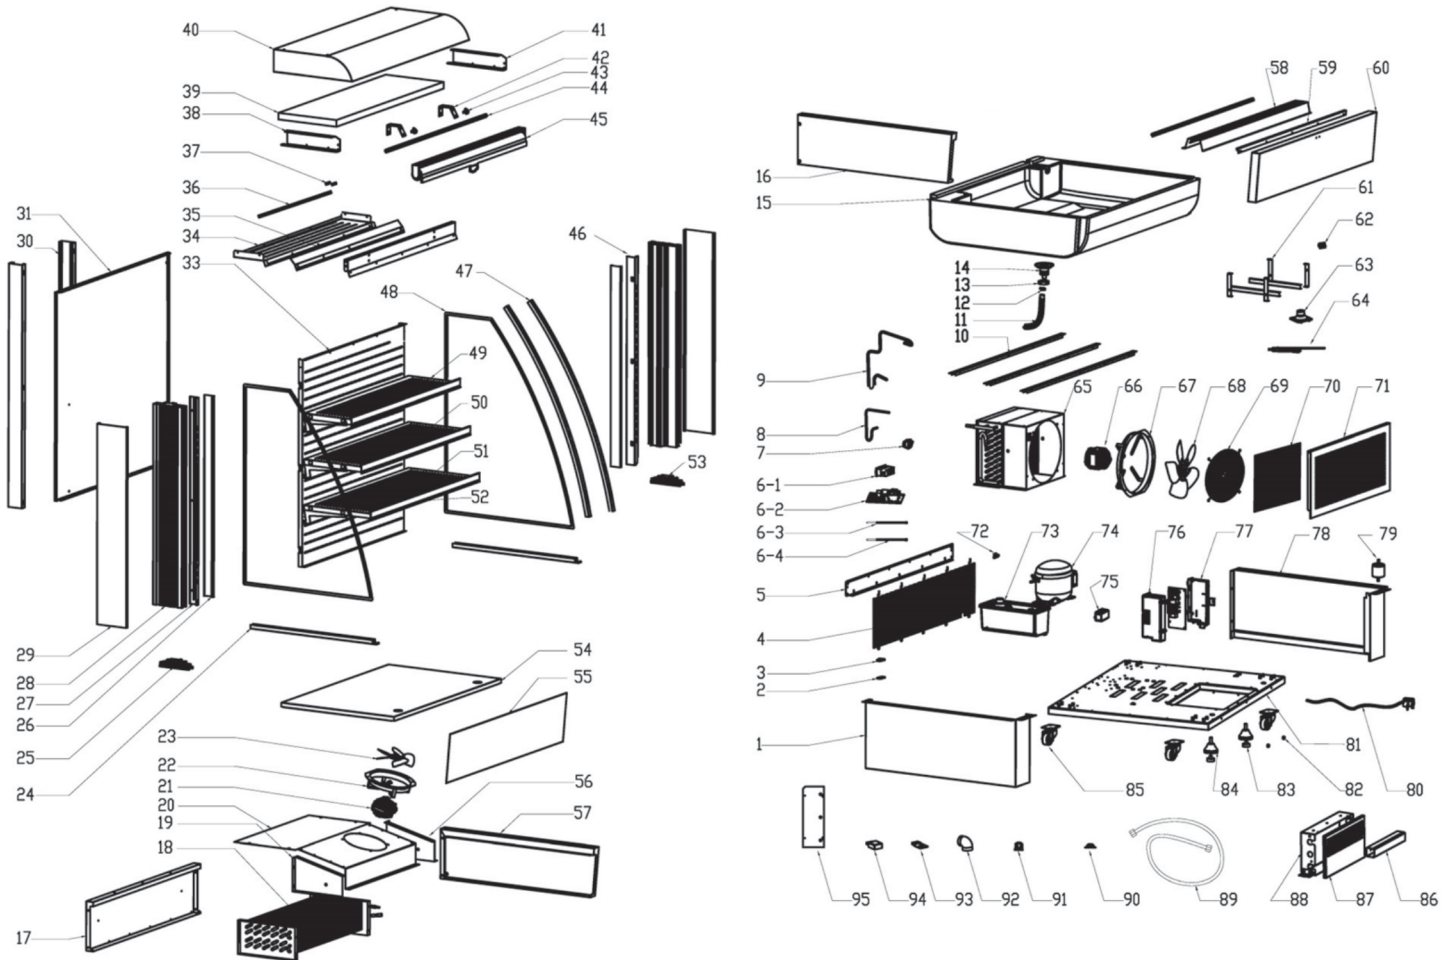


Parts Breakdown

Model RS-CN-0230 40438

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
72324	Left Panel of Base for 40438	1	AR211	Back Upper Board for 40438	31	68342	Condenser for 40438	65
61246	Wire Clip Holder for 40438	2	AD490	Ventilated Board for 40438	33	AD518	Condenser Fan Motor for 40438	66
66095	Wire Clip Cover for 40438	3	AD491	Ceiling Board of Cabinet for 40438	34	AR216	Fan Flange 2 for 40438	67
71556	Back Cover of Base for 40438	4	AD492	Air Deflector for 40438	35	68336	Fan for 40438	68
71557	Crossbar of Base for 40438	5	AR212	A-Type Seal Strip for 40438	36	AD519	Flat Net Cover for 40438	69
67648	Temperature Display for 40438	6-1	AD494	Air Deflector Joint for 40438	37	61169	Air Filter for 40438	70
AF546	Main Circuit Board for 40438	6-2	AD495	Upper Left Rail for 40438	38	AD520	Ventilated Board of Base for 40438	71
AD481	Overheating Probe for 40438	6-3	AD496	Top Foam for 40438	39	60651	Curtain Hook for 40438	72
60666	Temperature Probe for 40438	6-4	AD497	Top Cover for 40438	40	60587	Water Receiver for 40438	73
AR485	Switch (Higher Amp) for 40438	7	AD498	Upper Right Rail for 40438	41	AL305	Compressor for 40438	74
71515	Connection Pipe 1 for 40438	8	AR213	Night Curtain Bracket for 40438	42	67652	LED Transformer for 40438	75
AP521	Connection Pipe for 40438	9	AD500	Jump Ring of LED for 40438	43	61167	Circuit Board Box for 40438	76
71559	Barrier Strip for 40438	10	AR214	LED Strip for 40438	44	60594	Cover of Circuit Board Box for 40438	77
71516	Drain Pipe for 40438	11	AD502	Night Curtain for 40438	45	AD522	Right Panel of Base for 40438	78
71517	Pipe Clip for 40438	12	AD503	Right Support Pillar of Shelf for 40438	46	61224	Dry Filter for 40438	79
71518	Nut for 40438	13	AD504	Decorated Strip for 40438	47	79290	Power Cord for 40438	80
71519	Pipe Joint for 40438	14	AD505	Side Glass for 40438	48	71555	Fixed Plate for 40438	81
71560	Evaporator Holder for 40438	15	AD506	Upper Shelf for 40438	49	79295	Magnet for 40438	82
71520	Left Board of Cabinet for 40438	16	AD507	Middle Shelf for 40438	50	79293	Feet Pad for 40438	83
71561	Back Board of Cabinet for 40438	17	AD508	Bottom Shelf for 40438	51	79294	Feet for 40438	84
AL365	Evaporator for 40438	18	AD509	Price Tag Holder for 40438	52	AL357	Castor without Brake for 40438	85
71521	Left Board of Evaporator Cover for 40438	19	AD510	Cover of Right Pillar for 40438	53	60590	PVC Trucking for 40438	86
71563	Evaporator Cover for 40438	20	AD511	Bottom Board of Cabinet for 40438	54	67642	Cover of Terminal Box for 40438	87
71522	Evaporator Fan Motor for 40438	21	AD512	Glass Deflector for 40438	55	67643	Terminal Box for 40438	88
60932	Fan Guard for 40438	22	61180	Right Board of Evaporator Cover for 40438	56	60668	Drain Pipe for 40438	89
60933	Fan Blade for 40438	23	AD513	Right Board of Cabinet for 40438	57	60669	Pressing Plate of Dry Filter for 40438	90
AD482	Bottom Strip of Side Glass for 40438	24	AD514	Air Inlet Cover for 40438	58	60670	PPR Tube Strap for 40438	91
AD483	Cover of Left Pillar for 40438	25	AD515	Barrier Strip of Glass for 40438	59	AR217	PPR Elbow for 40438	92
AD484	Inner Decorative Strip for 40438	26	AD516	Front Board of Cabinet for 40438	60	79359	Cover of Junction Box for 40438	93
AD485	Left Support Pillar of Shelf for 40438	27	AR215	Bracket of Condenser Motor for 40438	61	61244	Terminal Box for 40438	94
AD486	Side Pillar of Cabinet for 40438	28	79292	Terminal for 40438	62	AR218	Right Windshield of Condenser for 40438	95
AD487	Outer Decorative Strip for 40438	29	79304	Pipe for Evaporated Water for 40438	63			
AD488	Back Barrier Strip for 40438	30	AP514	Filling Pipe for 40438	64			

Parts Breakdown

Model RS-CN-0380 40004

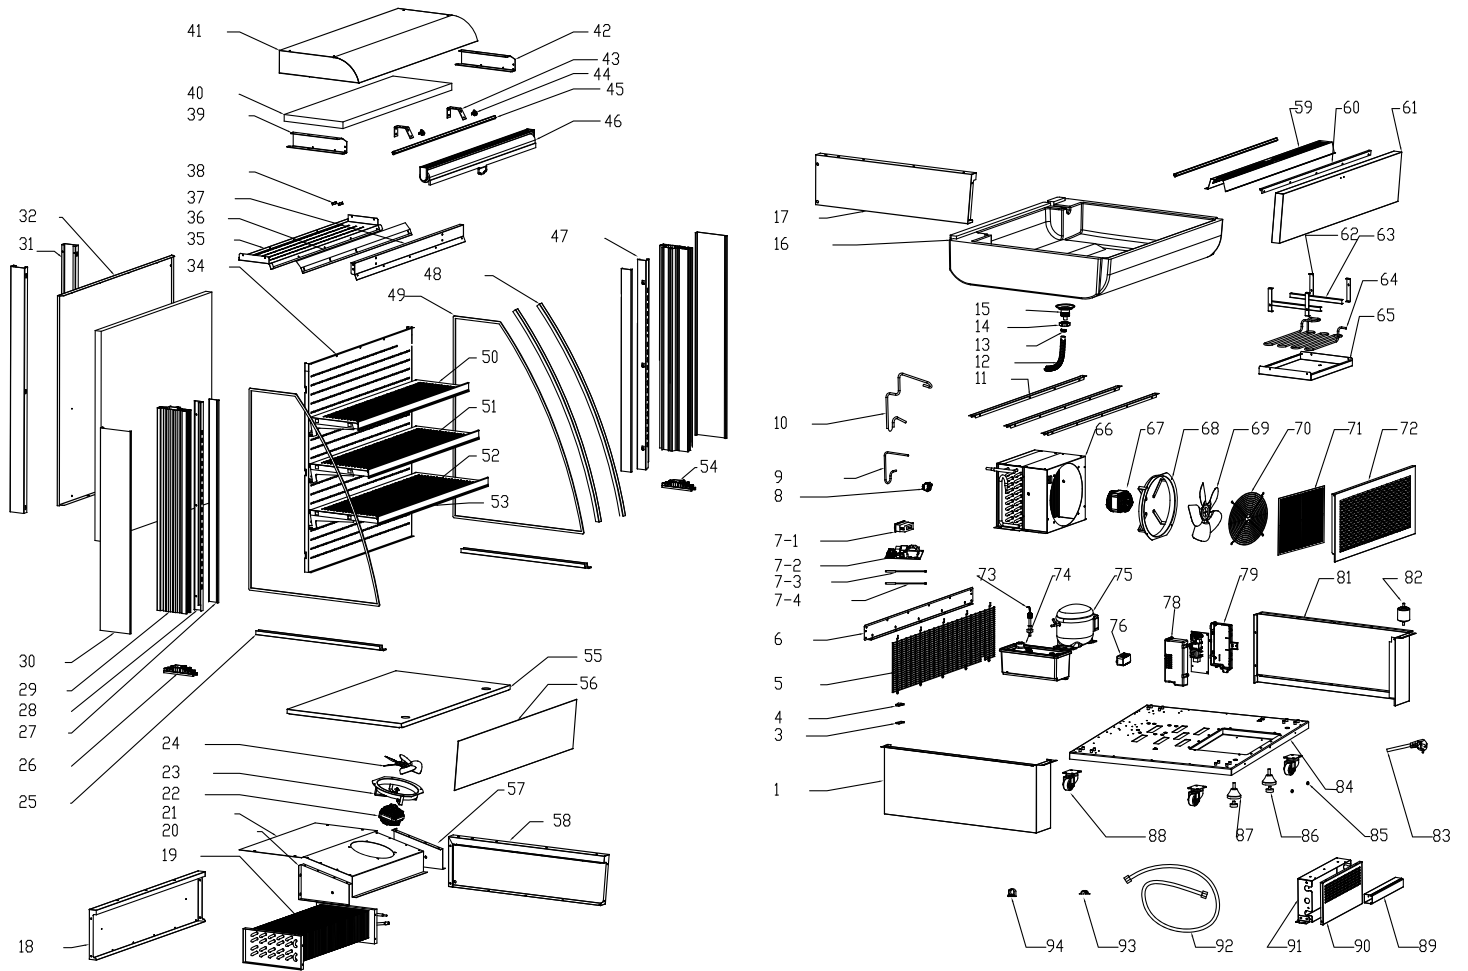

Parts Breakdown



Model RS-CN-0380 40004

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
72324	Left Panel of Base for 40004	1	AD487	Outer Decorated Strip for 40004	30	61239	Bracket of Water Receiver for 40004	62
61246	Wire Clip Holder for 40004	3	AD488	Back Barrier Strip for 40004	31	61237	Platen of Heater for 40004	63
61245	Wire Clamp Cover for 40004	4	AD530	Back Cover of Cabinet for 40004	32	AD548	Heater for 40004	64
AD523	Back Cover of Base for 40004	5	AD531	Ventilated Board for 40004	34	AD549	Tray of Heater for 40004	65
AD524	Crossbar of Base for 40004	6	AD532	Ceiling Board of Cabinet for 40004	35	AD550	Condenser for 40004	66
67648	Temperature Display for 40004	7-1	AD533	Air Deflector for 40004	36	AD518	Condenser Fan Motor for 40004	67
60665	Main Circuit Board for 40004	7-2	AD534	Board Ahead Curtain for 40004	37	79365	Fan Guard for 40004	68
60667	Compressor Protect Probe for 40004	7-3	AD494	Air Deflector Joint for 40004	38	79366	Fan Blade for 40004	69
60666	Temperature Probe for 40004	7-4	AD495	Upper Left Rail for 40004	39	79367	Flat Net Cover for 40004	70
AR485	Switch (Higher Amp) for 40004	8	AD535	Top Foam for 40004	40	79368	Air Filter for 40004	71
AD525	Connection Pipe 1 for 40004	9	AD536	Top Cover for 40004	41	AD551	Ventilated Board of Base for 40004	72
AD526	Connection Pipe 2 for 40004	10	AD498	Upper Right Rail for 40004	42	60589	Water Level Detector for 40004	73
AD527	Barrier Strip for 40004	11	AD499	Night Curtain Bracket for 40004	43	60587	Water Receiver for 40004	74
63459	Hose Fitting (Metal) for 40004	12	AD500	Jump Ring of LED for 40004	44	AD521	Compressor for 40004	75
71517	Pipe Clip for 40004	13	AD537	LED Strip for 40004	45	AD552	LED Transformer for 40004	76
71518	Nut for 40004	14	AD538	Night Curtain for 40004	46	61167	Circuit Board Box for 40004	78
71519	Pipe Joint for 40004	15	AD503	Right Support Pillar of Shelf for 40004	47	60594	Cover of Circuit Board Box for 40004	79
AD528	Evaporator Holder for 40004	16	AD504	Decorated Strip for 40004	48	AD522	Right Panel of Base for 40004	81
71520	Left Board of Cabinet for 40004	17	AD505	Side Glass for 40004	49	70106	Dry Filter for 40004	82
AD529	Back Board of Cabinet for 40004	18	AD539	Upper Shelf for 40004	50	79290	Power Cord for 40004	83
61181	Evaporator for 40004	19	AD540	Middle Shelf for 40004	51	AD553	Base Board for 40004	84
71521	Left Board of Evaporator Cover for 40004	20	AD541	Bottom Shelf for 40004	52	79295	Magnet for 40004	85
61182	Evaporator Cover for 40004	21	AD542	Price Tag Holder for 40004	53	79293	Feet Pad for 40004	86
71522	Evaporator Fan Motor for 40004	22	AD510	Cover of Right Pillar for 40004	54	79294	Feet for 40004	87
60932	Fan Guard for 40004	23	AD543	Bottom Board of Cabinet for 40004	55	60561	Rear Wheels for 40004	88
66351	Fan Blade for 40004	24	AD544	Glass Deflector for 40004	56	60590	PVC Trucking for 40004	89
AD482	Bottom Strip of Side Glass for 40004	25	61180	Right Board of Evaporator Cover for 40004	57	67642	Cover of Terminal Box for 40004	90
AD483	Cover of Left Pillar for 40004	26	AD513	Right Board of Cabinet for 40004	58	67643	Terminal Box for 40004	91
AD484	Inner Decorated Strip for 40004	27	AD545	Air Inlet Cover for 40004	59	60668	Drain Pipe for 40004	92
AD485	Left Support Pillar of Shelf for 40004	28	AD546	Barrier Strip of Glass for 40004	60	60669	Pressing Plate of Dry Filter for 40004	93
AD486	Side Pillar of Cabinet for 40004	29	AD547	Front Board of Cabinet for 40004	61	60670	PPR Tube Strap for 40004	94

Electrical Schematics

Model RS-CN-0230 40438

Model RS-CN-0380 40004

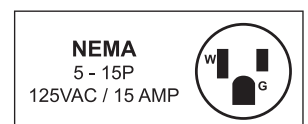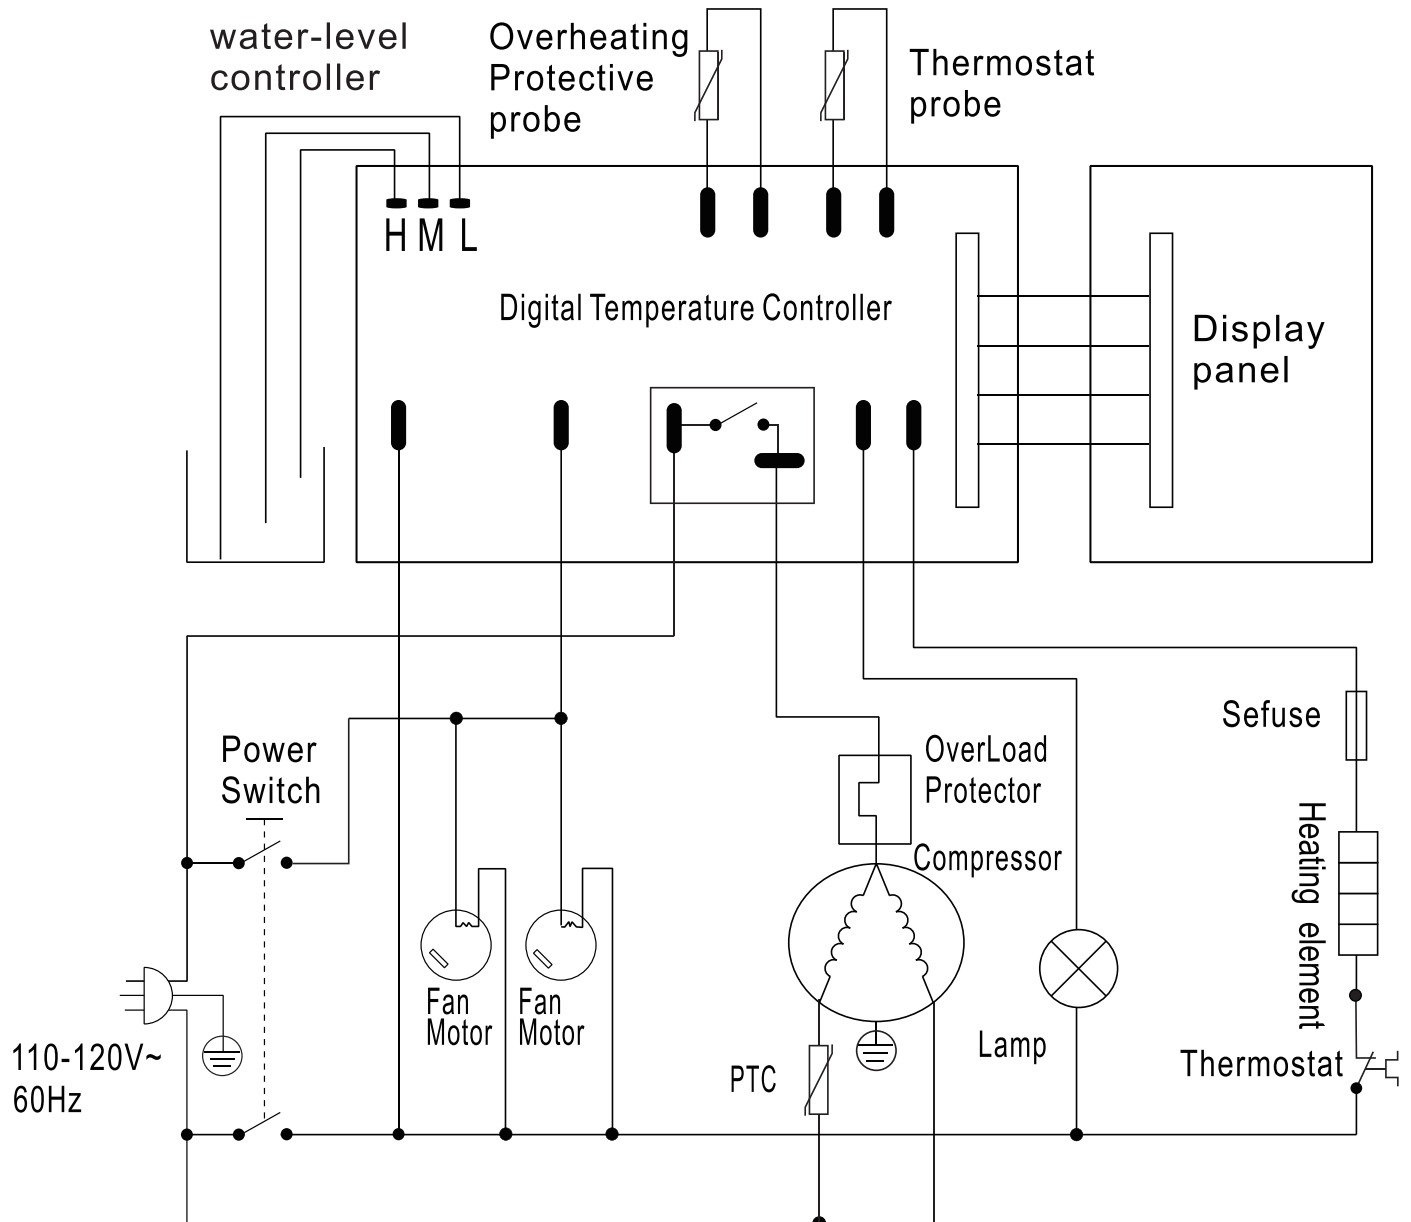

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

<https://omcan.com/warranty-registration/>

For mailing in Canada

Pour postale au Canada

Por correo en Canadá

OMCAN

PRODUCT WARRANTY REGISTRATION

3115 Pepper Mill Court,
Mississauga, Ontario
Canada, L5L 4X5

For mailing in the US

Pour diffusion aux États-Unis

Por correo en los EE.UU.

OMCAN

PRODUCT WARRANTY REGISTRATION

4450 Witmer Industrial Estates, Unit 4,
Niagara Falls, New York
USA, 14305

or email to: service@omcan.com



Purchaser's Information

Name: _____

Address: _____

City: _____ Province or State: _____ Postal or Zip: _____

Country: _____

Dealer from which Purchased: _____

Dealer City: _____ Dealer Province or State: _____

Invoice: _____

Model Name: _____ Model Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____

Would you like to extend the warranty? ☐ Yes ☐ No

Company Name: _____

Telephone: _____

Email Address: _____

Type of Company:

☐ Restaurant ☐ Bakery ☐ Deli

☐ Butcher ☐ Supermarket ☐ Caterer

☐ Institution (*specify*): _____

☐ Other (*specify*): _____

Serial Number: _____

Date of Installation (MM/DD/YYYY): _____

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 6,500 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 6500 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 6,500 productos con origen a nivel mundial.

